



- D - Ignition/Starter Switch
- G88 - Throttle Position (TP) Sensor
- J220 - Motronic Engine Control Module (ECM)
- J338 - Throttle Valve Control Module
- N152 - Ignition Coil
- P - Spark Plug Connectors
- Q - Spark Plugs
- S231 - Fuse 31 in fuse holder
- S232 - Fuse 32 in fuse holder
- T5e - 5-Pin Connector
- T6n - 6-Pin Connector, red, on protective housing for control module, in engine compartment, left
- T8h - 8-Pin Connector, on throttle valve control module
- T80 - Connector, 80 point, on Motronic Engine Control Module (ECM)

V60 - Throttle Position (TP) Actuator

- (124) - ground connection, in engine compartment right wiring harness
- (220) - Ground connection (sensor ground), in engine compartment wiring harness
- (501) - Screw Connection -2- (30), on relay panel
- (A2) - plus connection (15), in instrument panel wiring harness
- (A20) - wire connection (15a), in instrument panel wiring harness
- (D52) - plus connection (15a), in engine compartment wiring harness
- (D102) - Wire connection -2-, in engine compartment wiring harness