



- A - Battery
- B - Starter
- C - Generator (GEN)
- C 1 - Voltage Regulator (VR)
- J 31 - Wiper/Washer Intermittent Relay
- J 207 - Starting Interlock Relay
- J 429 - Control module for central locking
- T 2 - Connector 2 pin, grey, in engine compartment, right
- T 6 - Connector 6 pin, red, connector station electronic box plenum chamber
- T 10 o - Connector 10 pin, brown, connector station electronic box plenum chamber
- T 10 t - Connector 10 pin, orange, connector station A pillar, right

- 1 - Ground strap, battery to body
- 44 - Ground connection, on left A-pillar, lower part
- 81 - Ground connection -1-, in instrument panel wiring harness
- 199 - Ground connection -3-, in instrument panel wiring harness
- A17 - Wire connection (61), in instrument panel wiring harness
- A41 - Plus connection (50), in instrument panel wiring harness