


Wiring Diagram Type 91 E, 91 S

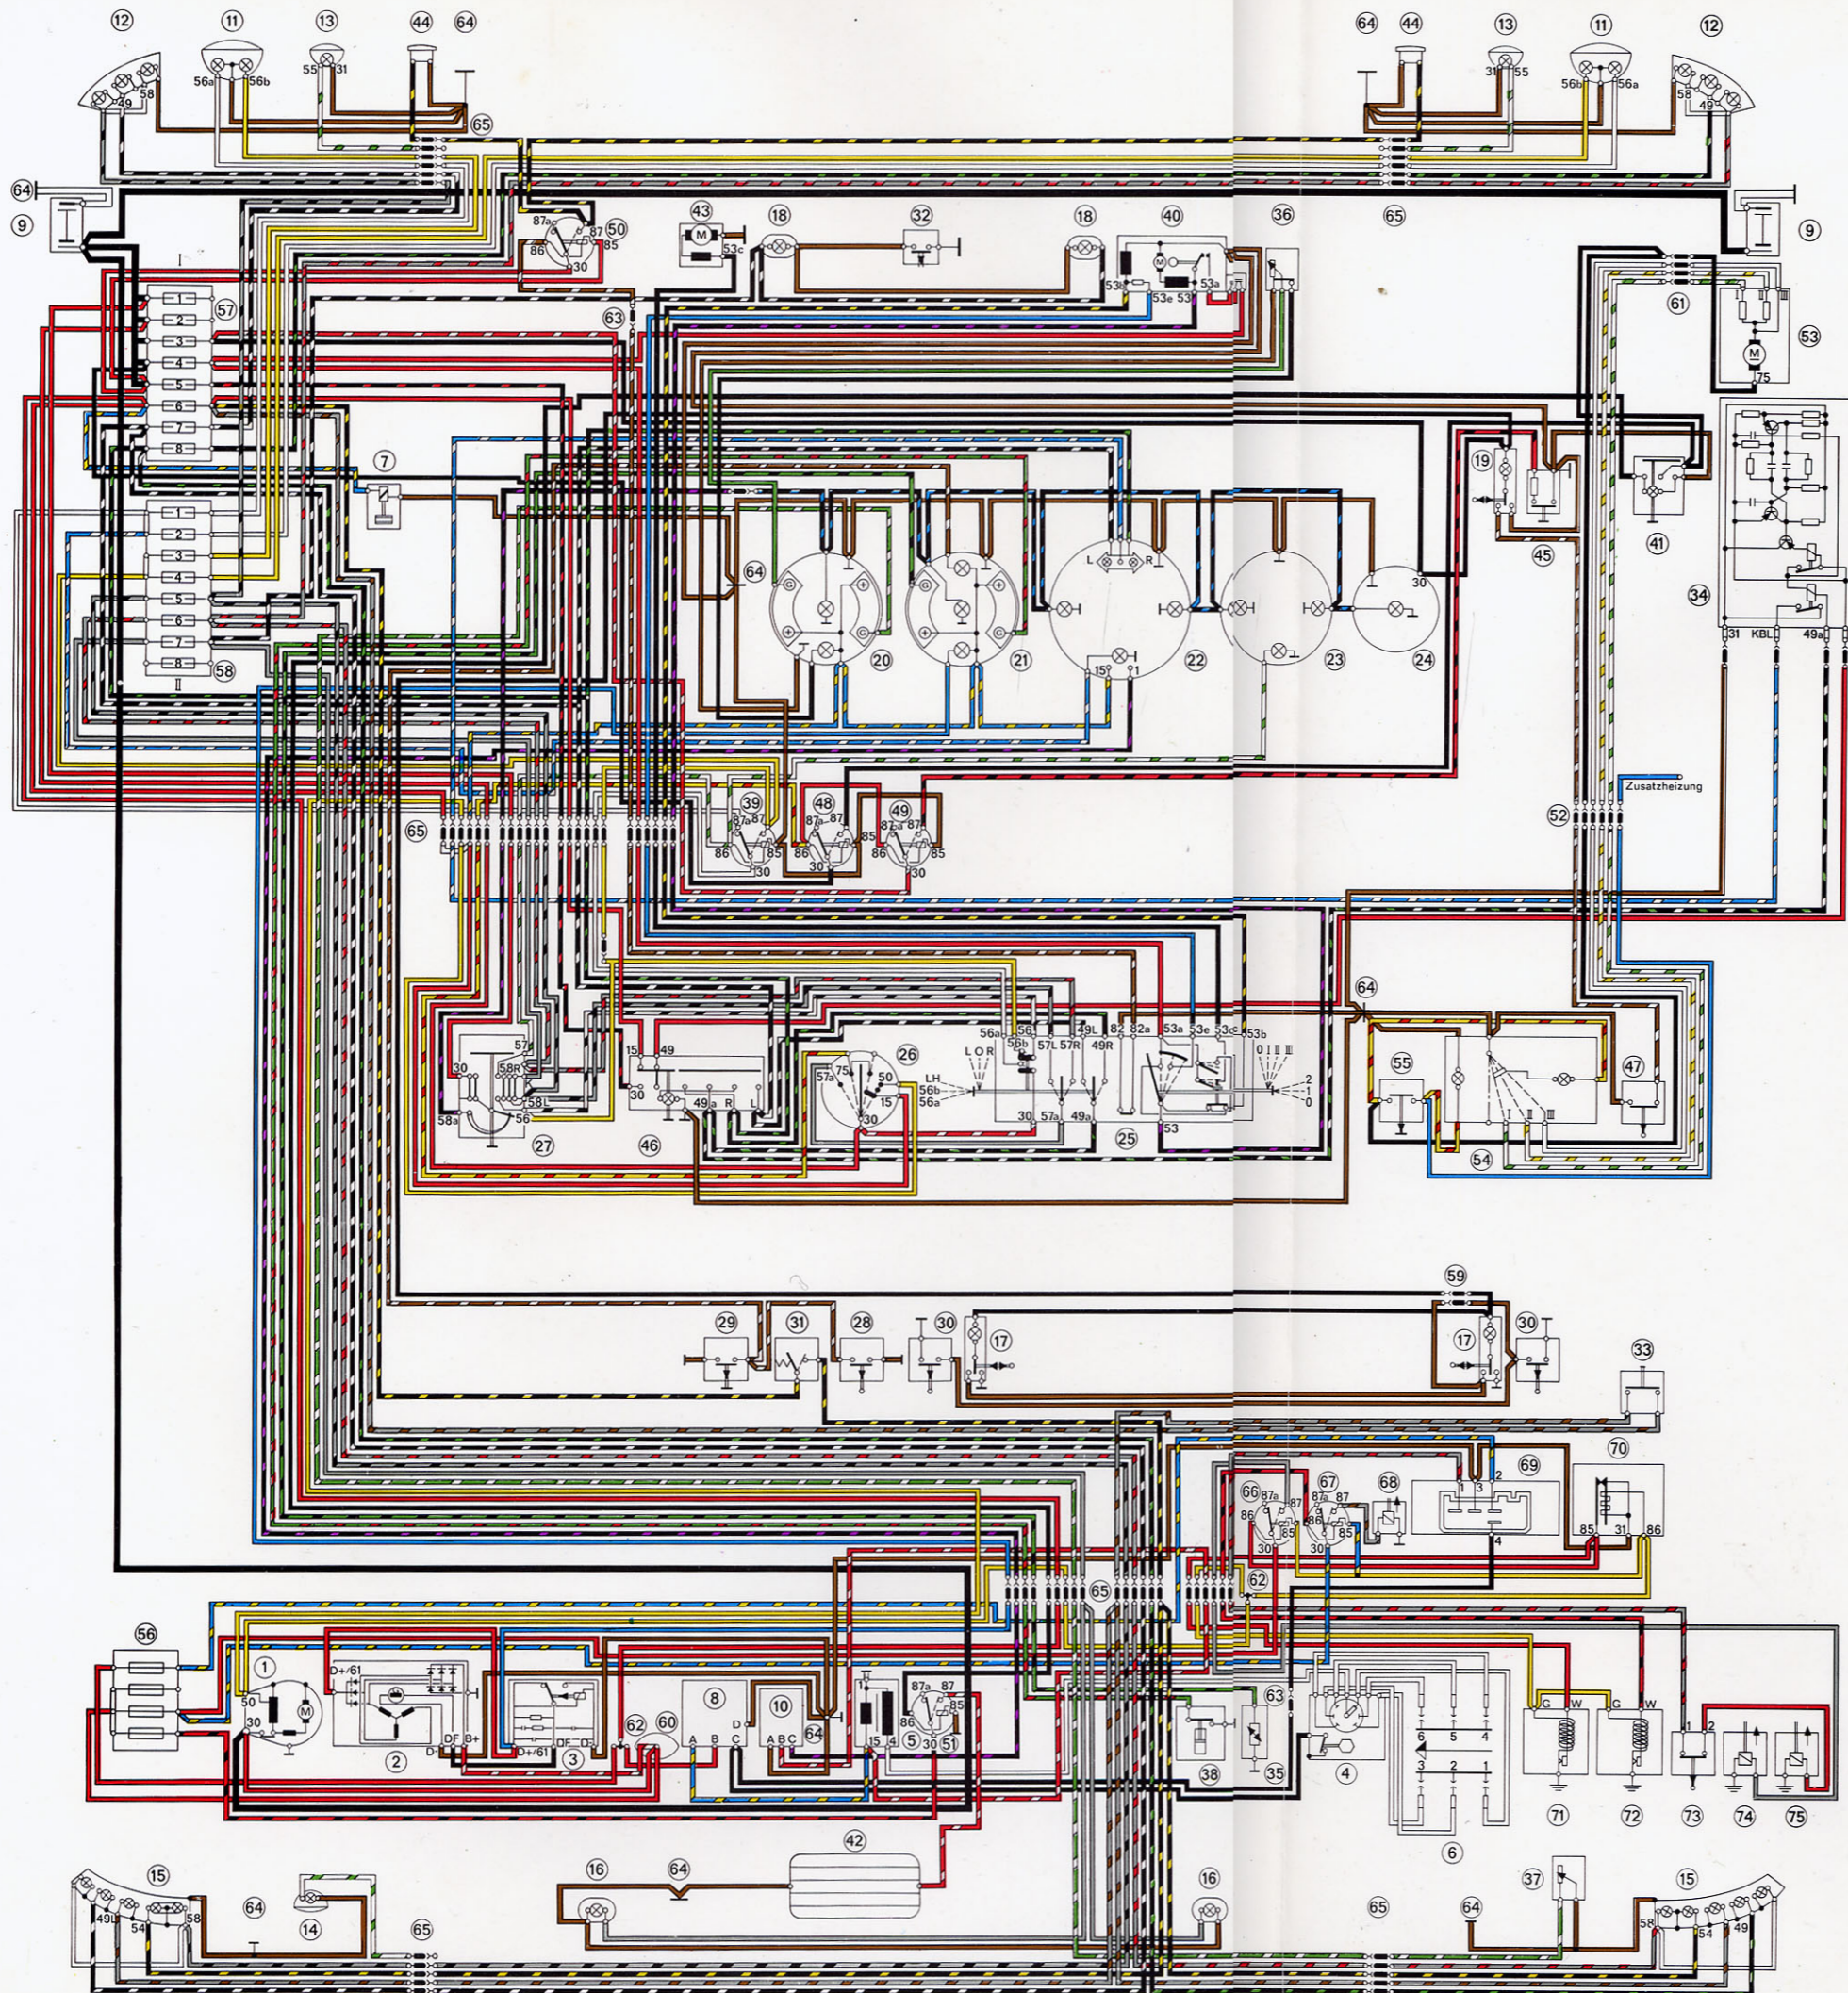

- | | |
|--|---|
| 1 Starter | 36 Fuel gauge sender |
| 2 Generator | 37 Oil level sender |
| 3 Regulator | 38 Diaphragm oil pressure sender |
| 4 Distributor | 39 Headlamp flasher relay switch |
| 5 Ignition coil | 40 Wiper motor |
| 6 Spark plugs | 41 Rear window heating switch |
| 7 Fuel pump | 42 Rear window heating circuit |
| 8 CDS oscillator | 43 Washer pump |
| 9 Battery | 44 Signal horn |
| 10 Switching SCR | 45 Cigarette lighter |
| 11 Headlamps | 46 Emergency blinkers |
| 12 Blinker, parking and side marker lights (side marker USA only) | 47 Glove compartment light switch |
| 13 Fog lamps (special order) | 48 Blower/heater relay switch |
| 14 Fog tail lamp (special order) | 49 Cigarette lighter relay |
| 15 Tail, stop, blinker, backup and side marker lights (side marker USA only) | 50 Signal horn relay |
| 16 License plate lights | 51 Rear window heating relay switch |
| 17 Interior light | 52 Multiple-pole connector (USA only) |
| 18 Luggage compartment light | 53 Blower motor |
| 19 Glove compartment light | 54 Blower and heater switch |
| 20 Small instrument cluster | 55 Gasoline heater switch (special order) |
| 21 Large instrument cluster | 56 Rear fuse box |
| 22 Transistorized tachometer | 57 Fuse box I |
| 23 Speedometer | 58 Fuse box II |
| 24 Electric clock | 59 Two-pole connector |
| 25 Blinker, dim, headlamp flasher, wiper, washer switch with horn button in steering wheel | 60 Terminal bar |
| 26 Ignition/starter switch in steering column lock | 61 Multiple-pole connector |
| 27 Light switch | 62 WECO-connector |
| 28 Brake failure warning switch (USA only) | 63 Single-pole connector |
| 29 Handbrake control lamp | 64 Ground taps |
| 30 Door contact switch | 65 Terminal connectors |
| 31 Stoplight switch | 66 Starting relay switch |
| 32 Luggage compartment light switch | 67 Auxiliary starting relay switch (standard) |
| 33 Backup light switch | 68 Starting solenoid |
| 34 Blinker flasher | 69 RPM transducer |
| 35 Oil temperature sender | 70 Time limit switch |
| | 71 Temperature switch (start) |
| | 72 Temperature switch (start assist) |
| | 73 Microswitch (throttle linkage) |
| | 74 Shut-off solenoid (start) |
| | 75 Shut-off solenoid (stop) |

Fuses:

Fuse box I

- 1 (Electric window regulator)
- 2 (Electric window regulator)
- 3 Cigarette lighter, electric clock
- 4 Windshield wipers and washer
- 5 Hazard warning light
- 6 Stop light, blinkers backup lights
- 7 Blinker, LH
- 8 Blinker, RH

Fuse box II

- 1 High beam, LH
- 2 High beam, RH
- 3 Low beam, LH
- 4 Low beam, RH
- 5 Parking light, LH
- 6 Parking light, RH
- 7 License plate light, trunk light
- 8 (Sunroof)

Rear fuse box

- Shut-off solenoid (start) (Rear window wipers)
- Shut-off solenoid (stop)
- Rear window heating circuit

Earth leads or cables:

- Battery-body
- Transmission-chassis
- Supporting plate-body
- Fuel spout-body
- Steering column control switch-body
- Instruments-body

ATTENTION!

Disconnecting of battery with running engine results in immediate destruction of alternator.