


K143	AC compressor clutch relay
K129	AC condenser blower motor relay
S63	AC refrigerant pressure switch
31	Battery -
30	Battery +
B132	Camshaft position (CMP) sensor
S258	Clutch pedal position (CPP) switch
B54	Crankshaft position (CKP) sensor
X1	Data link connector (DLC)
A35	Engine control module (ECM)
K46	Engine control relay
B24	Engine coolant temperature (ECT) sensor
Y104	Evaporative emission (EVAP) canister purge valve
B127	Exhaust gas pressure sensor
Y28	Exhaust gas recirculation (EGR) solenoid
M12	Fuel pump
K20	Fuel pump relay
F	Fuse
B72	Heated oxygen sensor (HO2S)
K98	Heated windscreen relay
Y99	Idle air control (IAC) valve
A52	Ignition amplifier
T1	Ignition coil
15	Ignition switch - ignition ON
A162	Immobilizer control module
S39	Inertia fuel shut-off (IFS) switch
Y3	Injector
A5	Instrument panel
B25	Intake air temperature (IAT) sensor
B30	Mass air flow (MAF) sensor
S259	Neutral position (NP) switch
W21	Octane coding plug
S231	Power steering pressure (PSP) switch
P7	Tachometer
B147	Throttle position (TP) sensor
S249	Transmission range (TR) switch
B33	Vehicle speed sensor (VSS)



bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

**NOTE:** In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.

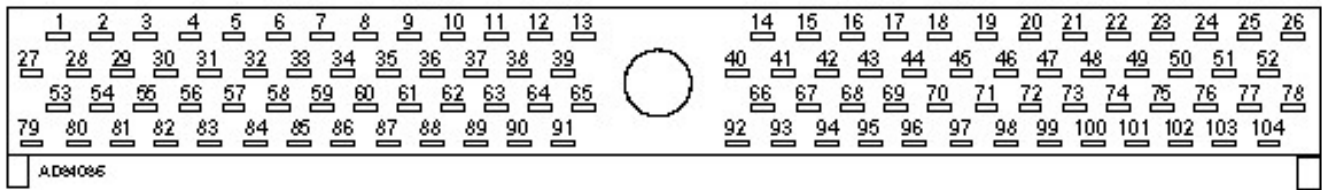