

L4.01 REFERENCE GUIDE

This chapter contains a series of perspective drawings for the car's entire electrical system. In each drawing, it is possible to identify the connectors for each device as well as all the earth connections. By means of the connector pinout, all the connections of each wiring can be identified.

NOTES

This chapter contains descriptions of parts of the information which can be consulted in interactive form through the SD-2 tester system.
All the connectors are viewed from the cable fitting side

Cable colour code

A Light blue
B White
C Orange
G Yellow
H Grey
L Blue
M Brown
N Black
O Light brown
R Red
S Pink
V Green
Z Violet

Example

183347 - Front end connection cables

178346 - Front end connection cables

1A - Dashboard cables to front cables joint

2A - Dashboard cables to front cables joint

3A - Luggage compartment light

4A - Maxi-fuse 40A for fans

5A - Front fuse box, A

6A - Joint pre-set for day-lights (CND version)

Wiring code

Connector for attachment to special systems (es.: F1)


Connector description

Connector shown on another table


Reference drawing on which the wiring harness drawing continues

Connection number to connector or multiplexing

Electrical cable colour code

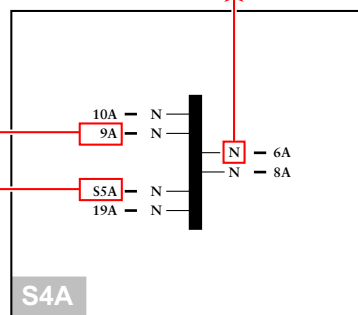


Internal cable multiplexing number

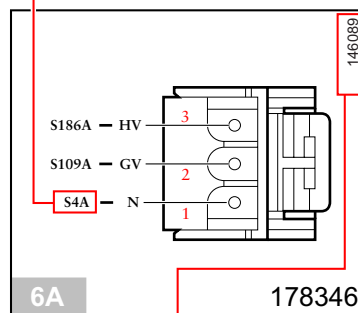

Connector code

Connector specific to the indicated wiring code

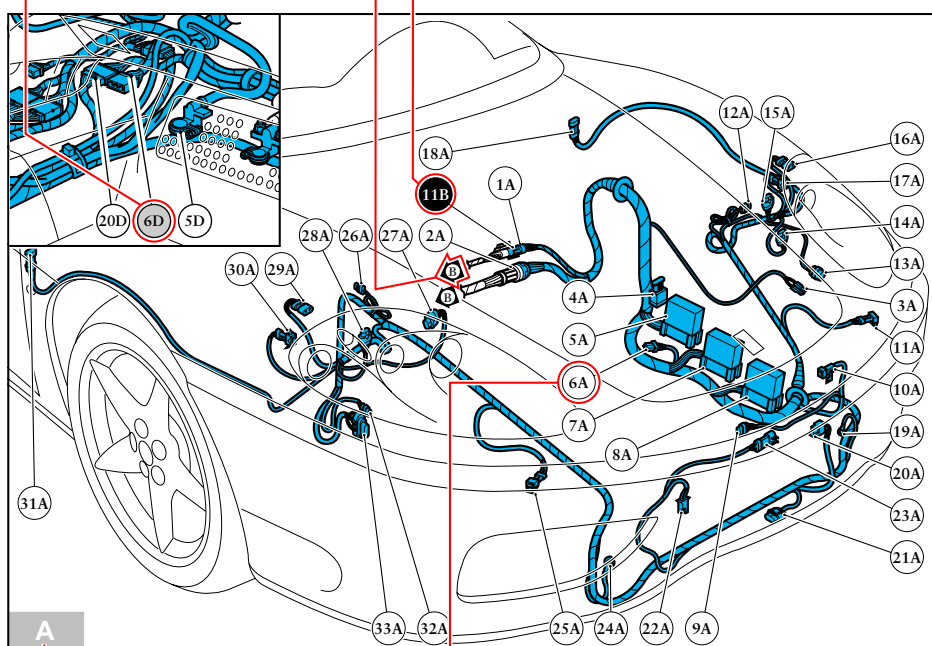

Reference drawing

Connector number

L4.02 Table A - FRONT CABLES AND FUSE BOXES

190047 - Front side connection cable






4A - Maxi-fuse 40A for fans

183347 - Front side connection cable









1A - Dashboard cables to front cables joint

2A - Dashboard cables to front cables joint

3A - Luggage compartment light








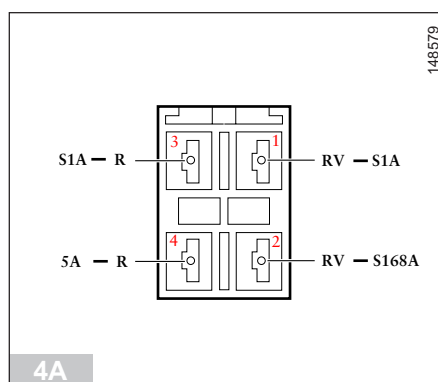
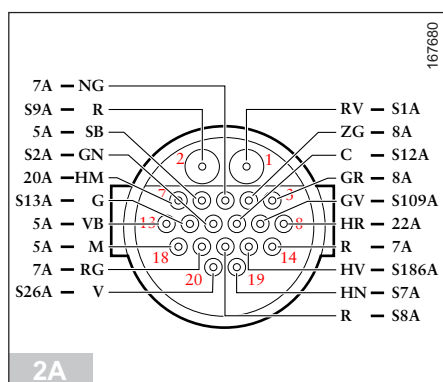
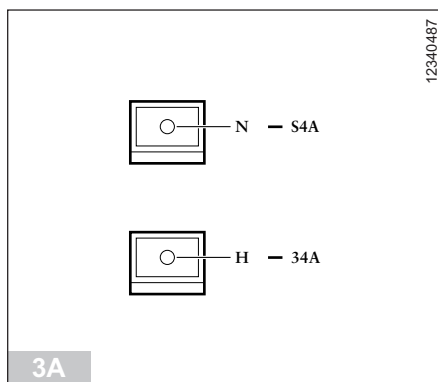
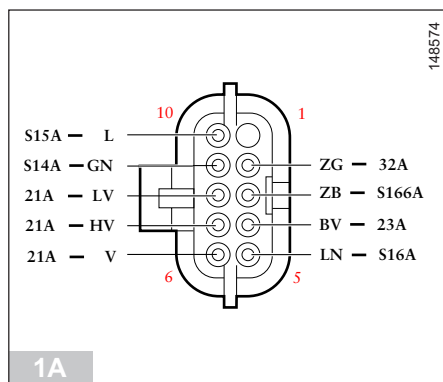
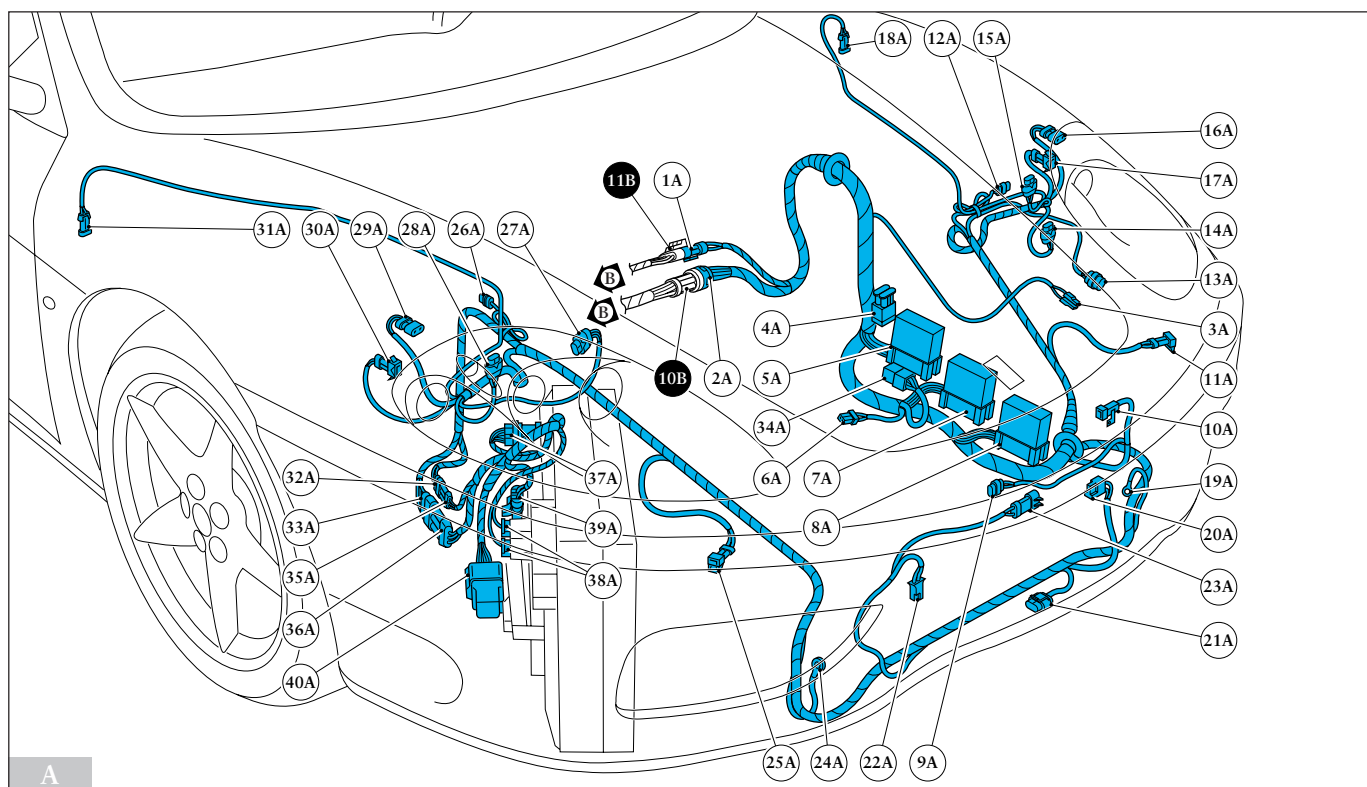


- 5A - Front fuse box, A
- 6A - Joint pre-set for day-lights (CND version)
- 7A - Front fuse box, B
- 8A - Front fuse box, C
- 9A - Button on front lid lock
- 10A - Actuator for lid opening
- 11A - LH horn

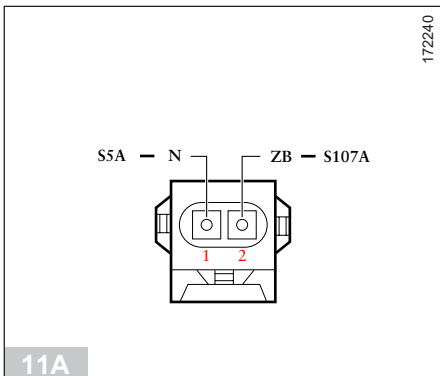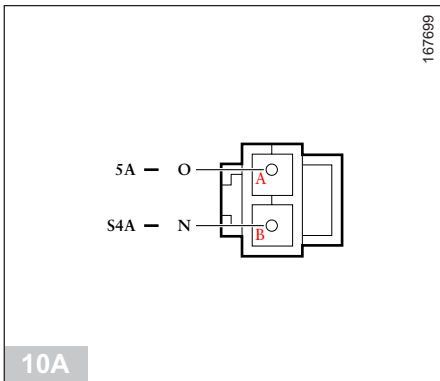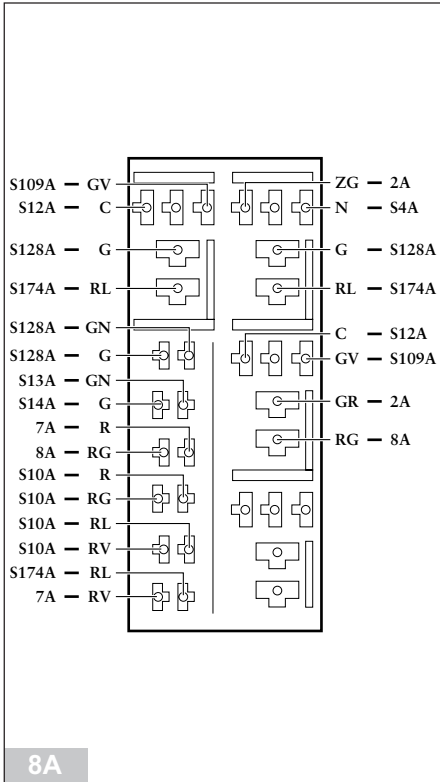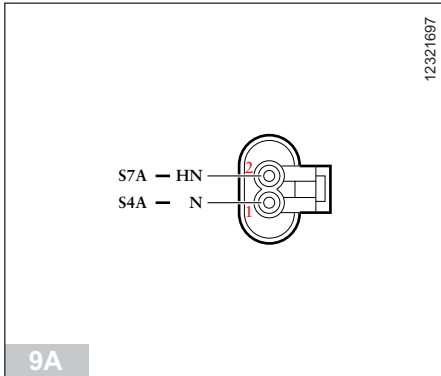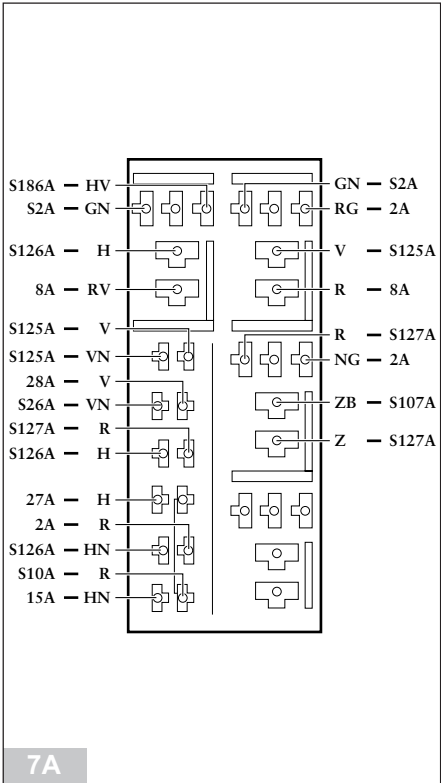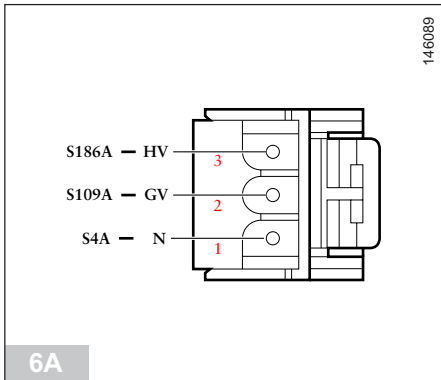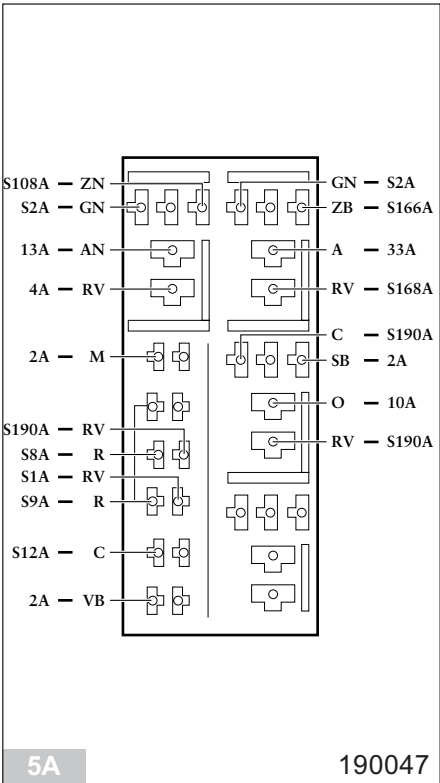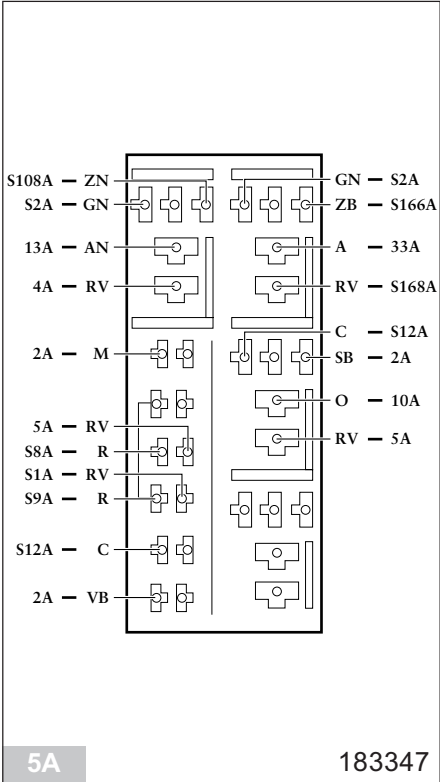













12A - Front LH Side Marker
(USA Version)
13A - Electro-fan for LH radiator
14A - LH high beam
15A - LH low beam
16A - LH dipped light
17A - Front LH direction indicator
18A - LH side direction indicator
bulb

19A - Front LH earth
20A - Headlight-washer electric
pump
21A - Transverse acceleration
sensor
22A - Windscreen-washer electric
pump
23A - Windscreen-washer liquid
level sensor

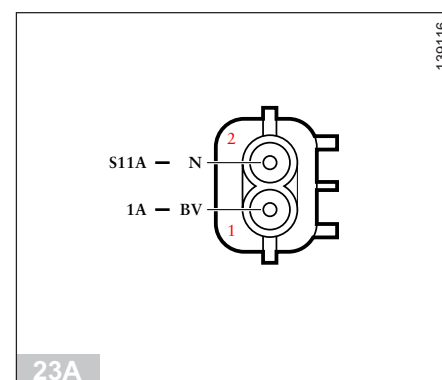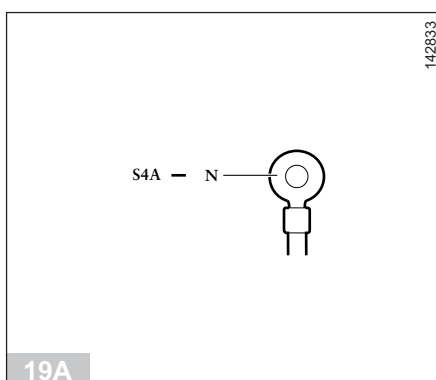
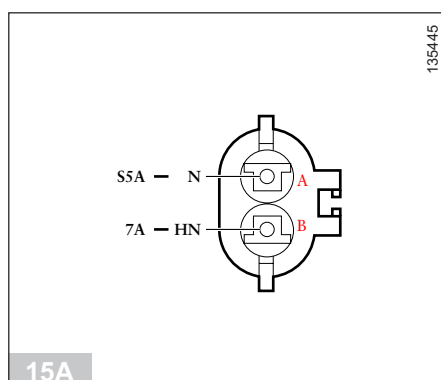
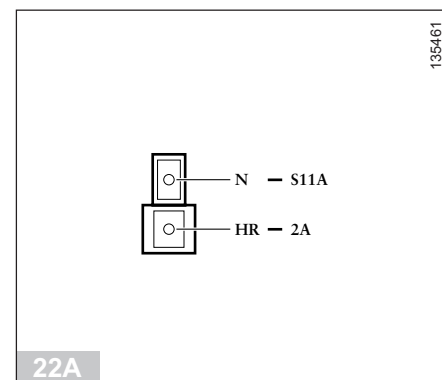
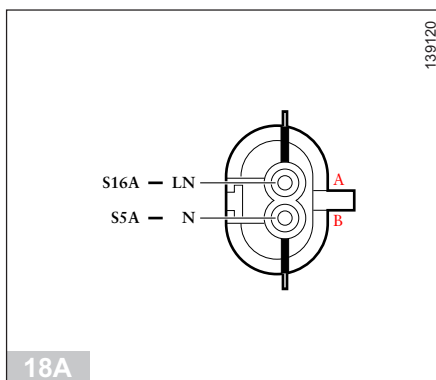
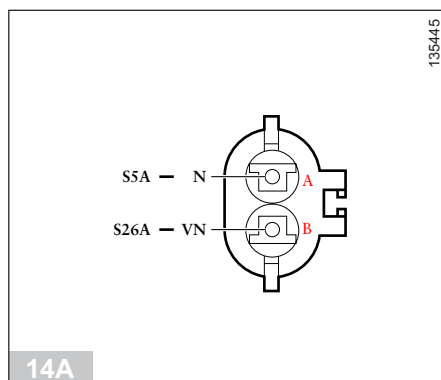
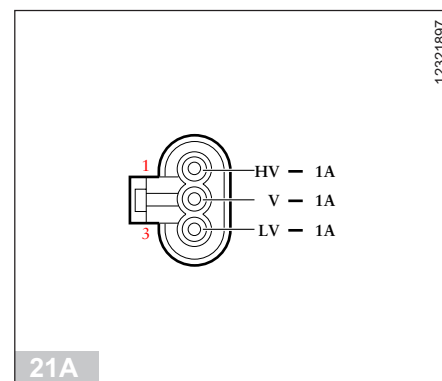
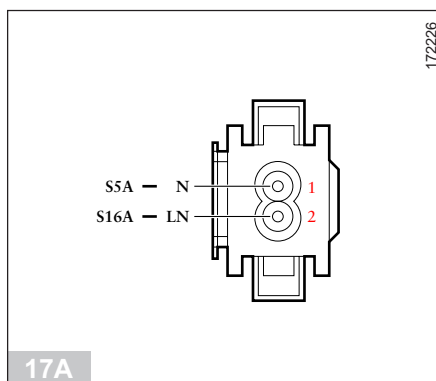
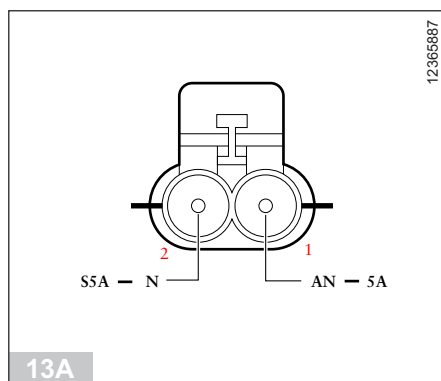
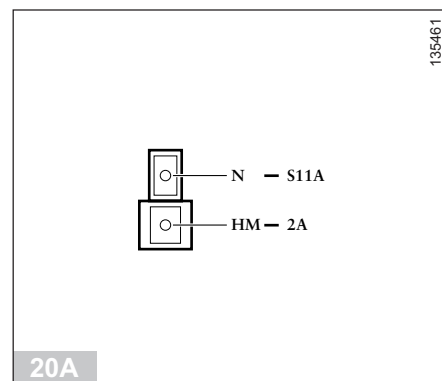
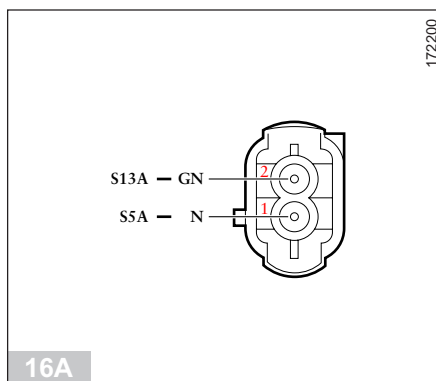
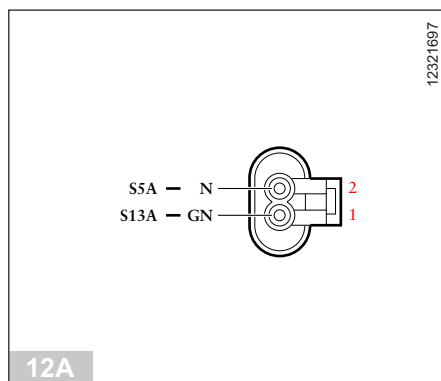



24A - RH front earth
25A - RH horn
26A - RH front Side Marker front
 (USA Version)
27A - RH high beam
28A - RH low beam
29A - RH dipped light
30A - RH front direction indicator light
31A - RH side direction indicator
 light

32A - Front cable to RH electric
 fan radiator cable joint
33A - Front cable to RH electric
 fan radiator cable joint
34A - Luggage compartment light
 timer
179010 - RH electric fan wiring
35A - RH electric fan cable to front
 cable joint

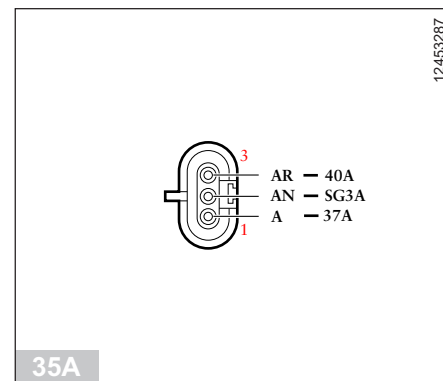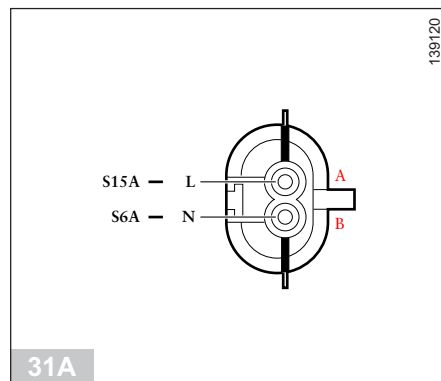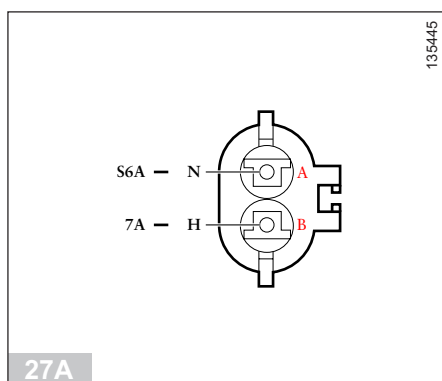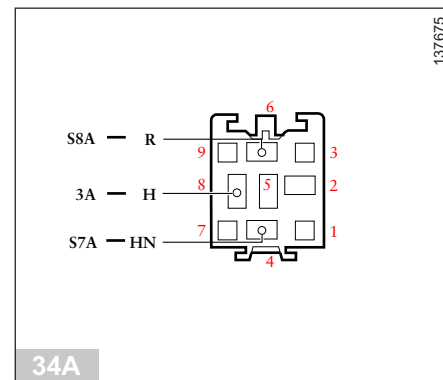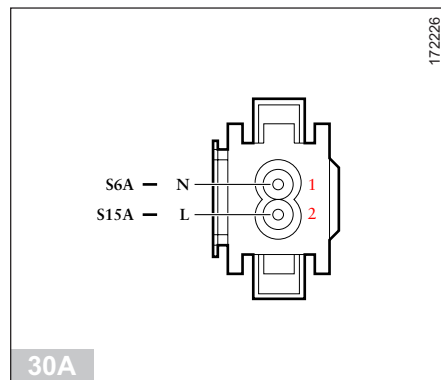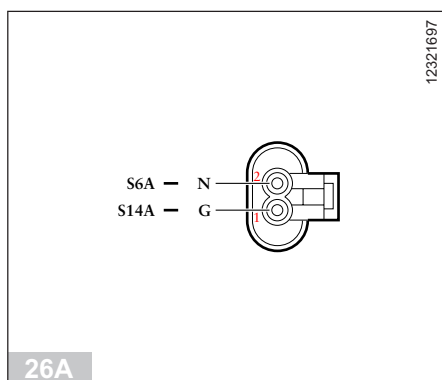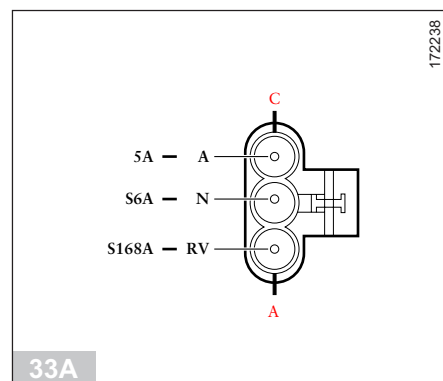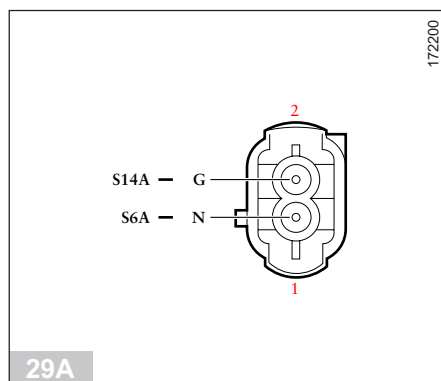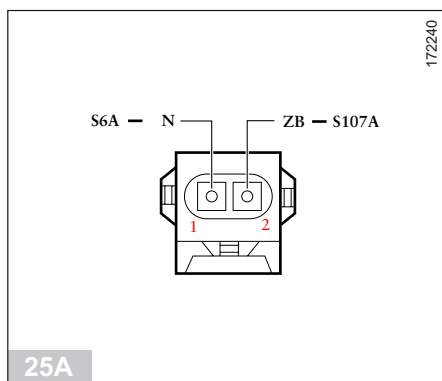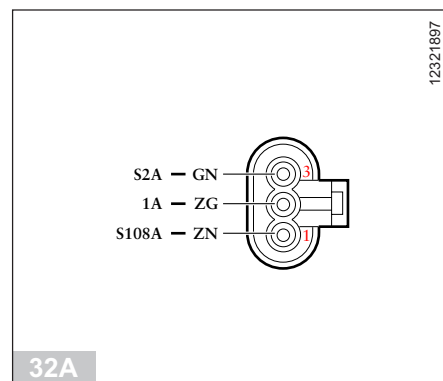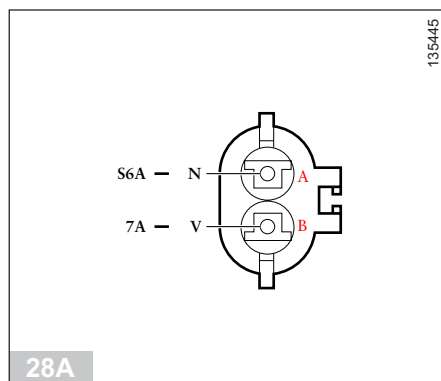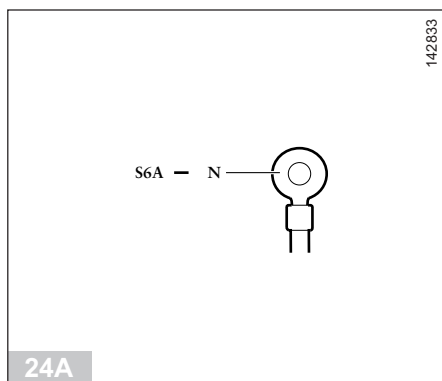


 - 36A** - RH electric fan cable to front cable joint
- 37A** - Thermometric switch
- 38A** - Resistor
- 39A** - Electric fan motor
- 40A** - Remote-control switch

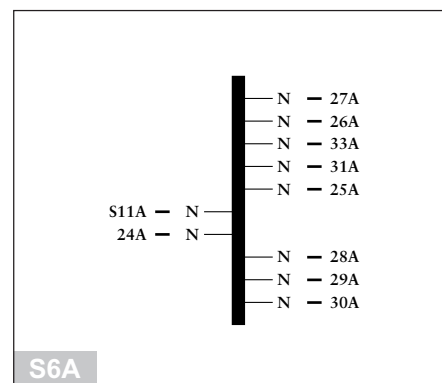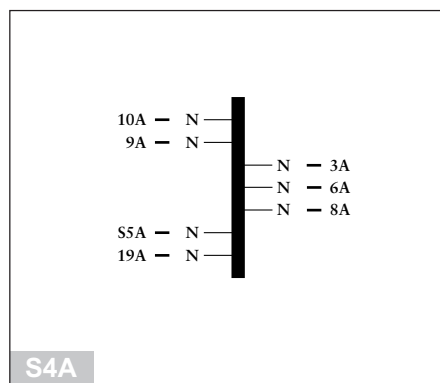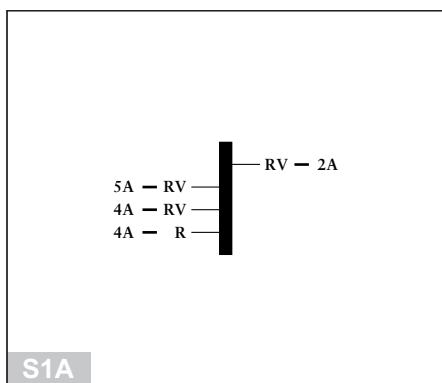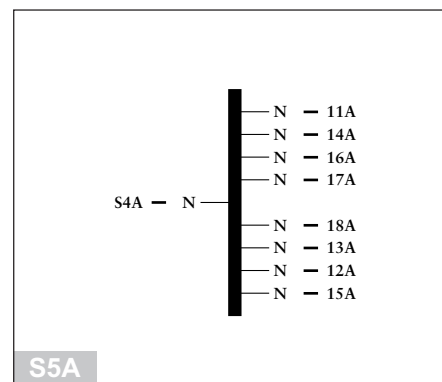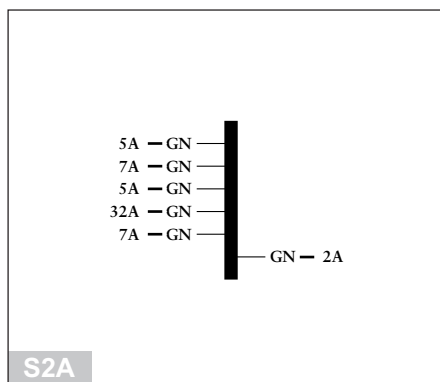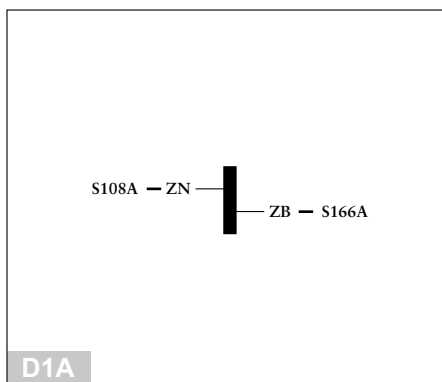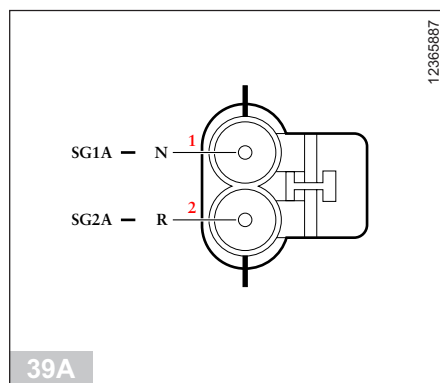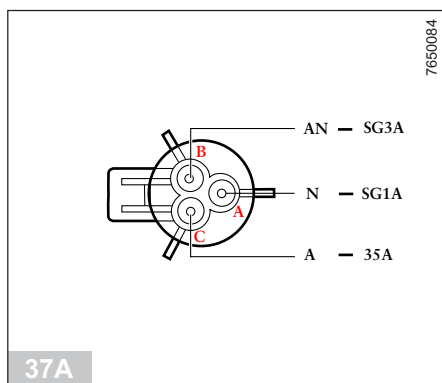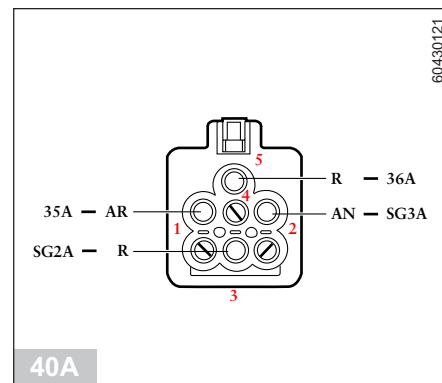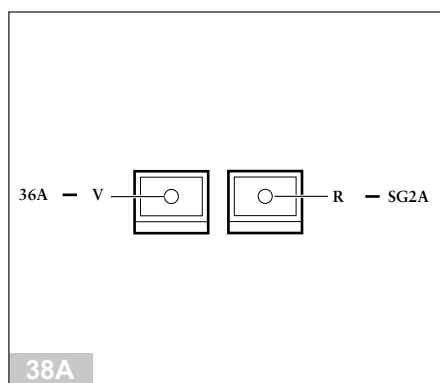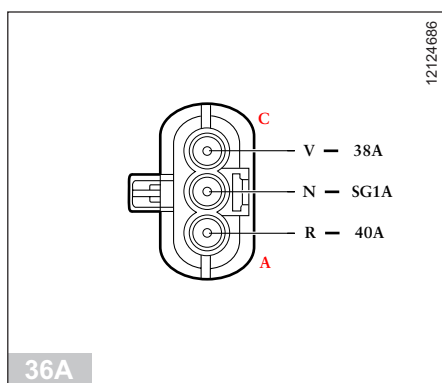




S7A

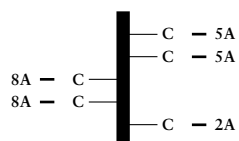


S12A

 
183347



S16A

 


S8A

 


S12A

 
190047




S26A

 


S9A

 


S13A

 


S107A

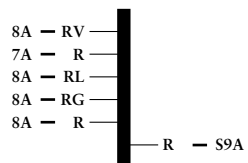


S10A

 


S14A

 


S108A

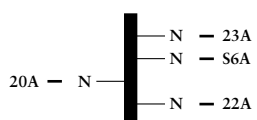

S11A

 

S15A

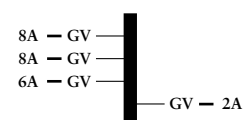

S109A

7A — V —
 7A — VN —
 7A — V —

S125A

5A — RV —
 RV — 4A
 RV — 33A

S168A

40A — R —
 39A — R — R — 38A

SG2A

H — 7A
 H — 7A
 HN — 7A

S126A

8A — RL —
 8A — RL —
 8A — RL —

S174A

35A — AN —
 37A — AN — AN — 40A

SG3A

7A — R —
 7A — Z —
 7A — R —

S127A

7A — HV —
 6A — HV — HV — 2A

S186A

7A — R —
 7A — Z —
 7A — R —

S128A

5A — RV —
 5A — RV —
 5A — C —

S190A

190047

D1A — ZB —
 ZB — 1A
 ZB — 5A

S166A

36A — N —
 N — 37A
 N — 39A

SG1A

L4.03 Table B - FRONT CABLES - ABS/ASR

178310 - ABS/ASR system

connection cables

177243 - Connection cables for
ABS/ASR system (For RHD)







1B - ABS/ASR ECU

2B - Dashboard cables to ABS
cables joint, for CAN line

3B - RH toothed wheel sensor

4B - Earth

5B - ABS cables to dashboard
cable joint






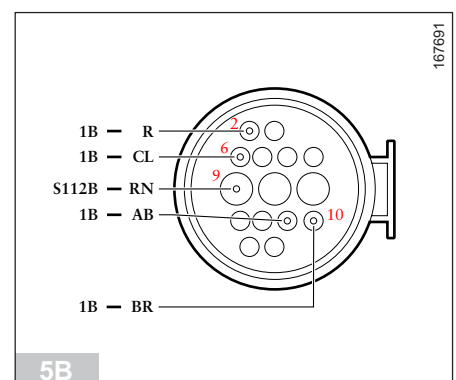
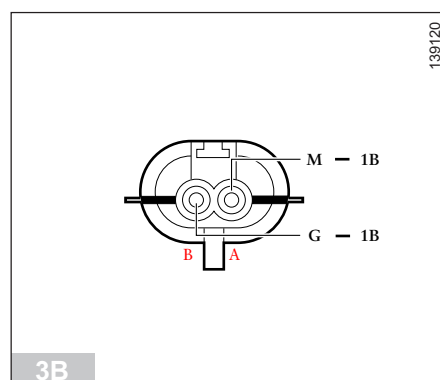
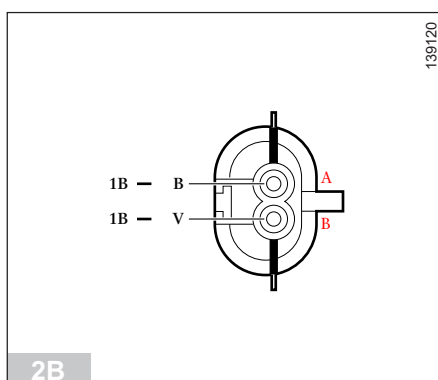
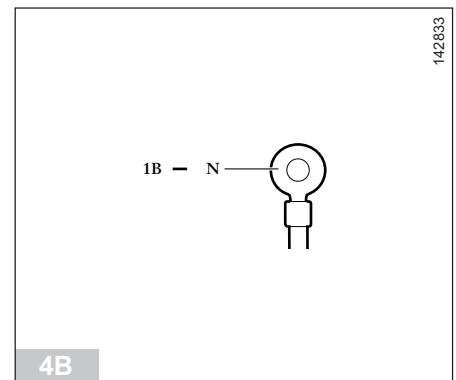
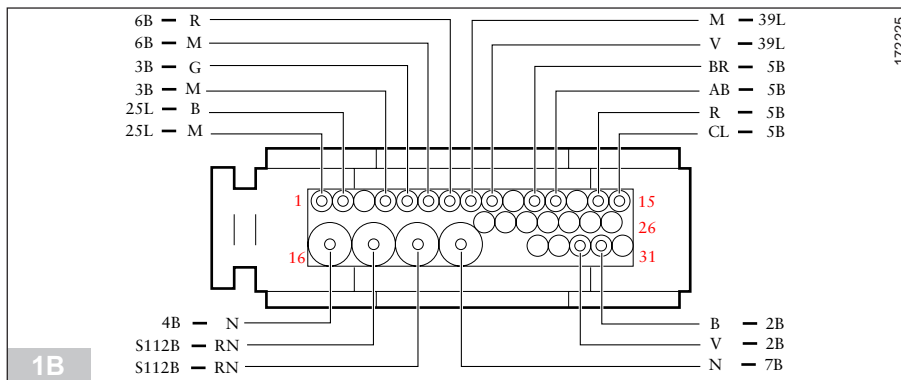
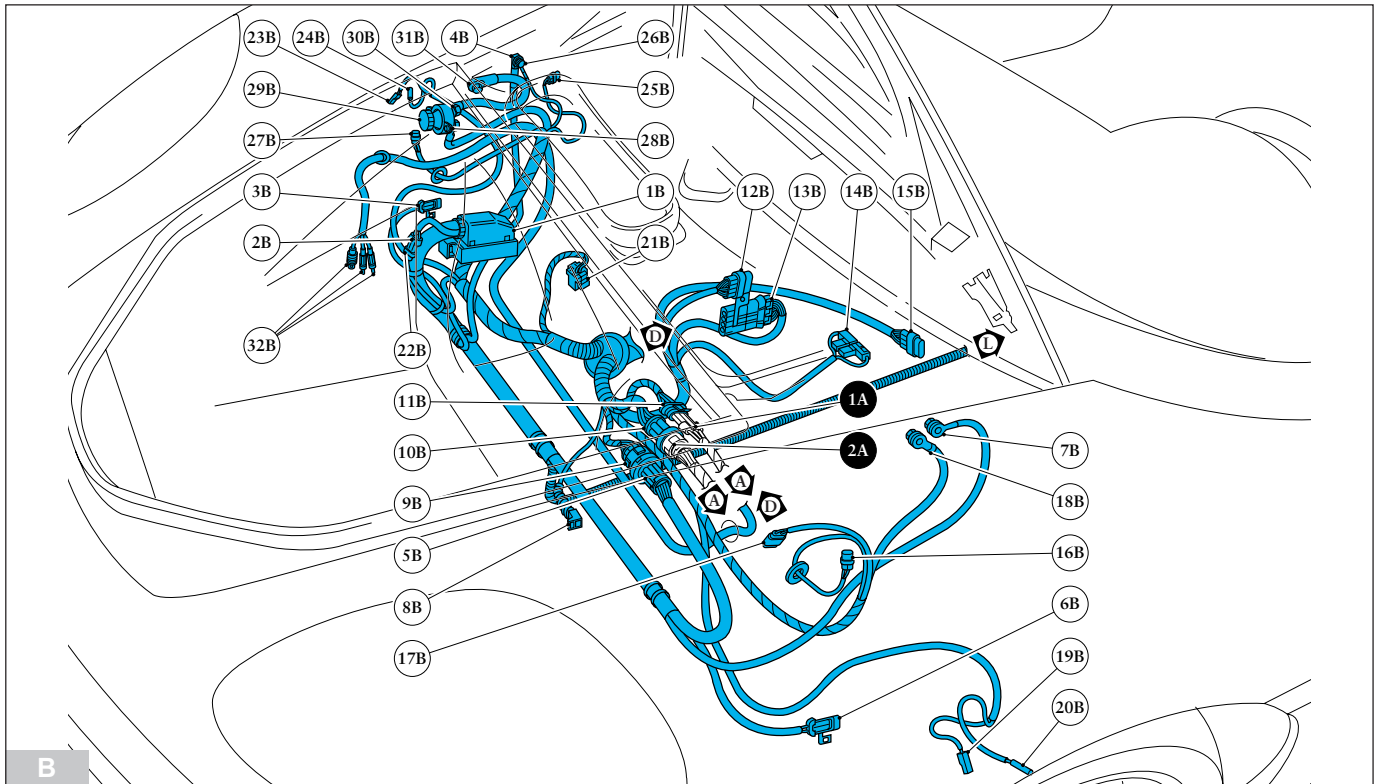


6B - LH toothed wheel sensor
7B - Electronic earth


188897 - Dashboard connection cables
179194 - Dashboard connection cables
189234 - Dashboard connection cables (For RHD)
186522 - Dashboard connection cables (For RHD)

8B - Water re-circulation pump at idling speed
9B - Dashboard cables to ABS cable joint
10B - Dashboard cables to front cables joint
11B - Dashboard cables to front cables joint
12B - Water cock motor
13B - Power socket

14B - Switches for brake fluid level check
15B - Windscreen wiper motor
16B - Solenoid valve for LH front shock absorber

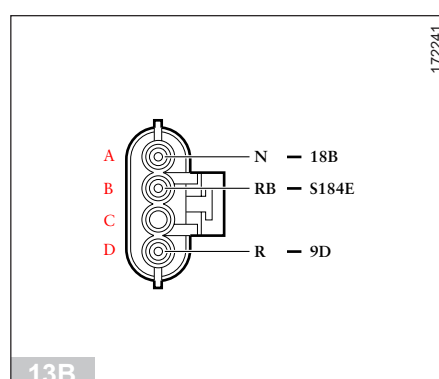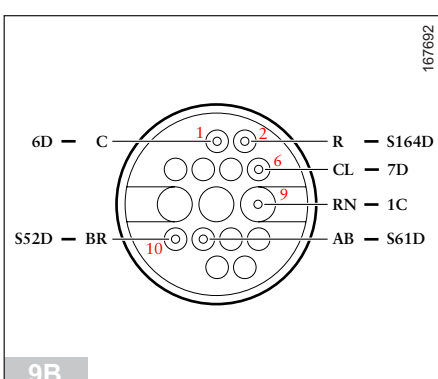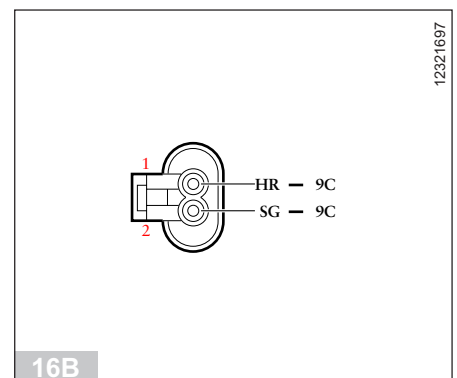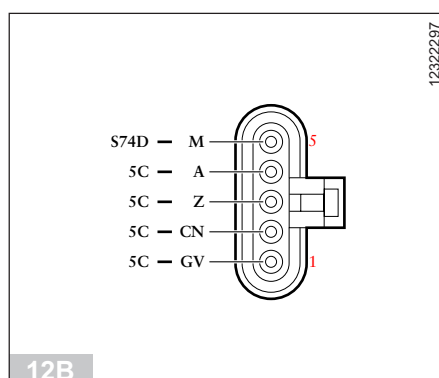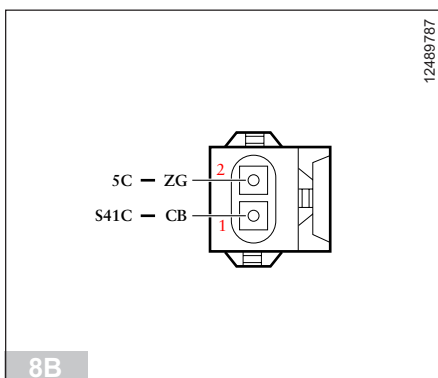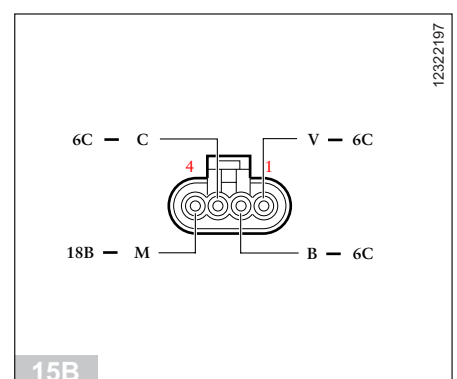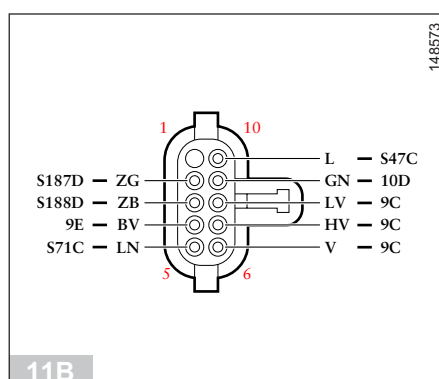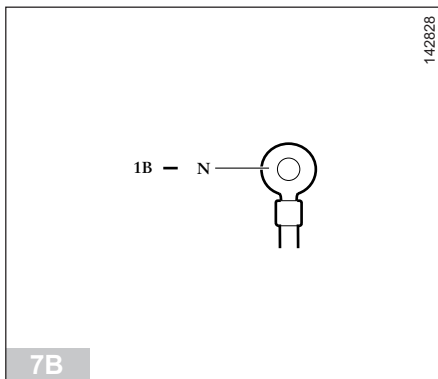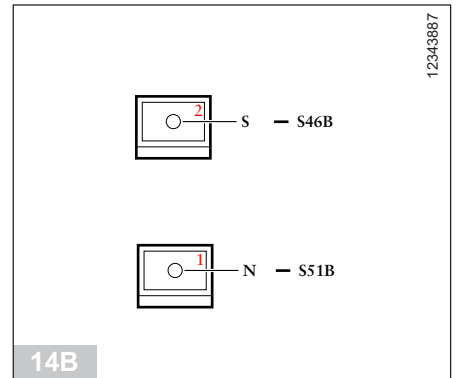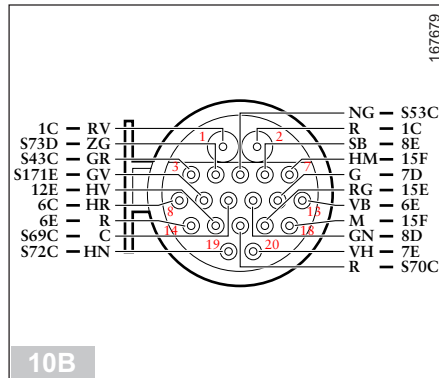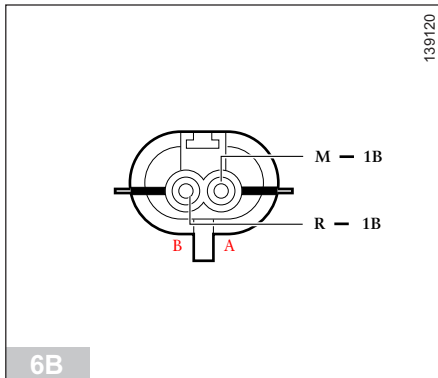

- 17B** - Self-powered siren
- 18B** - Earth
- 19B** - LH brake pad wear sensor
- 20B** - LH brake pad wear sensor
- 21B** - AC fluid level pressure switch
- 22B** - Dashboard cables to ABS cables joint, for CAN line
- 23B** - RH brake pad wear sensor
- 24B** - RH brake pad wear sensor
- 25B** - Vertical acceleration sensor (front axle)
- 26B** - Power earth
- 27B** - Solenoid valve for RH front shock absorber

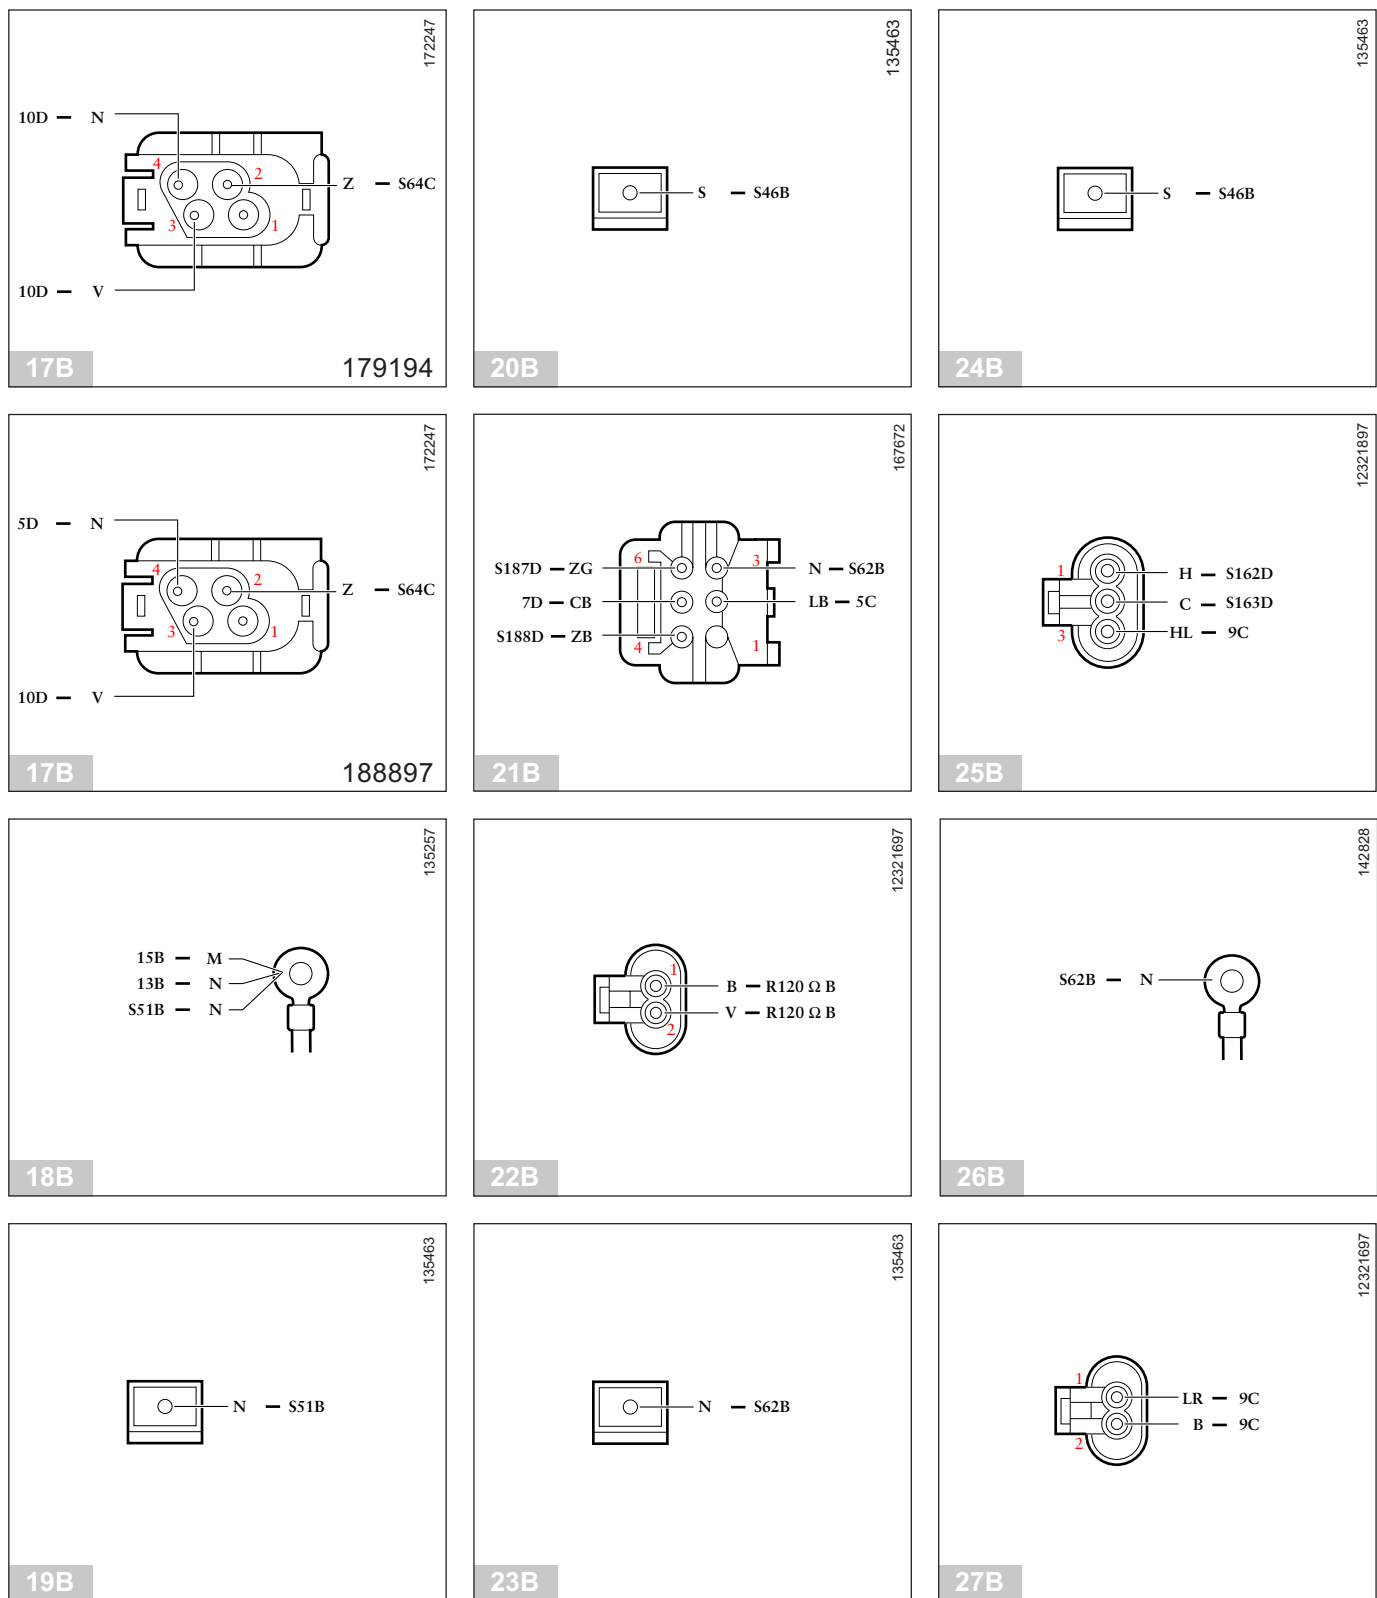

28B - Connection from battery to battery master switch

139607 - Battery master switch

29B - Battery master switch

172982 - Battery master switch-earth connection cable

30B - Connection from battery master switch to earth

31B - Connection from earth to battery master switch











181321 - Stereo system/CD loader connection cable

32B - RCA connectors

177911 - Dashboard cable (+CD)

180206 - Dashboard cable (+CD)

33B - RCA connectors

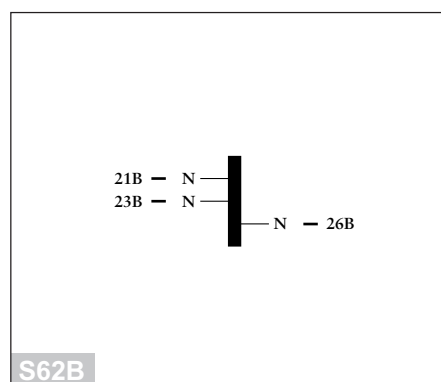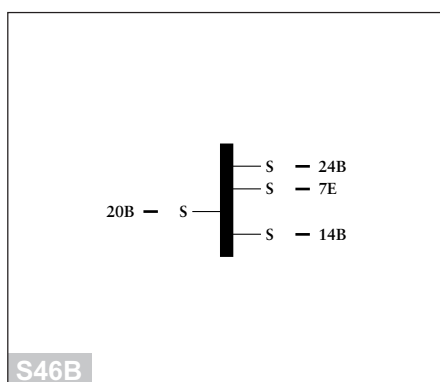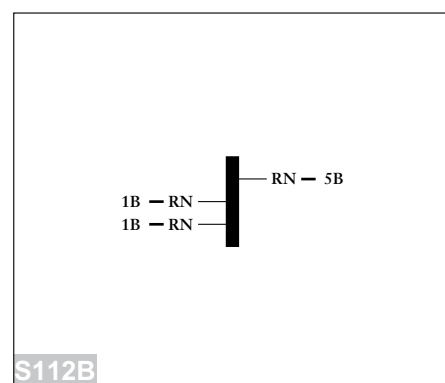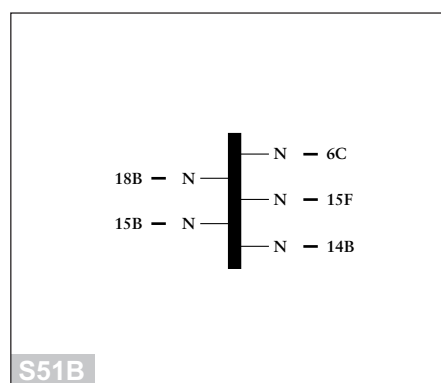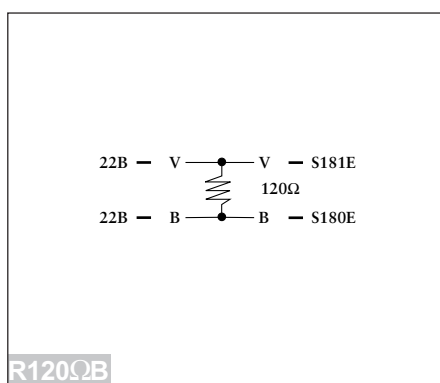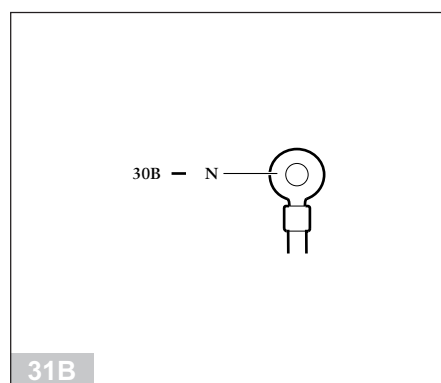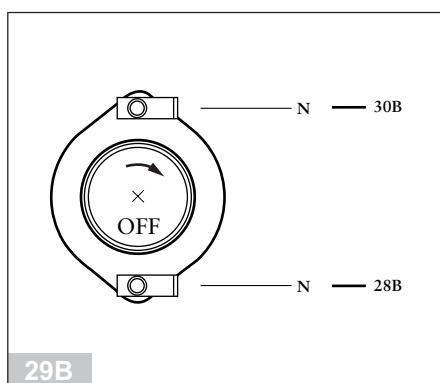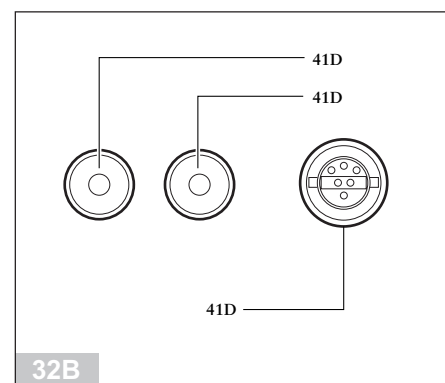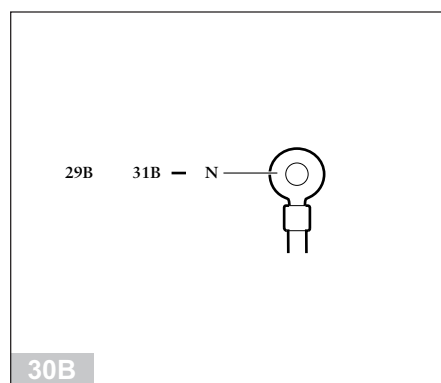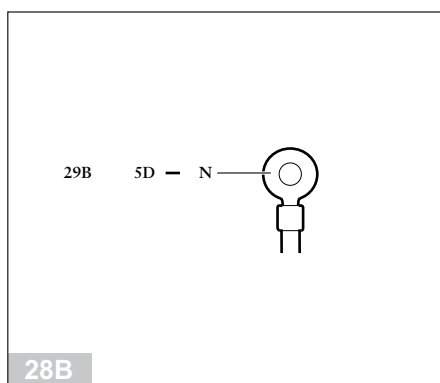

L4.04 Table C - DASHBOARD, RH SIDE FUSE BOXES

188897 - Dashboard connection cables

179194 - Dashboard connection cables

189234 - Dashboard connection cables (For RHD)

186522 - Dashboard connection cables (For RHD)







1C - Power fuse box

2C - 12V Battery (terminal +)








3C - Dashboard cables to Airbag CABLES JOINT

4C - Power supply to air conditioning system joint

5C - Connection joint to air conditioning system

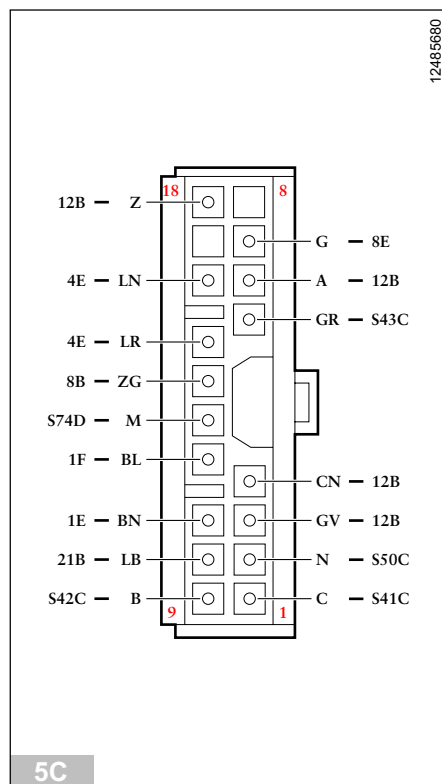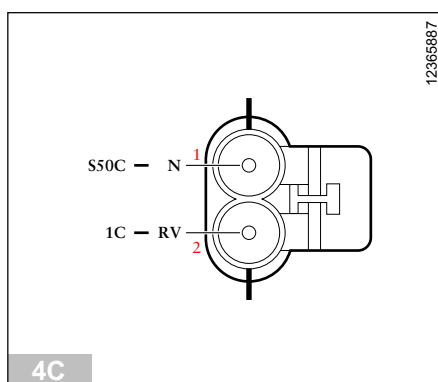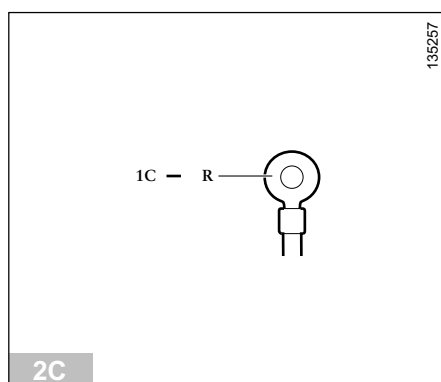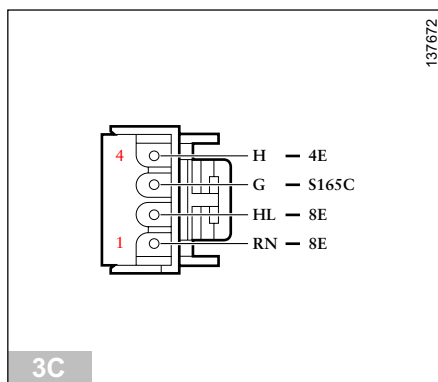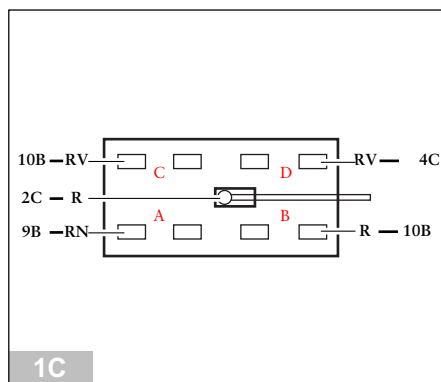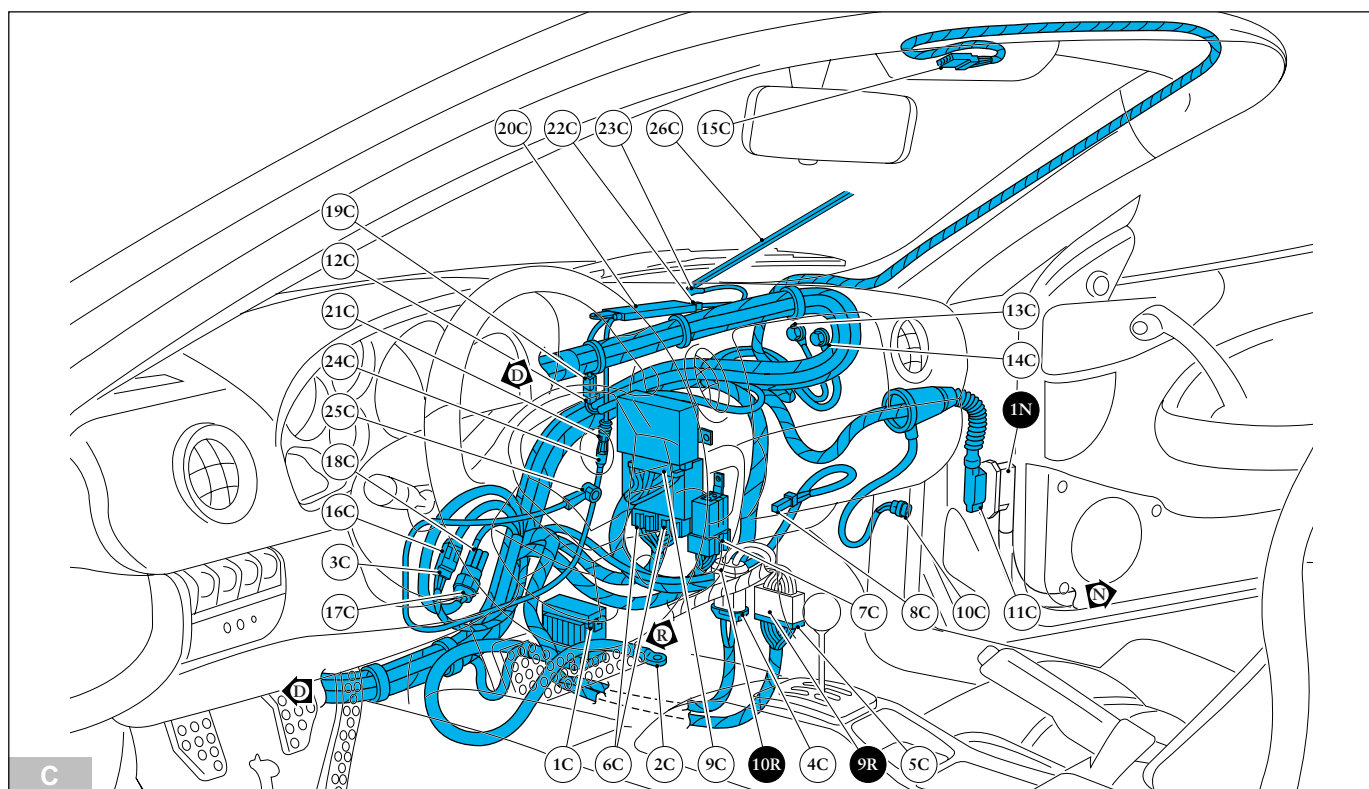

- 6C** - Windscreen-wiper timer
- 7C** - Hazard light and direction light blinker
- 8C** - Glove compartment light bulb
- 9C** - Car set-up ECU
- 10C** - RH door striker plate micro-switch
- 11C** - Dashboard cables to RH door cables joint

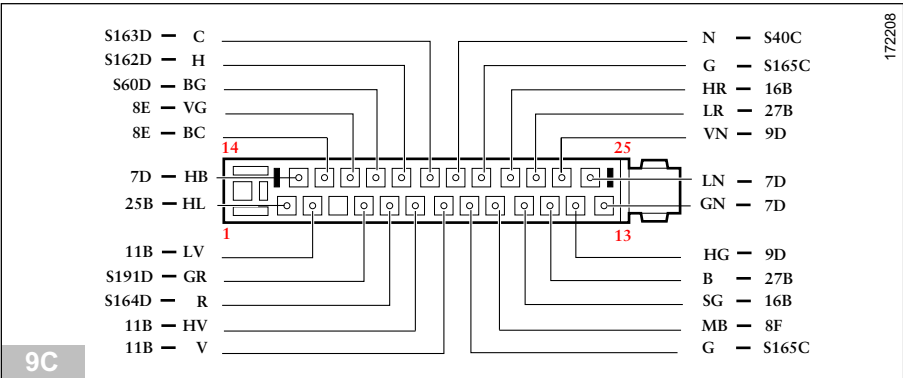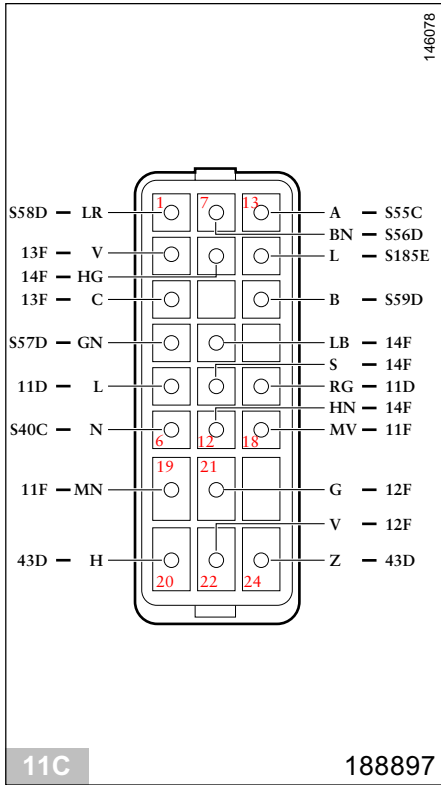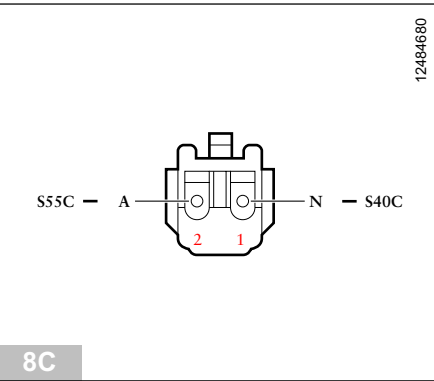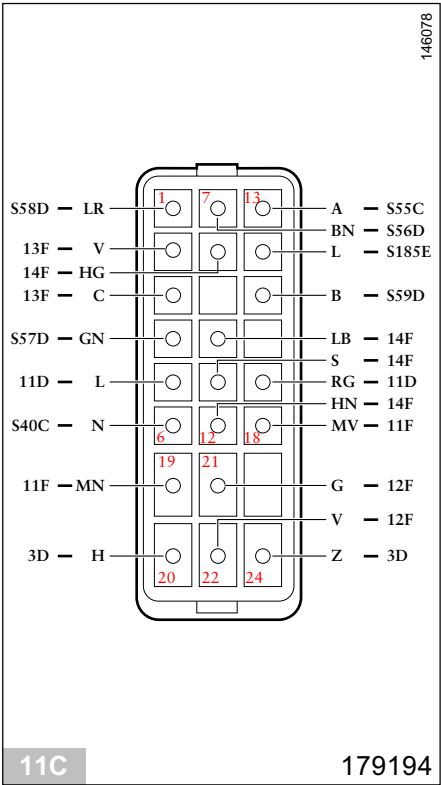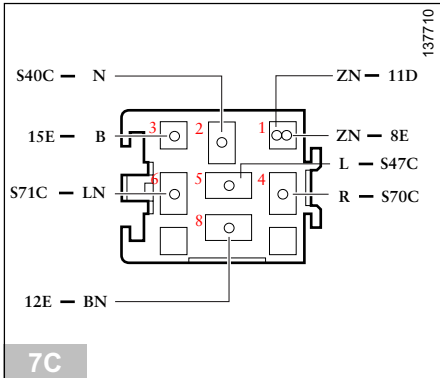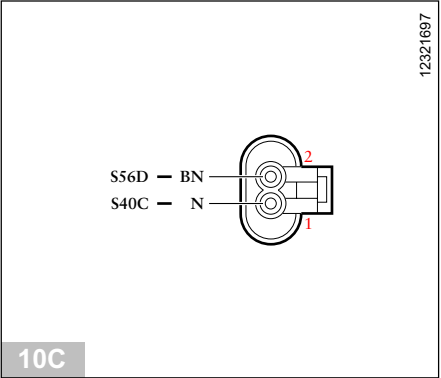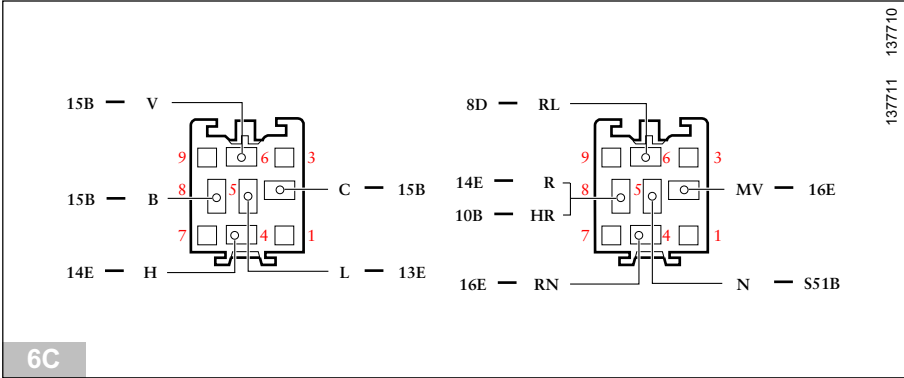

12C - Power supply joint for radio
aerial preamplifier
13C - Electronic earth
14C - Earth
15C - Car interior front dome lights

**164825 - Connection cable for
Airbag system**

16C - Airbag cables TO
DASHBOARD CABLES joint
17C - Airbag diagnosis cable
JOINT

18C - Diagnosis socket to Airbag
cables JOINT

176238 - Preamplifier for radio aerial









19C - Power supply socket joint for
preamplifier aerial
20C - Preamplifier aerial
21C - Preamplifier aerial to radio
aerial wire joint

176239 - Aerial wire to windscreen

22C - Windscreen aerial wire to
preamplifier joint
23C - Aerial wire to windscreen
aerial joint

176237 - Radio aerial cable

24C - Radio aerial wire to
preamplifier joint
25C - Aerial wire to radio joint
26C - Radio aerial on windscreen

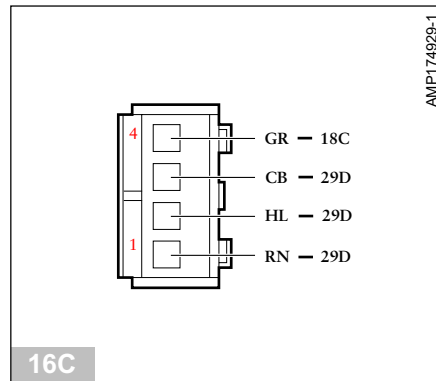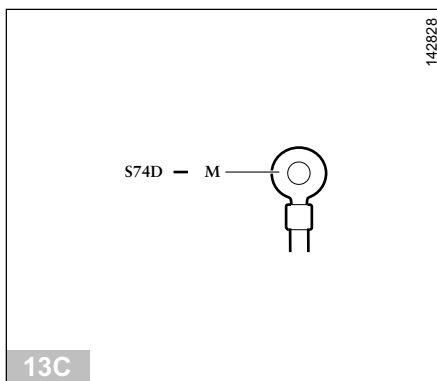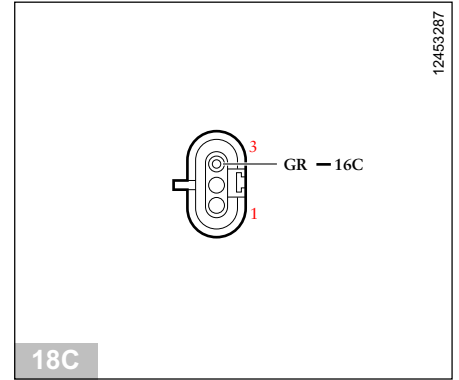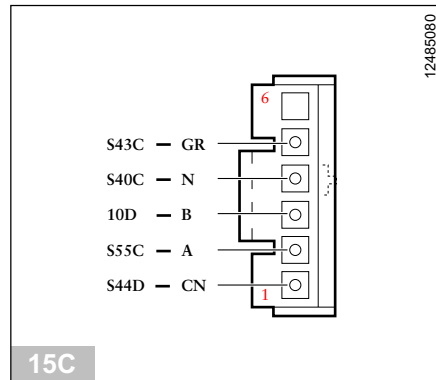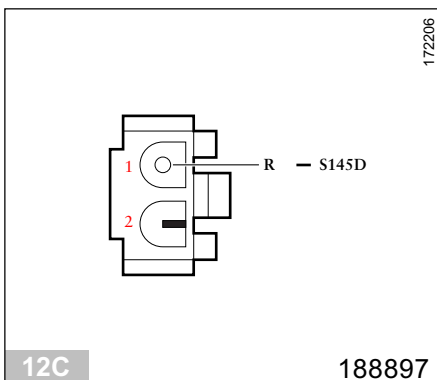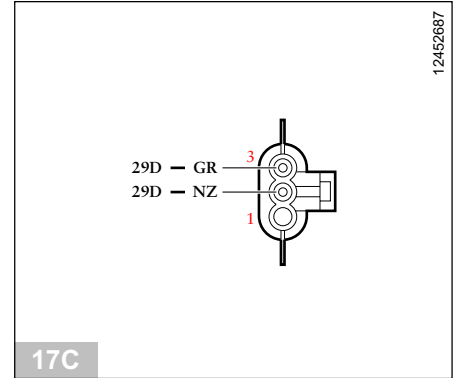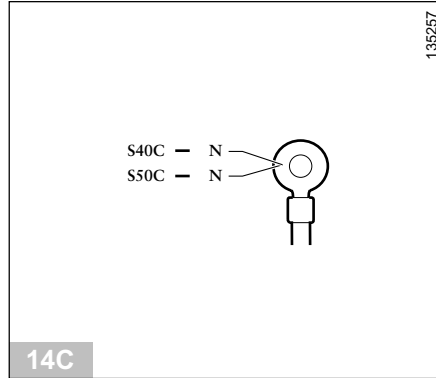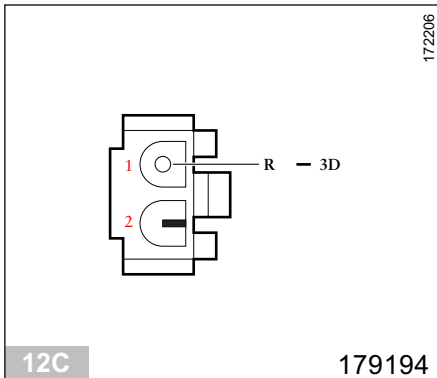

11C - N
10C - N
3D - N
N - 8C
15C - N
14C - N
N - 7C
9C - N

S40C

14C - N
N - 4C
N - 5C

S50C

10D - R
10B - R
R - 7C

S70C

8B - CB
10D - CB
C - 5C

S41C

13E - NG
NG - 10D
NG - 10B

S53C

11D - LN
11B - LN
10D - LN
LN - 7E
LN - 7C

S71C

5E - BN
B - 5C
B - 9D
BN - 6D

S42C

1F - A
11C - A
A - 8C
4E - A
15C - A
A - 10D

S55C

10D - HN
10B - HN
HN - 7E

S72C

S65F - GR
GR - 5C
GR - 11D
GR - 6D
15C - GR
GR - 10B
GR - 7D
15F - GR

S43C

17B - Z
10D - Z
Z - 10E

S64C

9D - G
G - 9C
G - 9C
G - 3C

S165C

11B - L
10D - L
7D - L
L - 7E
L - 7C

S47C

6D - G
10D - G
7D - GV
GN - 12F
G - 5E
C - 5E
10B - C

S69C

6D - HG
8D - HL
HL - 2E
HL - 4E

S170C

L4.05 Table D - CENTRAL TUNNEL/ DASHBOARD

164825 - Connection cable for Airbag system

1D - Passenger Airbag module

188897 - Dashboard connection cables






179194 - Dashboard connection cables

189234 - Dashboard connection cables (For RHD)









186522 - Dashboard connection cables (For RHD)

2D - RH power window switch

3D - Radio/cassette player

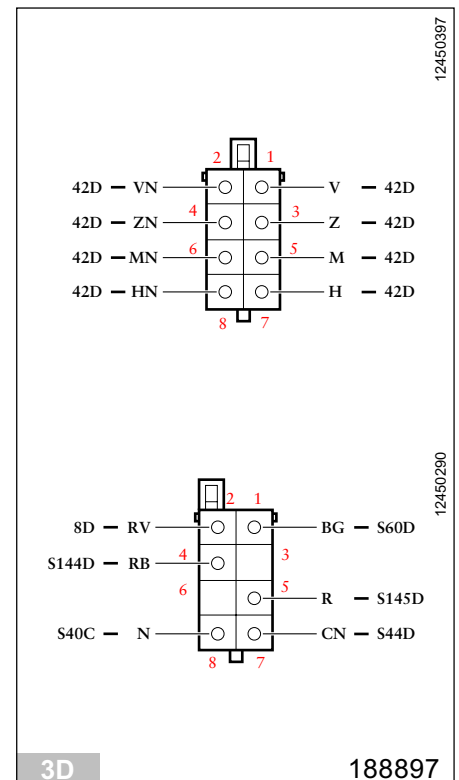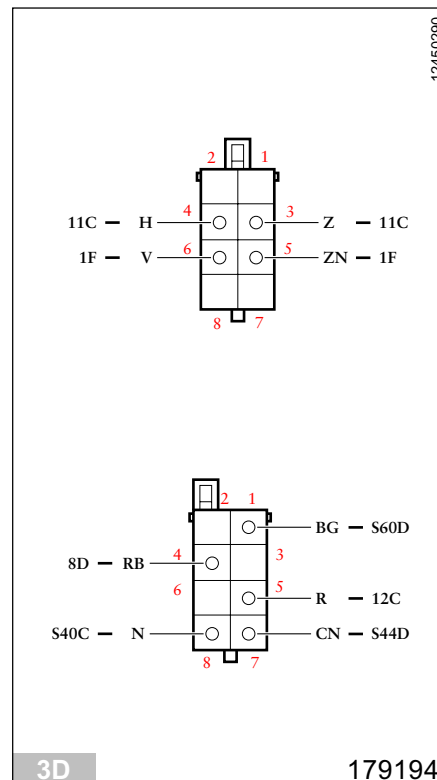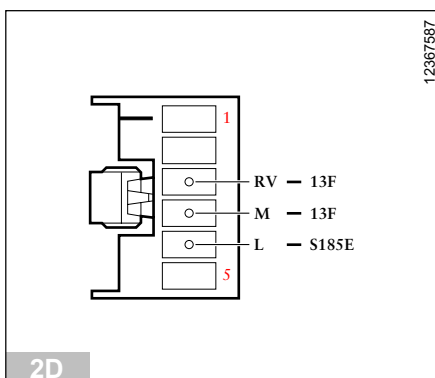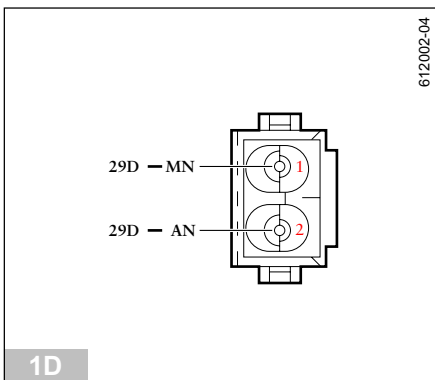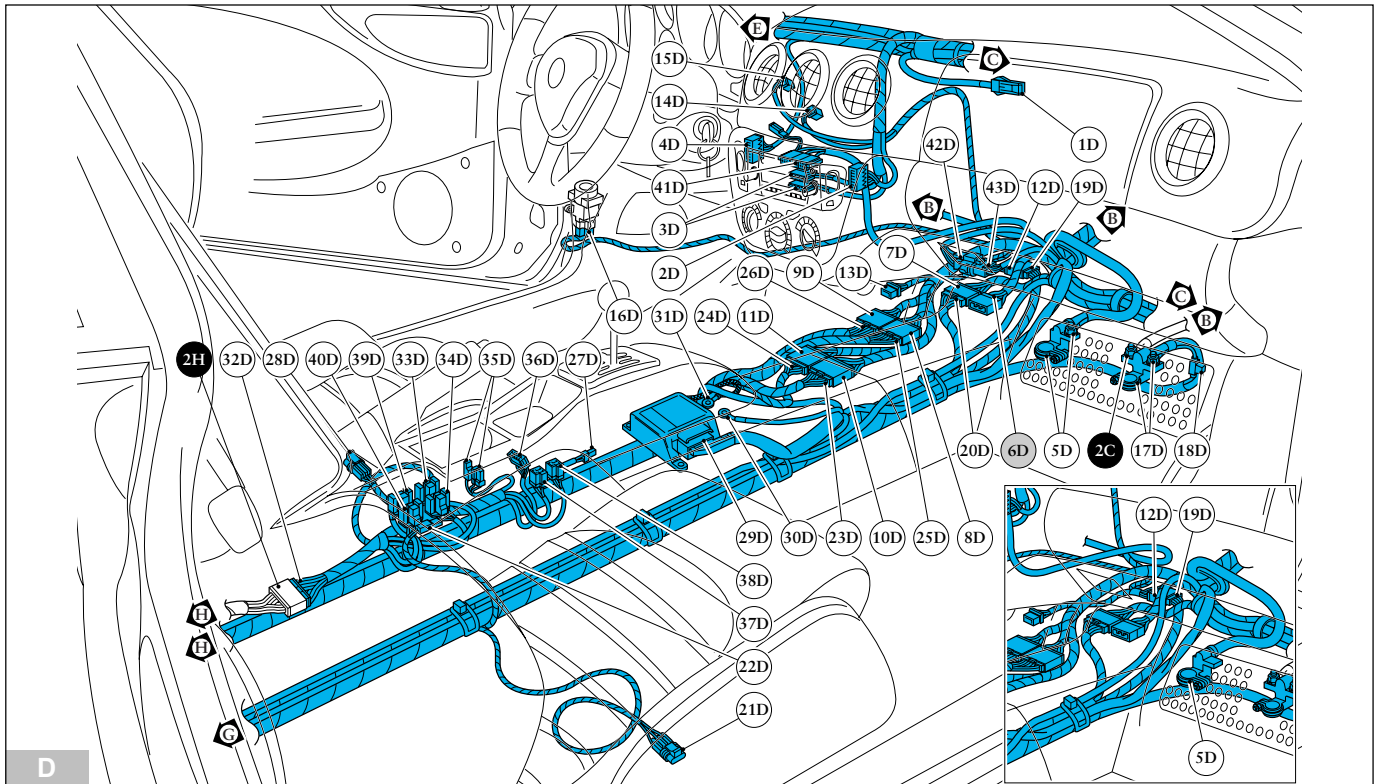

- 4D** - LH power window switch
- 5D** - Battery 12V (terminal -)
- 6D** - Dashboard cables to F1 gearbox cables joint
- 7D** - Dashboard cables to RH rear tunnel cables joint
- 8D** - Dashboard cables to LH rear tunnel cables joint
- 9D** - Dashboard cables to LH rear tunnel cables joint

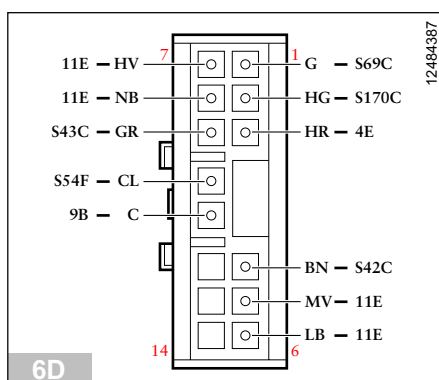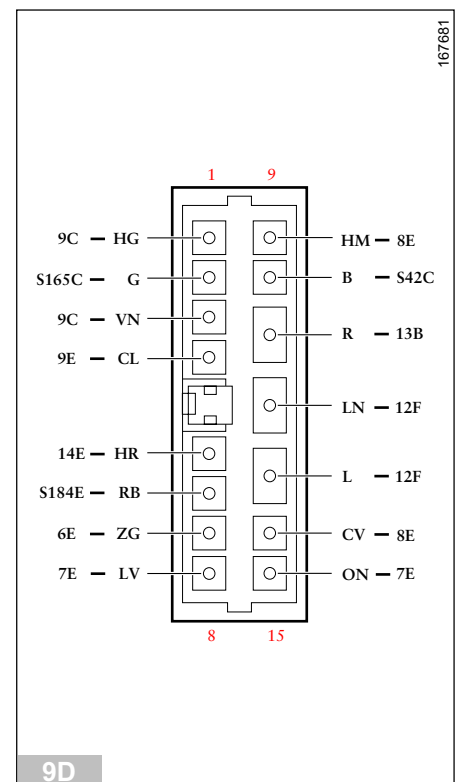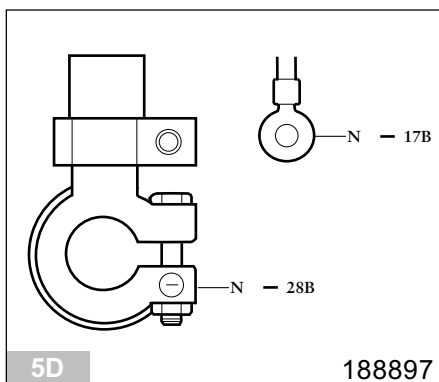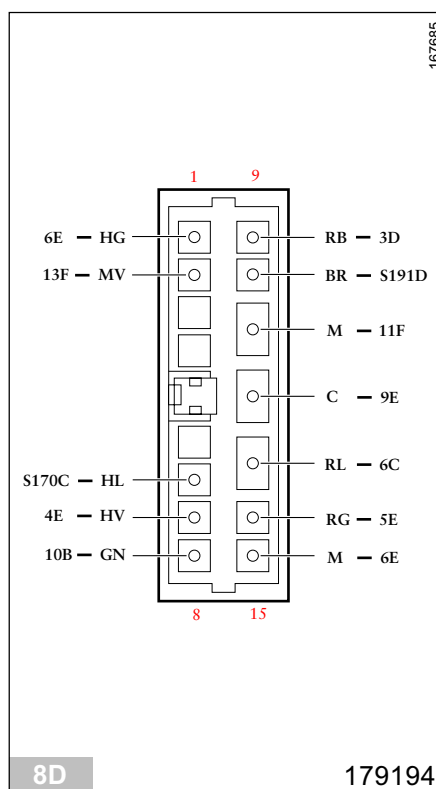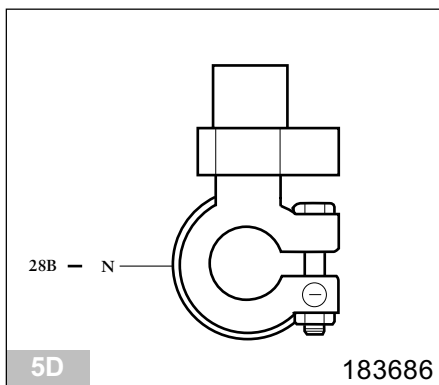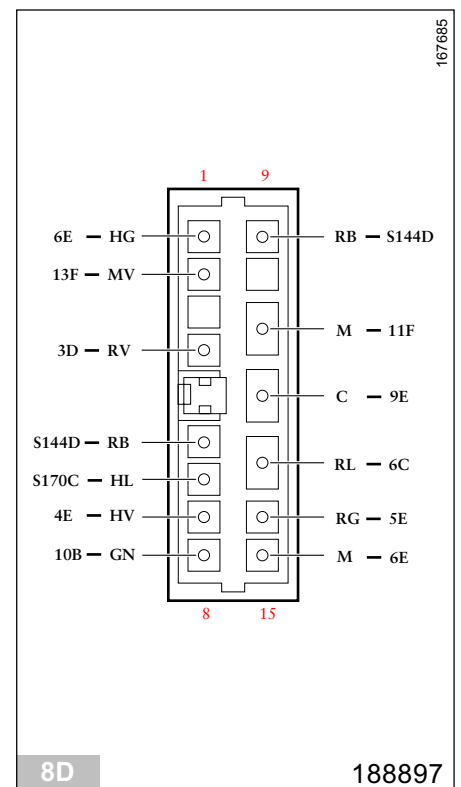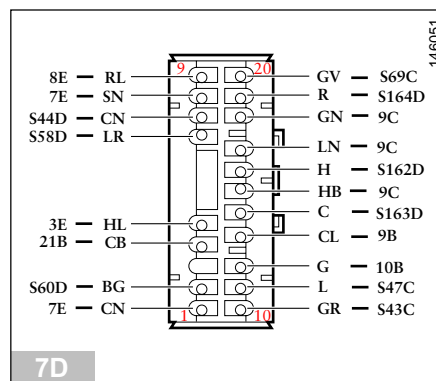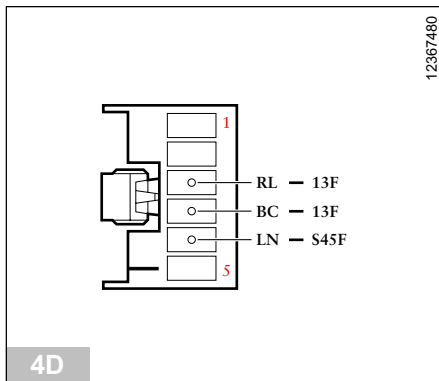

10D - Dashboard cables to LH rear tunnel cables joint

11D - Dashboard cables to LH rear tunnel cables joint

172887 - Connection cables for pedal board devices

183686 - Connection cables for pedal board devices, USA M.Y. 2000

12D - RH tunnel cables to pedal board cables joint

13D - Accelerator pedal sensor

14D - Stop indicator switch

15D - Switch on clutch pedal













16D - Inertia switch

177913 - RH, rear tunnel connection cables

182200 - RH, rear tunnel connection cables, USA M.Y. 2000

17D - Battery 12V (terminal +)

18D - 15A fuse (battery sensing cable protection for alternator)

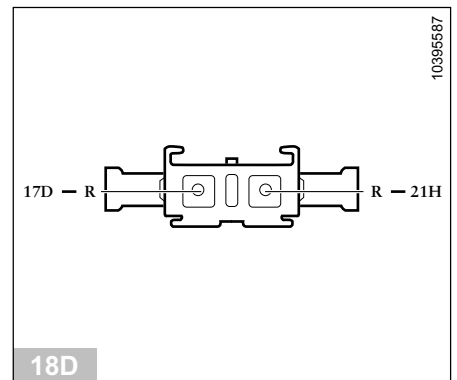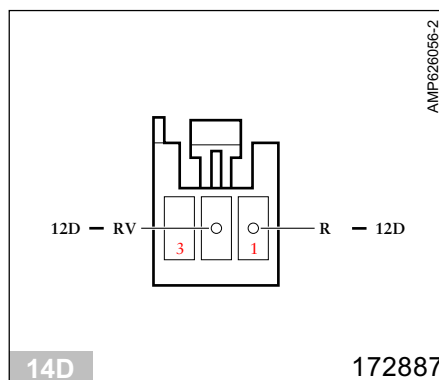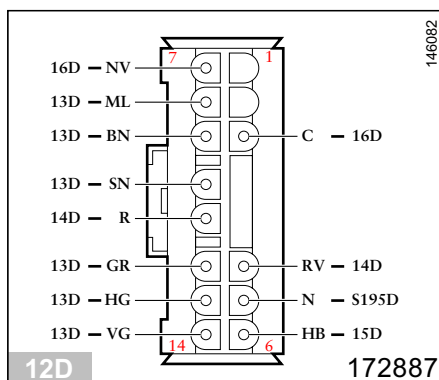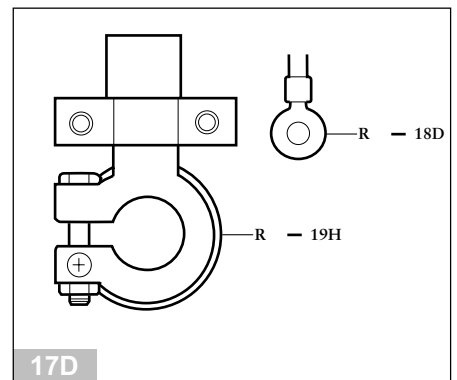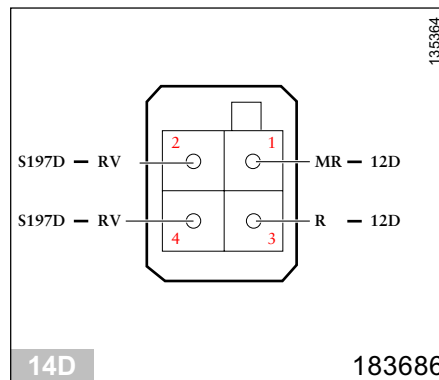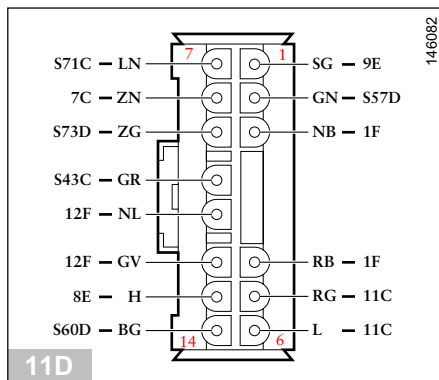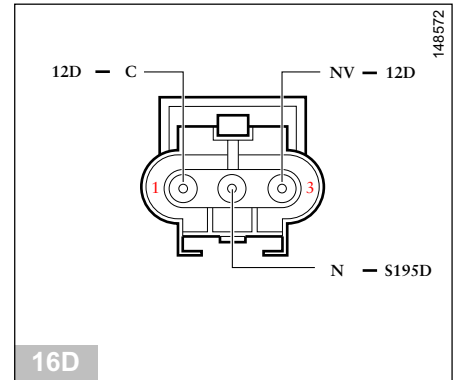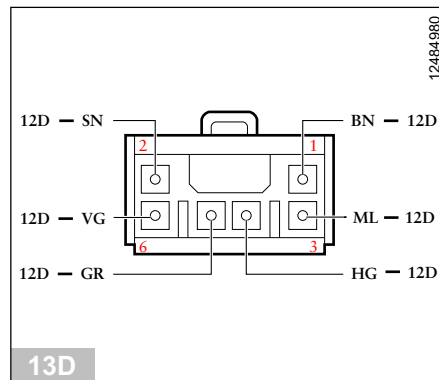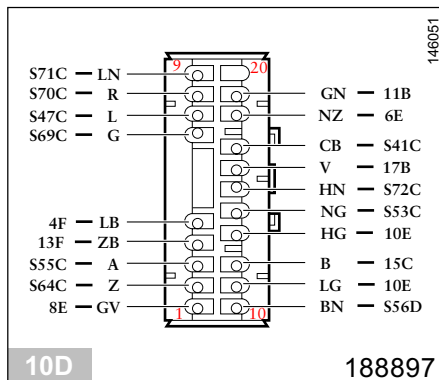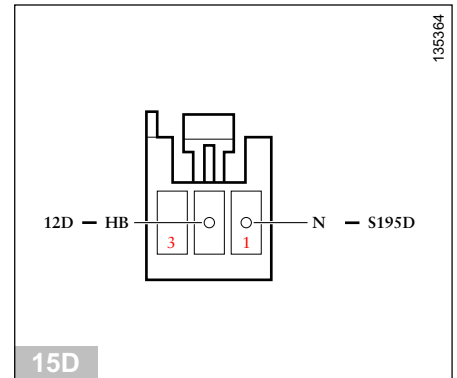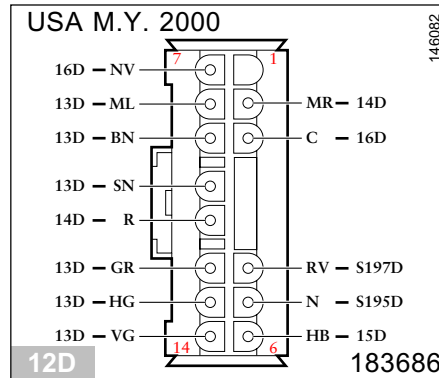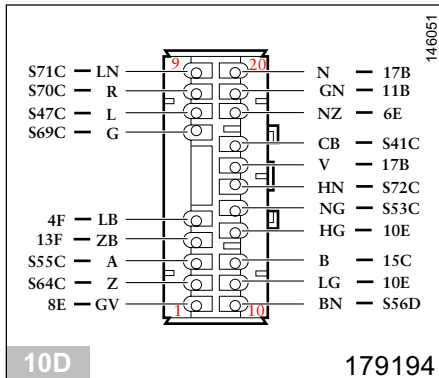

19D - RH tunnel cables to pedal
board cables joint

20D - RH tunnel cables to
dashboard cables joint

21D - RH seat control power supply









22D - Hand-brake switch

188898 - Tunnel / LH rear end
connection cable

177914 - Tunnel / LH rear end
connection cable







23D - LH tunnel cables to
dashboard cables joint

24D - LH tunnel cables to
dashboard cables joint

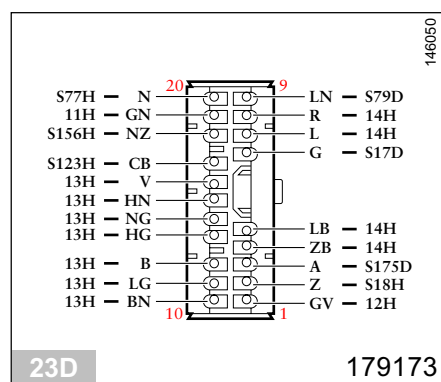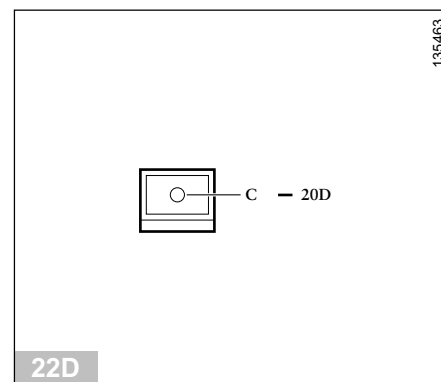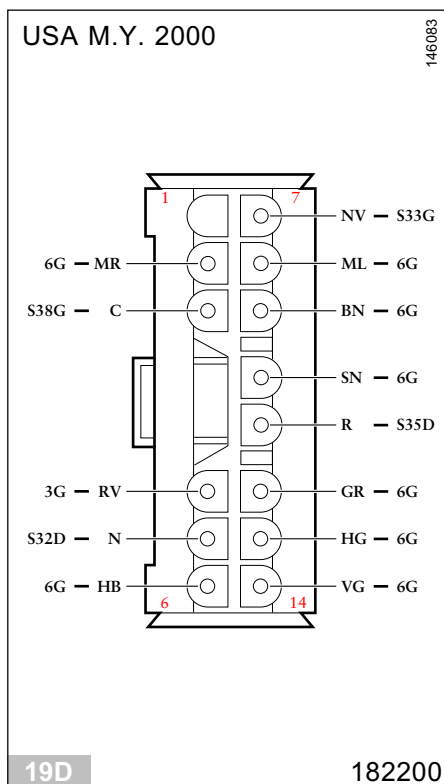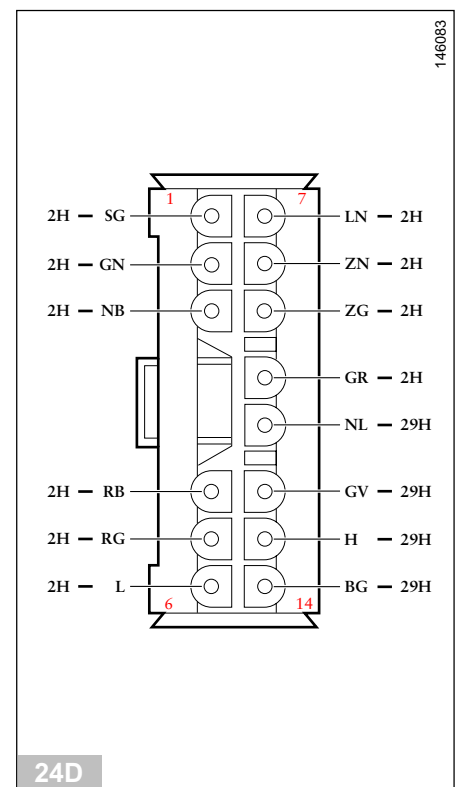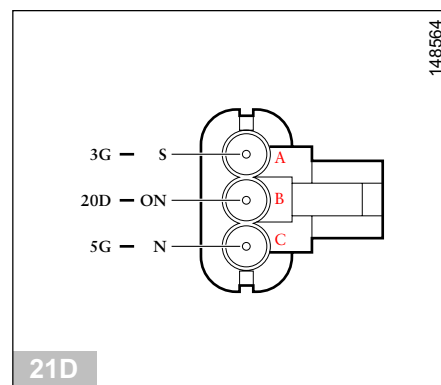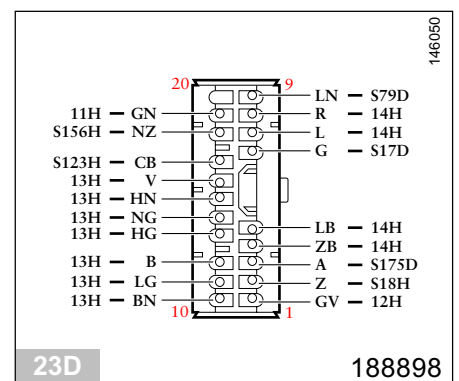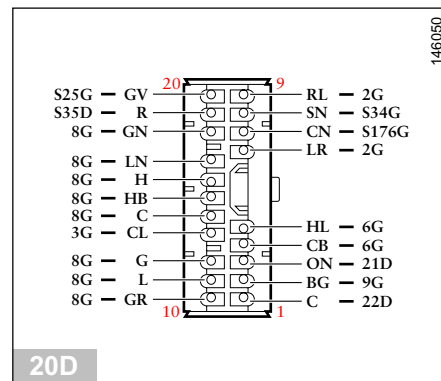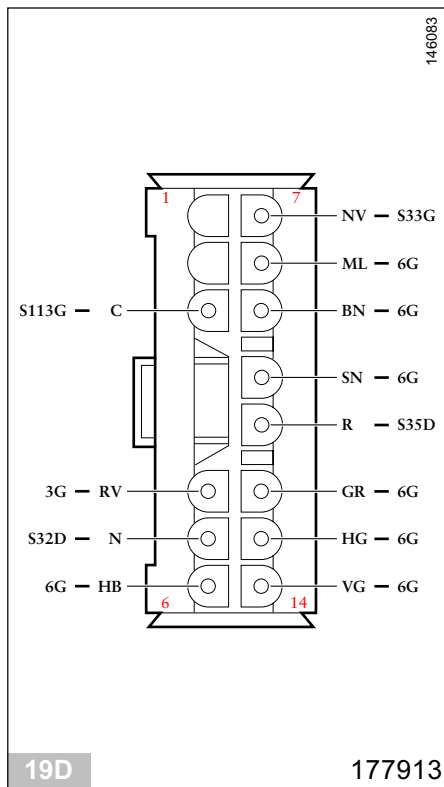

25D - LH tunnel cables to dashboard cables joint
26D - LH tunnel cables to dashboard cables joint
27D - Reverse gear indicator switch
28D - LH seat control power supply

164825 - Connection cable for Airbag system
29D - Airbag ECU
30D - Electronic earth

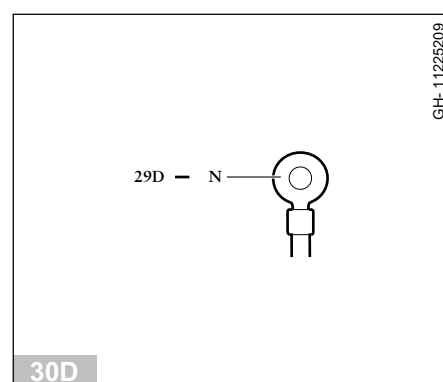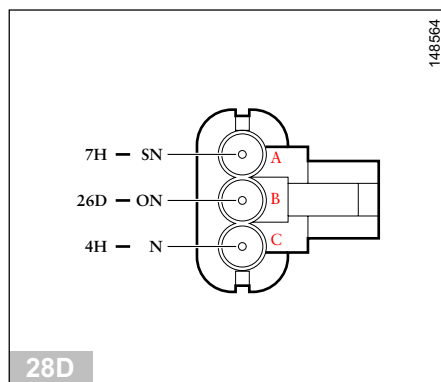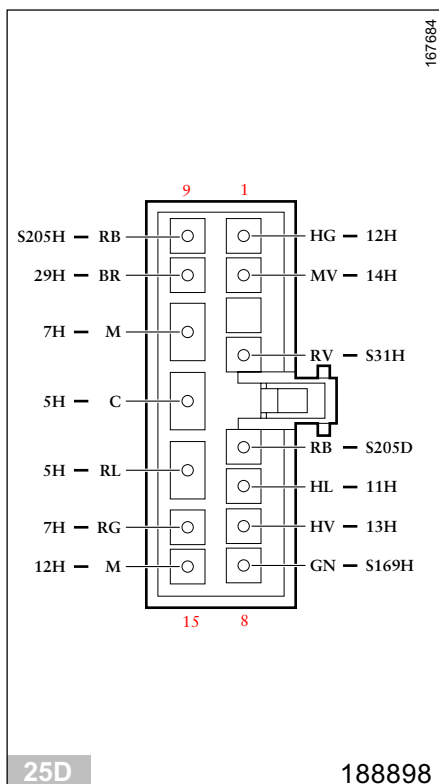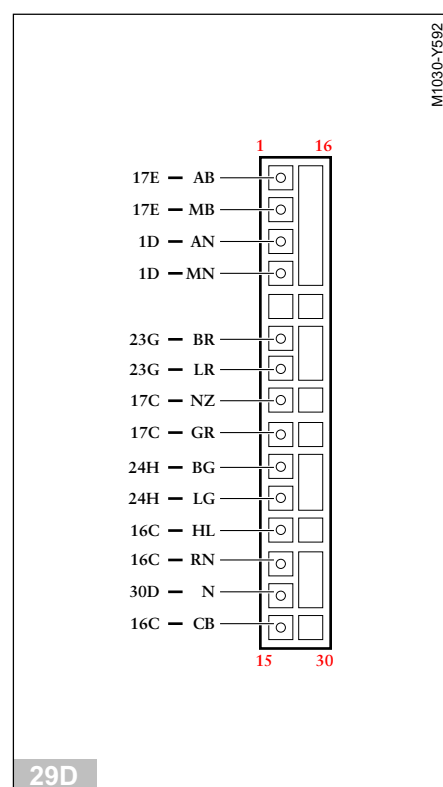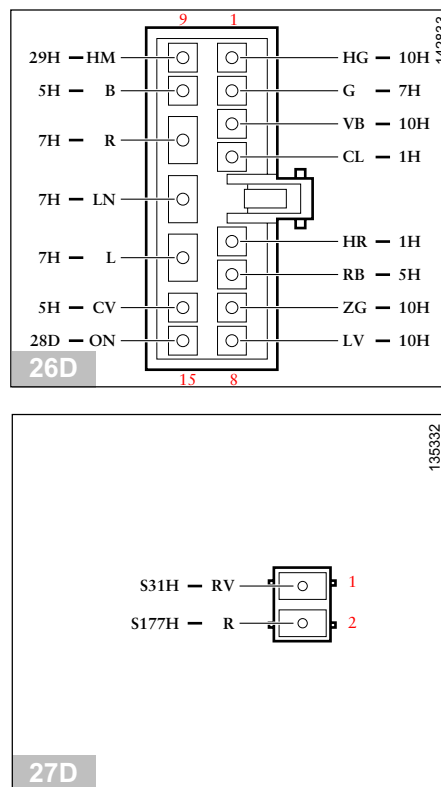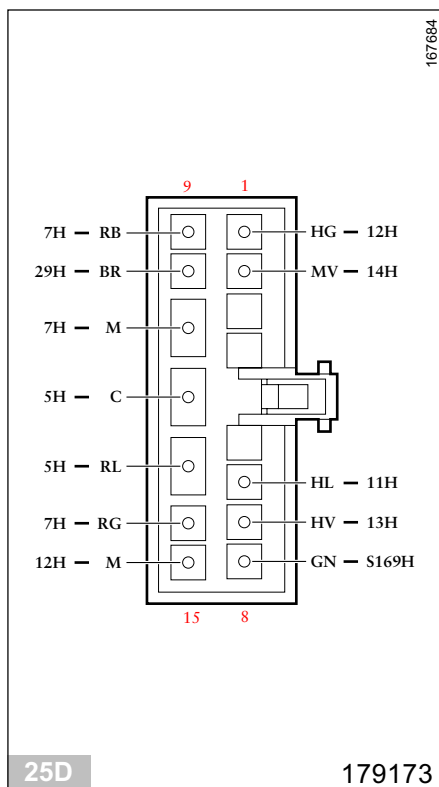

160855 - Stranded earth wire

31D - Stranded earth wire for
Airbag ECU

**181284 - Tunnel-console
connection cables**

32D - Tunnel switch cables to LH
tunnel cables joint

33D - Front lid opening button

34D - Fuel tank flap opening
button

35D - Cigar lighter

36D - Wing mirrors control

37D - Parking switch












38D - Hazard light switch

39D - Top switch

40D - Push button for rear glove
compartment opening

**181321 - Stereo system/CD
loader connection cable**

41D - Radio switch

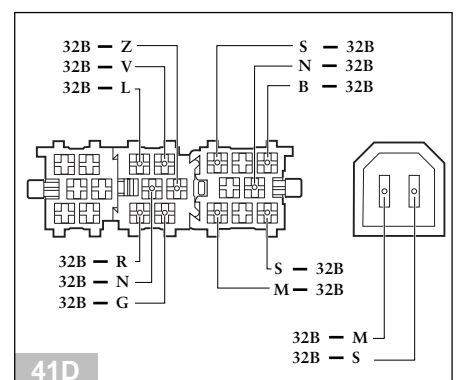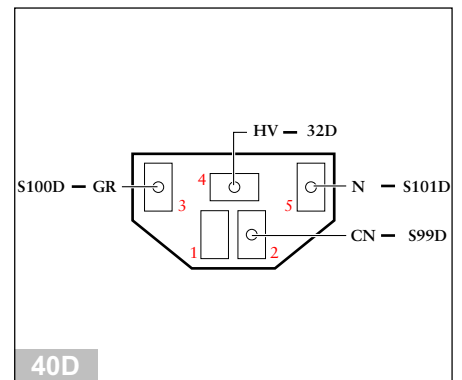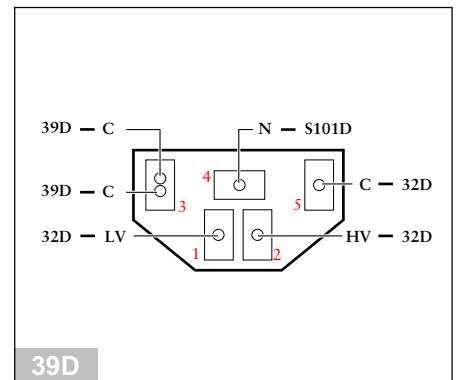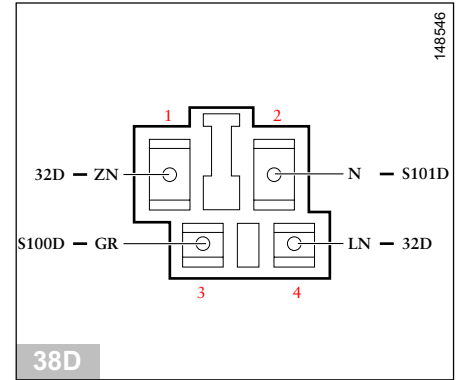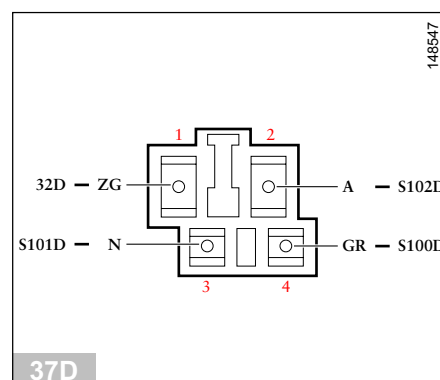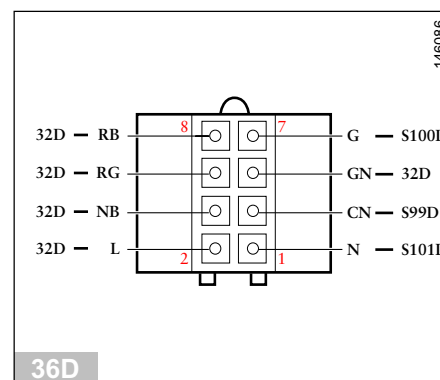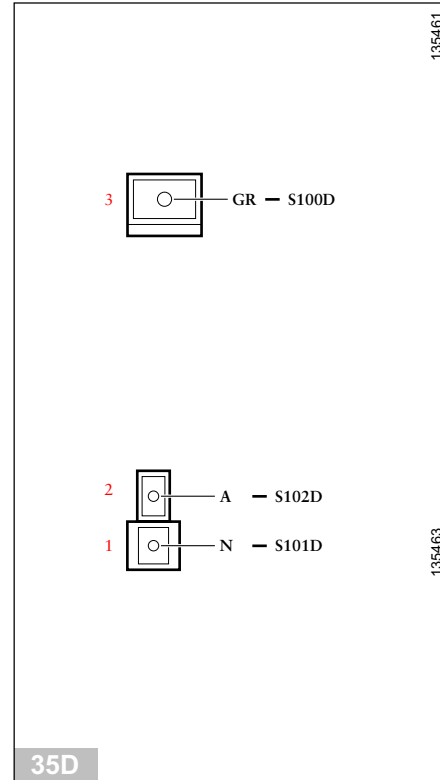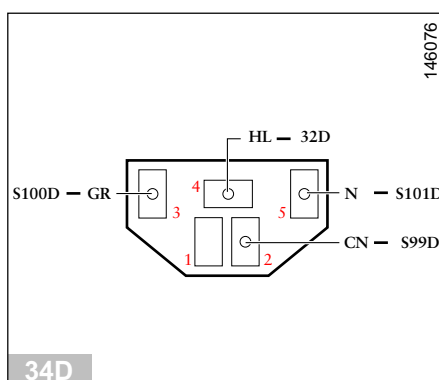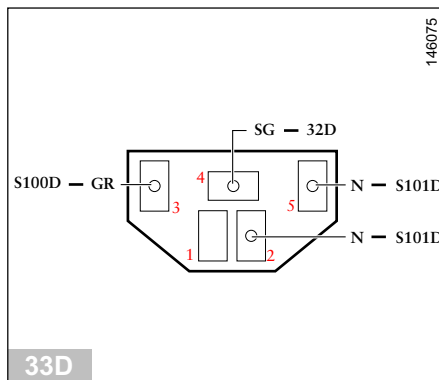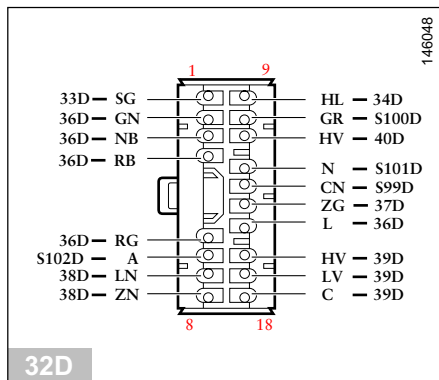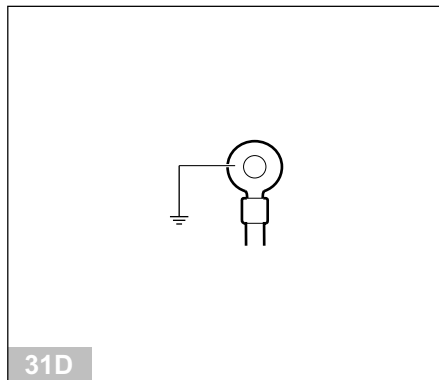

188897 - Dashboard connection cables












179194 - Dashboard connection cables
















189234 - Dashboard connection cables (For RHD)








186522 - Dashboard connection cables (For RHD)

42D - Cable bundle connection joint for radio system aplifier

43D - Cable bundle connection joint for radio system aplifier

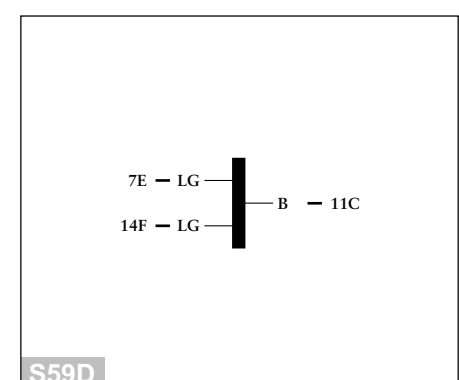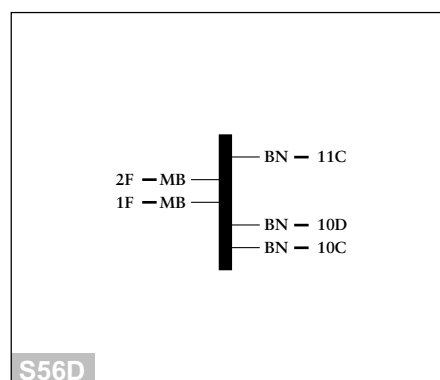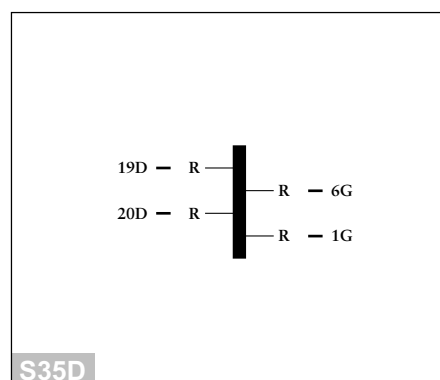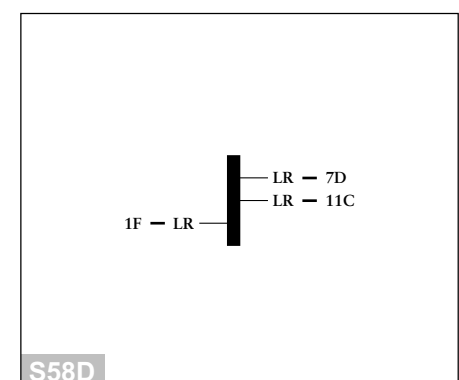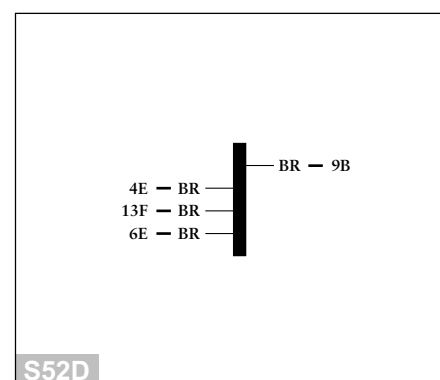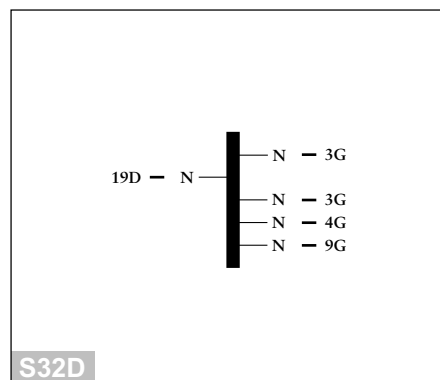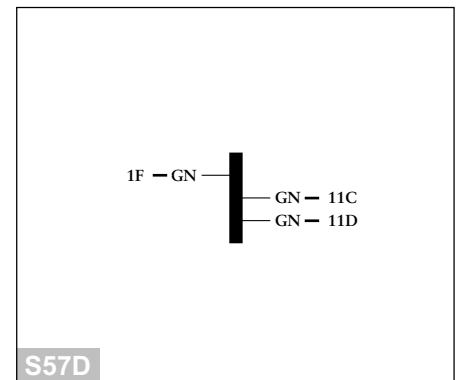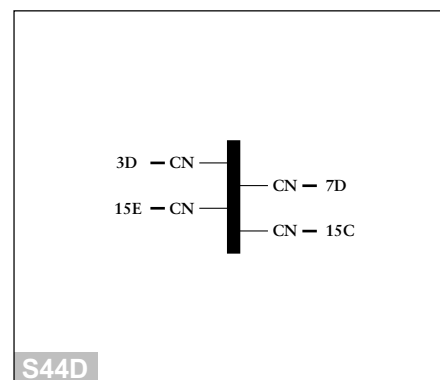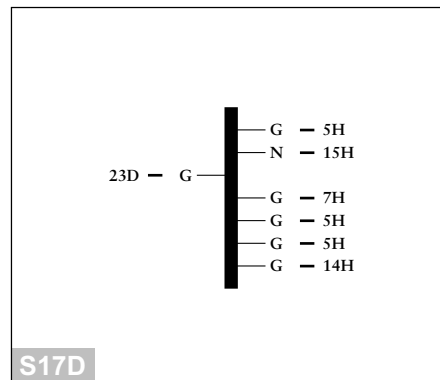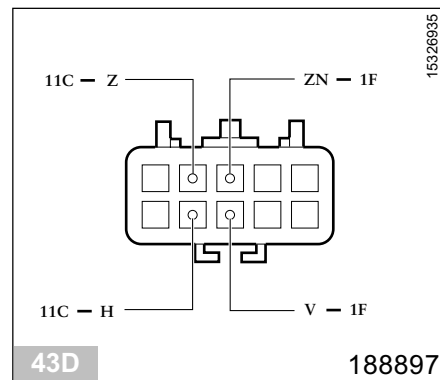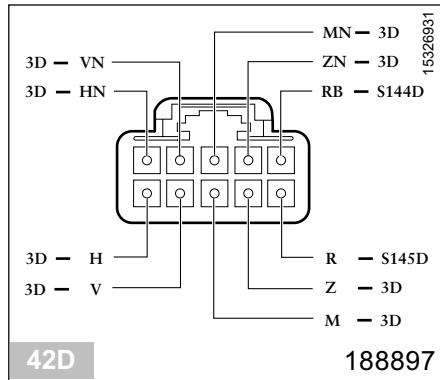

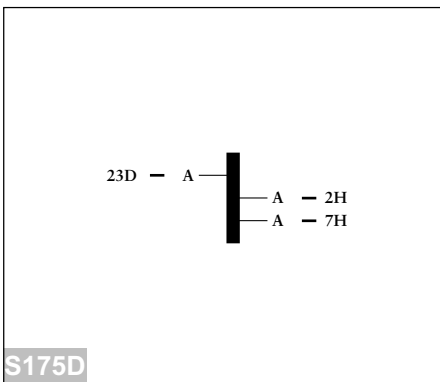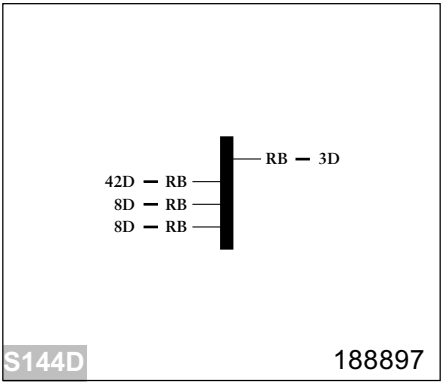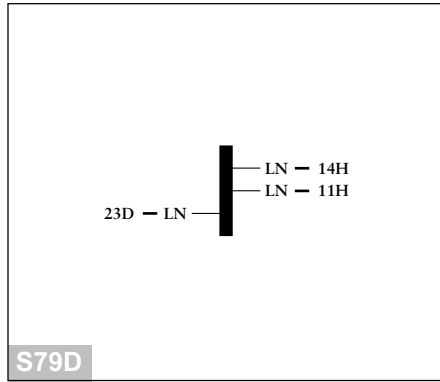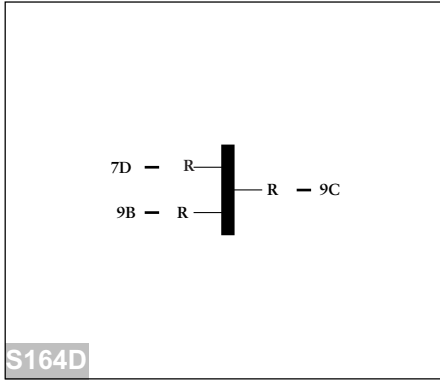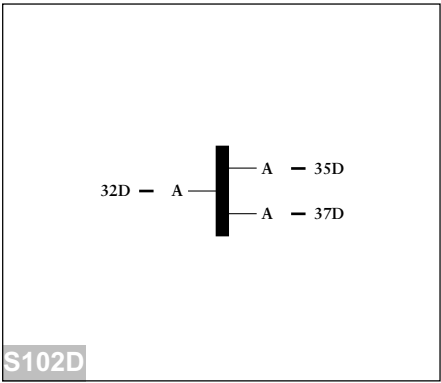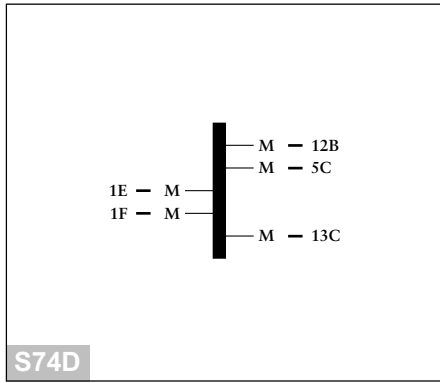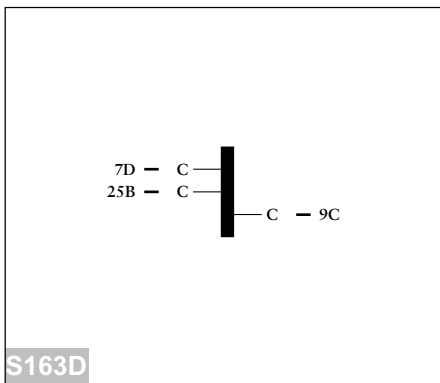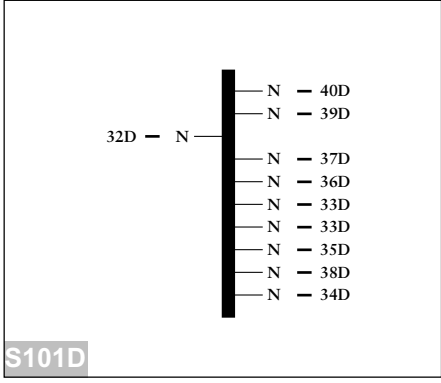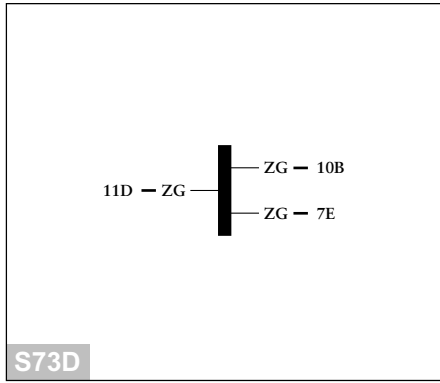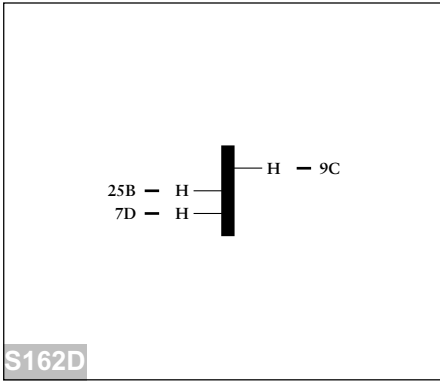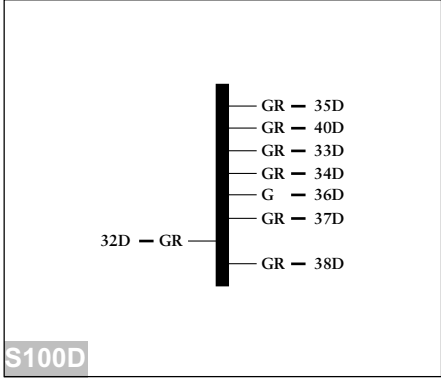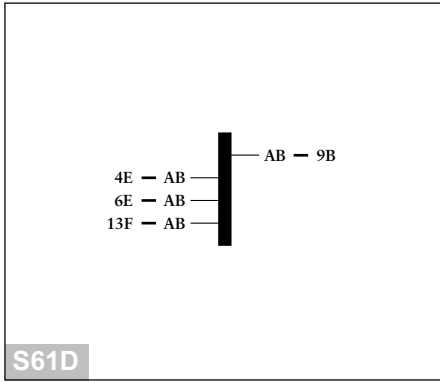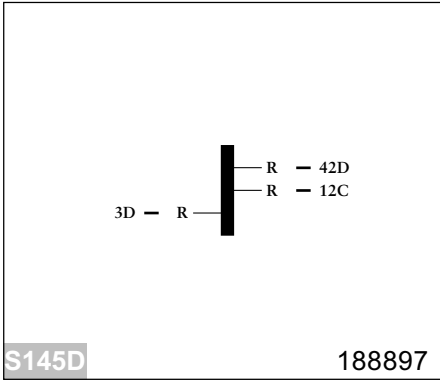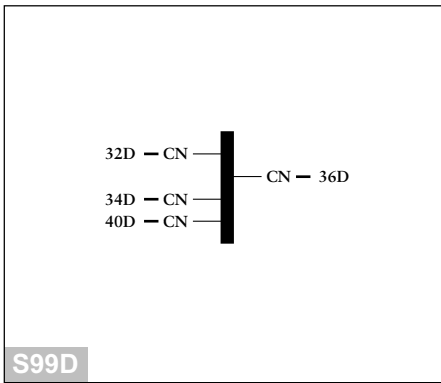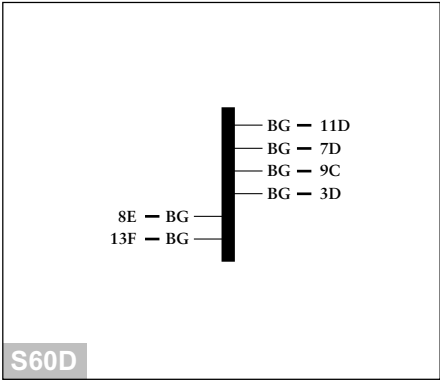

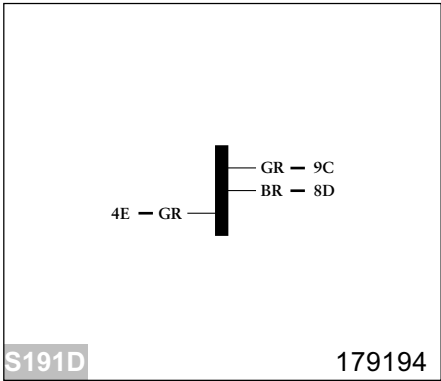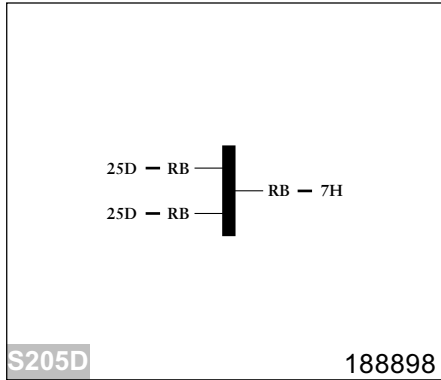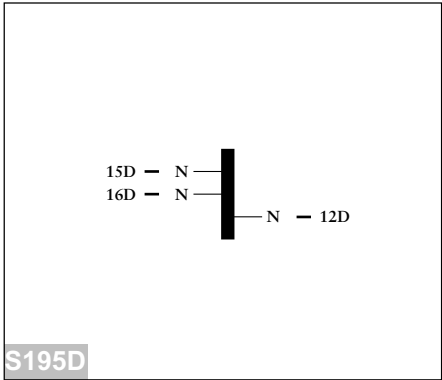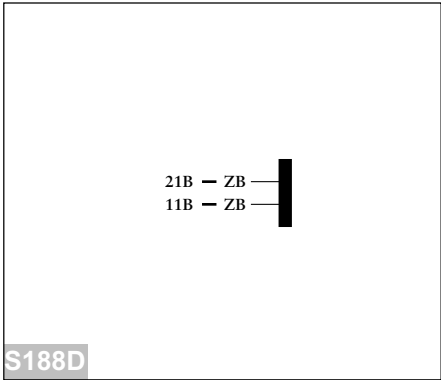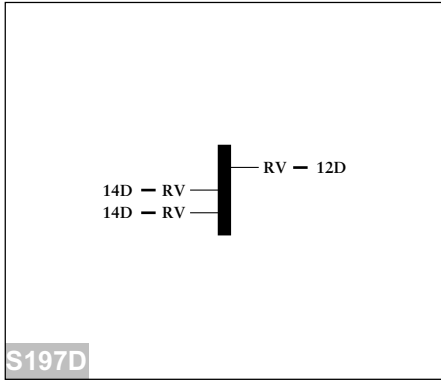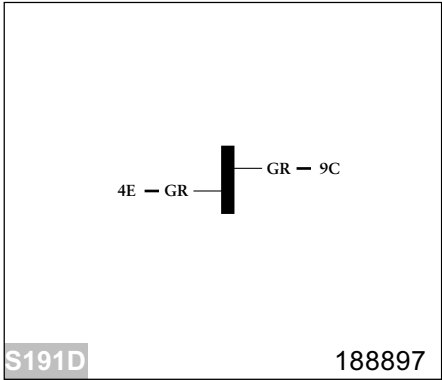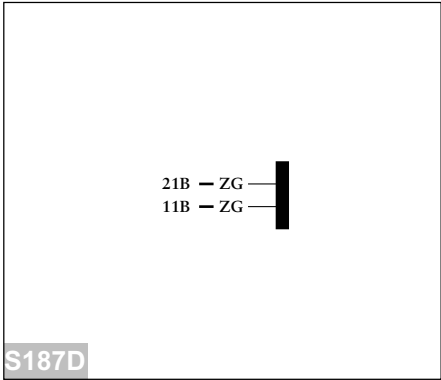

L4.06 Table E - CONTROLS ON THE STEERING WHEEL

188897 - Dashboard connection cables

179194 - Dashboard connection cables

189234 - Dashboard connection cables (For RHD)

186522 - Dashboard connection cables (For RHD)







1E - Sun radiation sensor

2E - Diagnosis socket for RH Motronic ECU

3E - Diagnosis socket for RH Motronic ECU













4E - Diagnosis socket OBD II


5E - Ignition switch

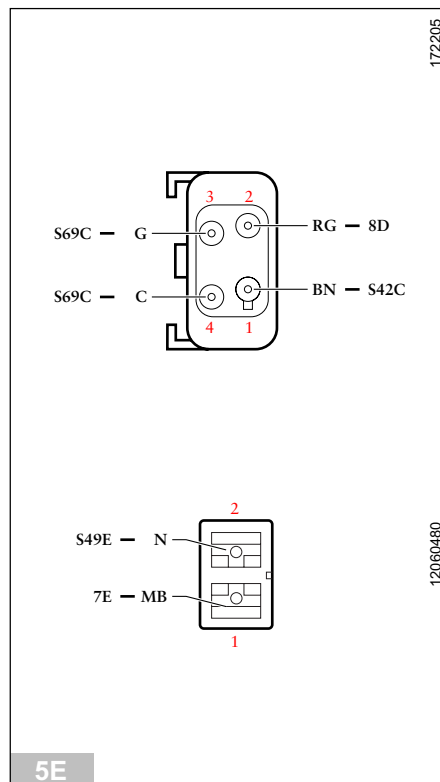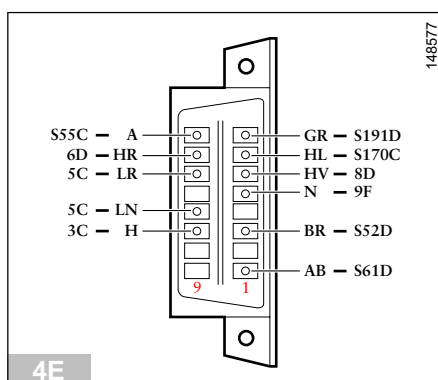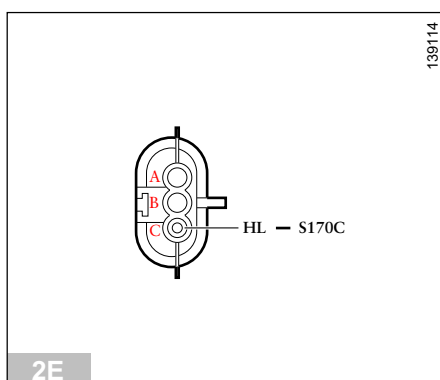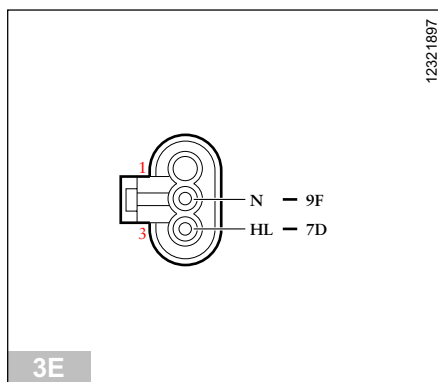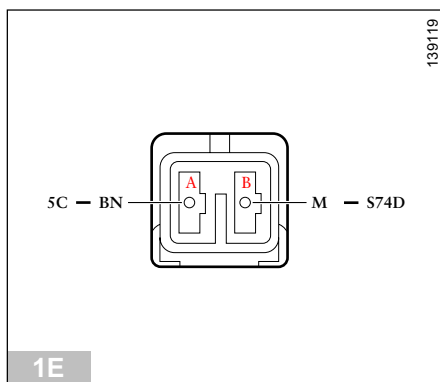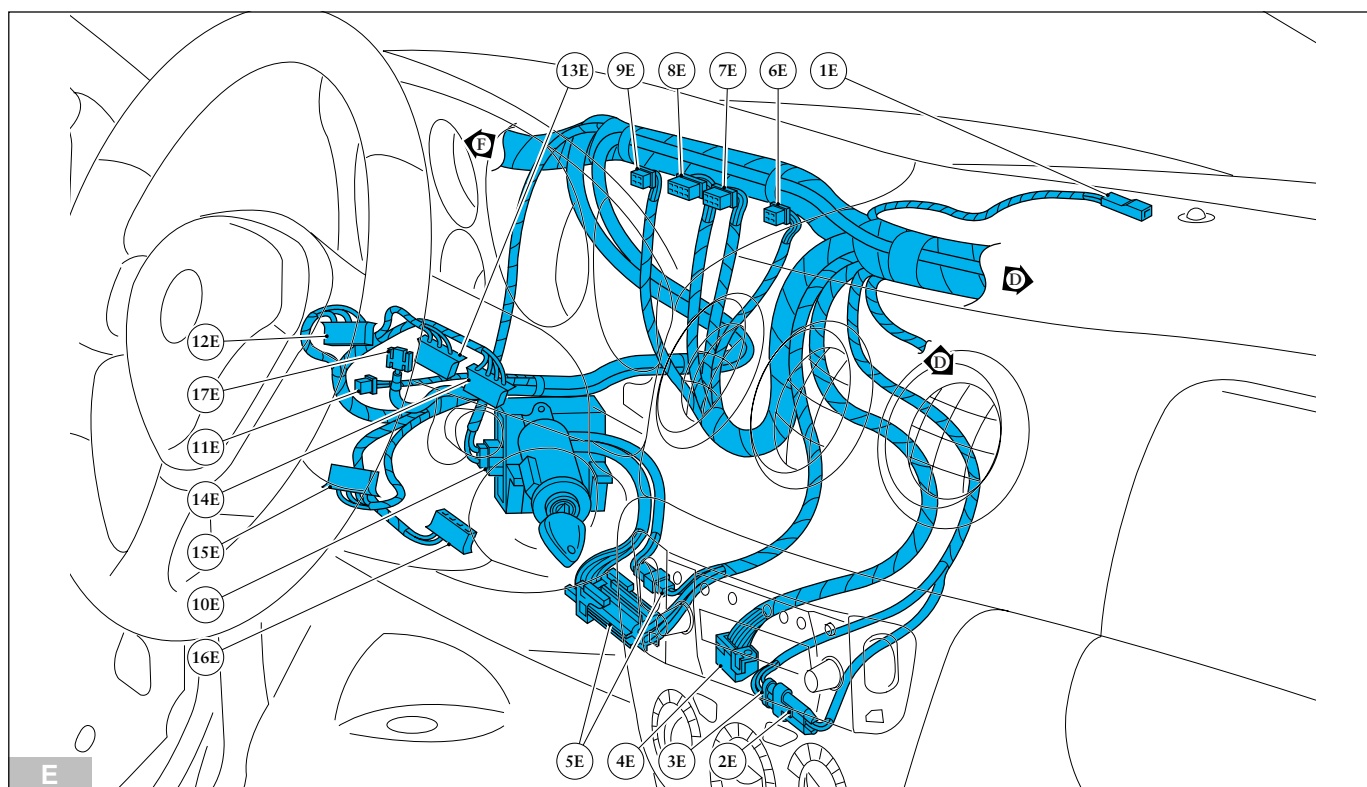


6E - Complete instrument panel
7E - Complete instrument panel
8E - Complete instrument panel
9E - Complete instrument panel
10E - Anti-lift sensor
11E - Gear selection switch
 (F1 gearbox)
12E - Steering column switch
13E - Steering column switch
14E - Steering column switch

15E - Steering column switch
16E - Steering column switch
164825 - Connection cable for
Airbag system
17E - Airbag joint to spiral contact

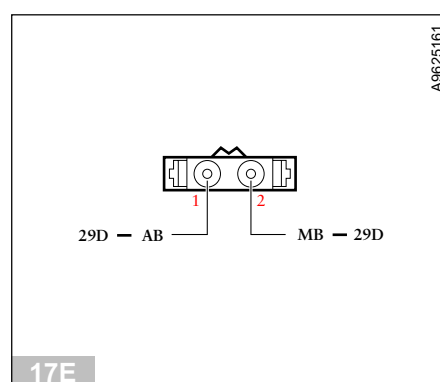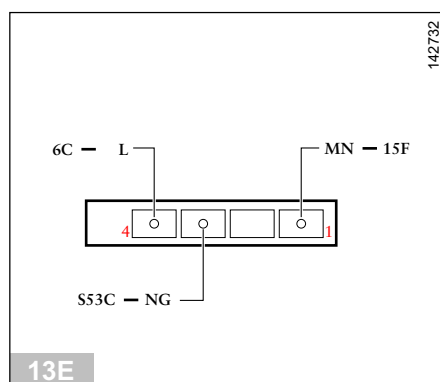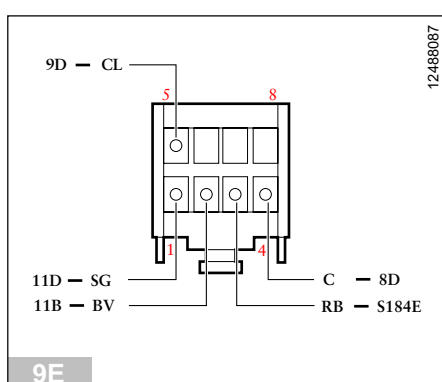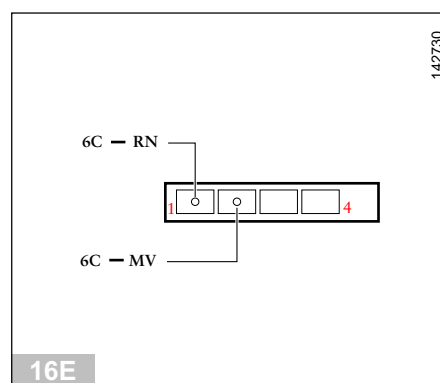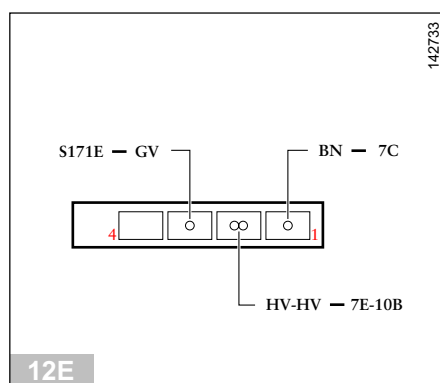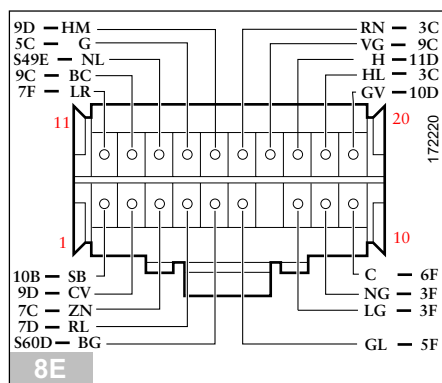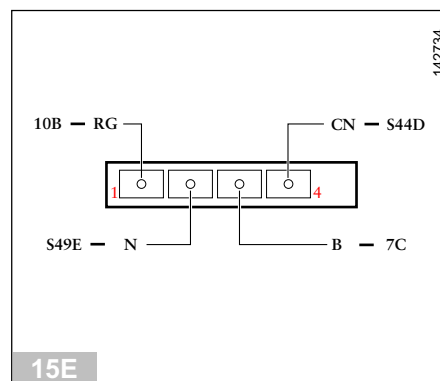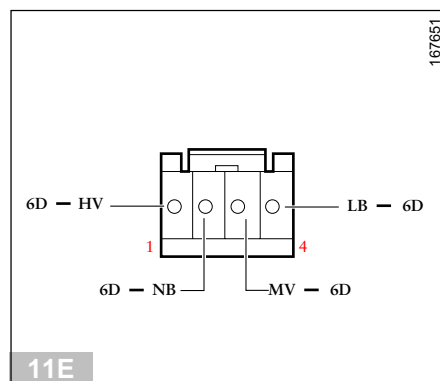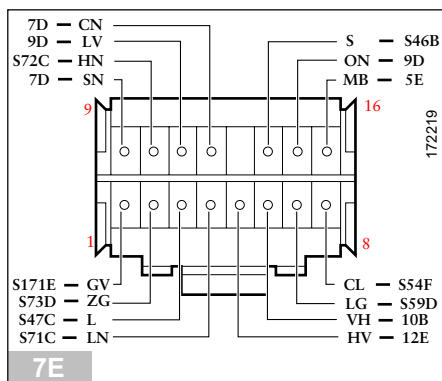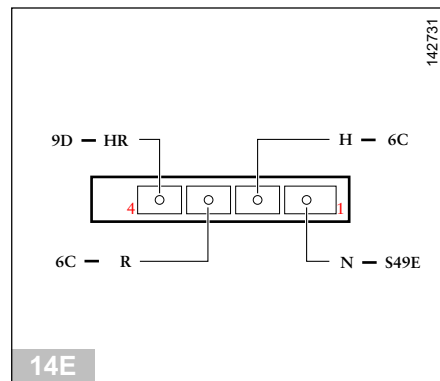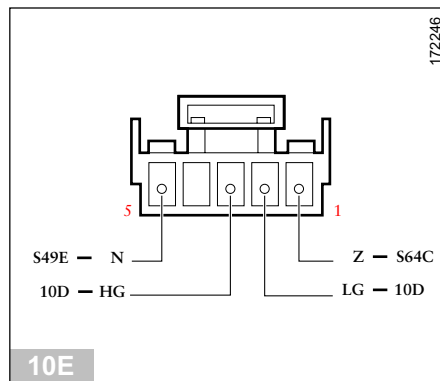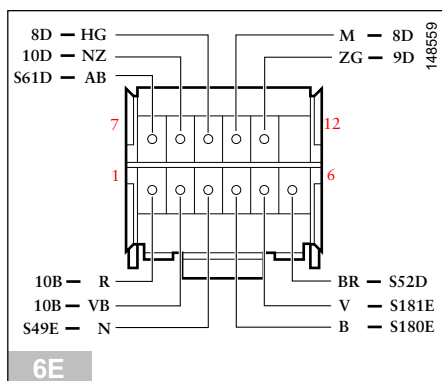


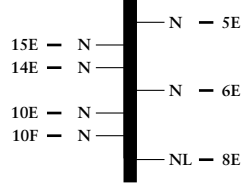


S49E

 


S185E

 


S171E

 

S180E

 

S181E

 

S184E

L4.07 Table F - DASHBOARD, LH SIDE FUSE BOXES

188897 - Dashboard connection cables





179194 - Dashboard connection cables

186522 - Dashboard connection cables (For RHD)

1F - Dashboard cables to LH door cables joint













2F - LH door striker plate micro-switch

3F - Multi-function display scroll switch


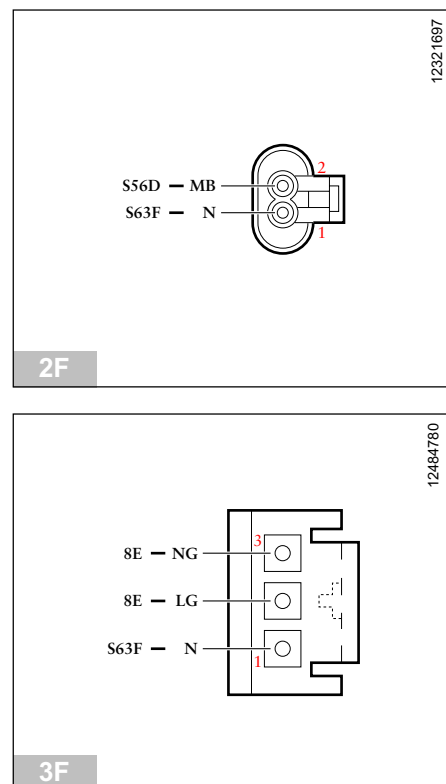
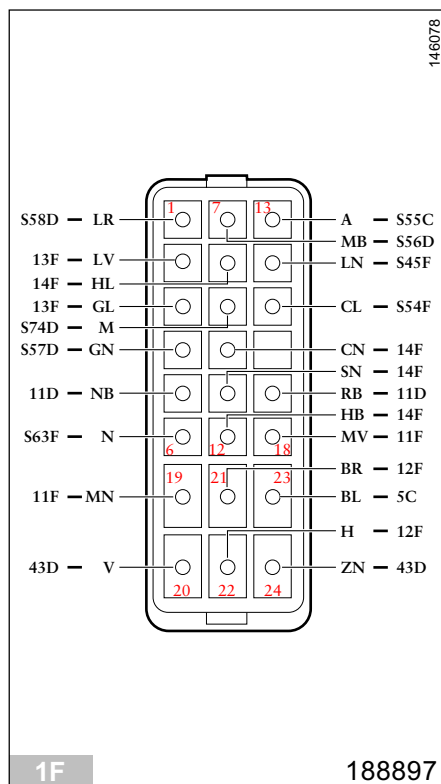
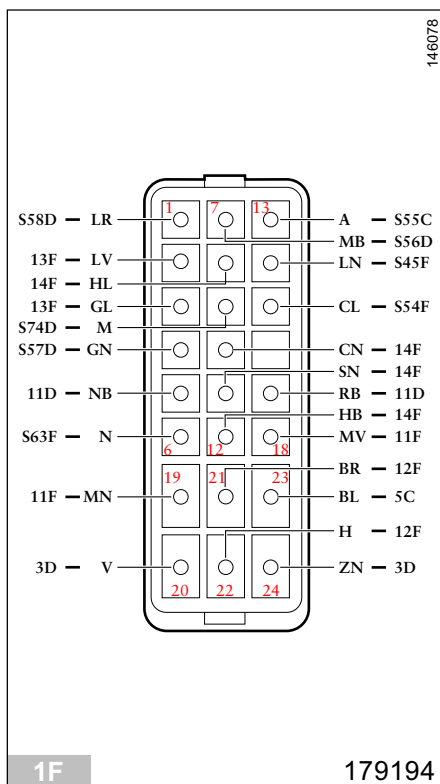
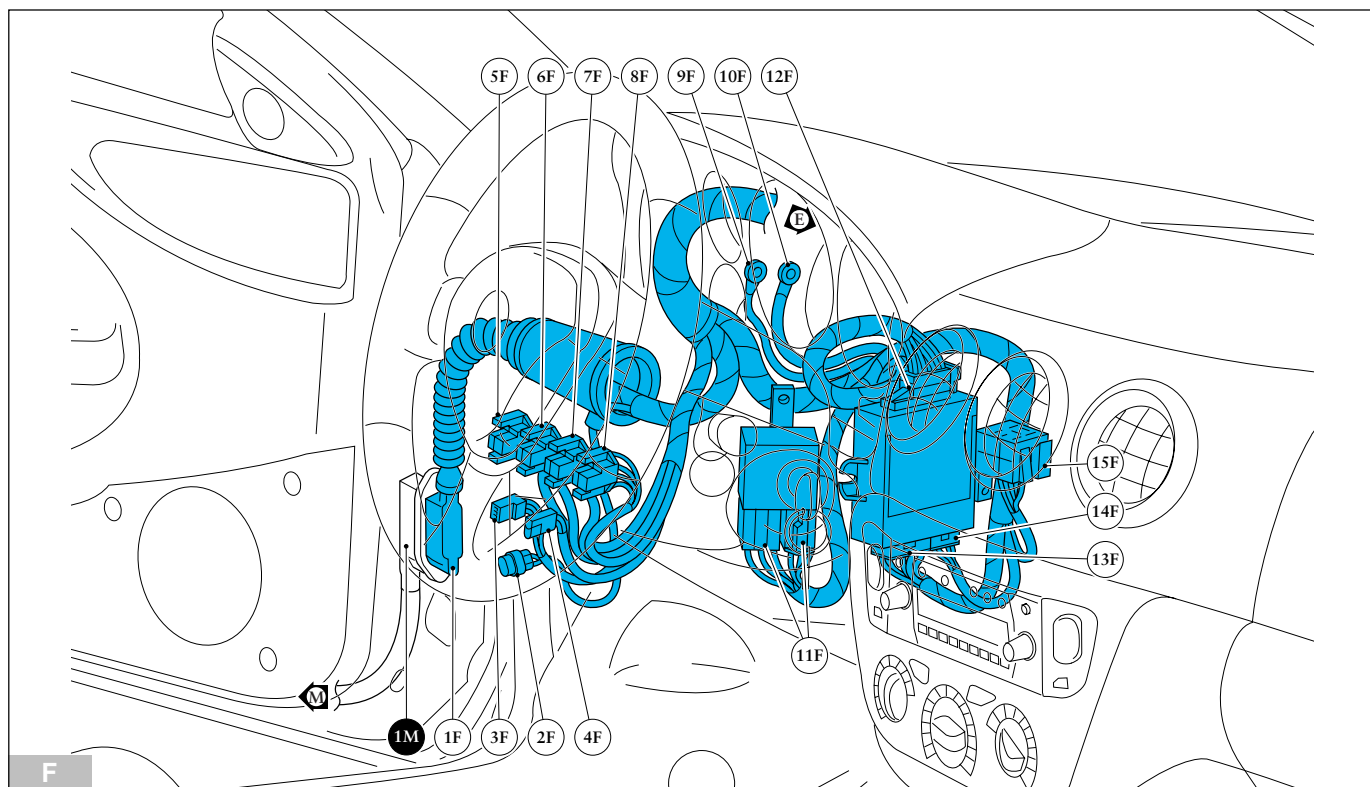


- 4F** - Alarm system LED
- 5F** - ASR cut-out button
- 6F** - Rear fog-light button
- 7F** - Push button for rear view mirrors defrosting
- 8F** - Switch for shock absorber setting selection (SPORT)
- 9F** - Earth
- 10F** - Earth
- 11F** - Complete external door locking module

- 12F** - Power window ECU
- 13F** - Power window ECU
- 14F** - Power window ECU

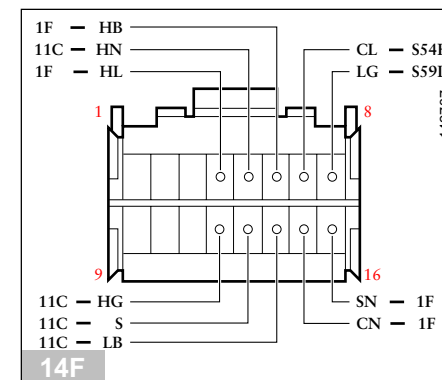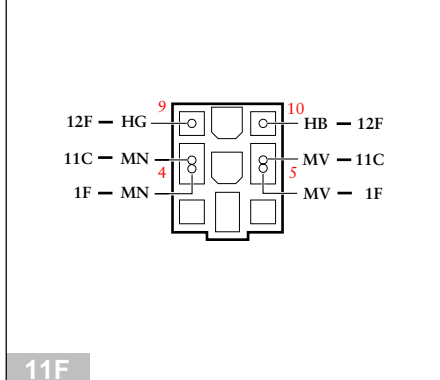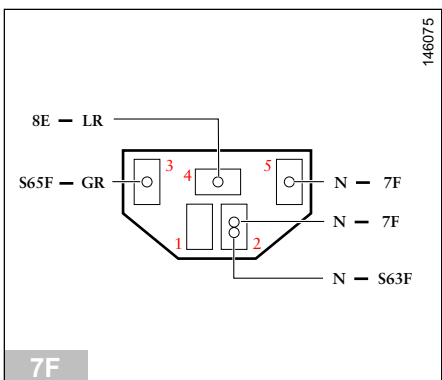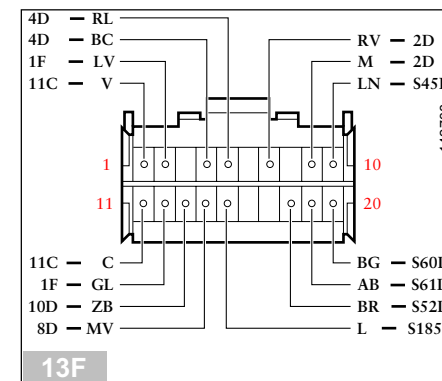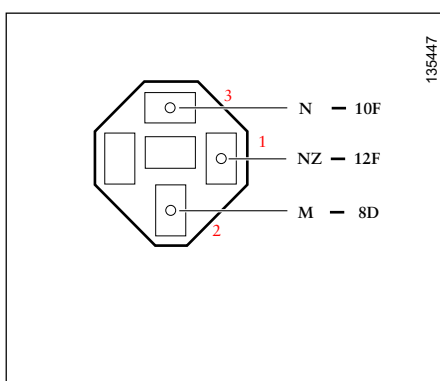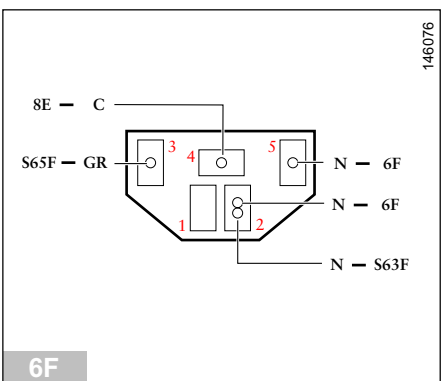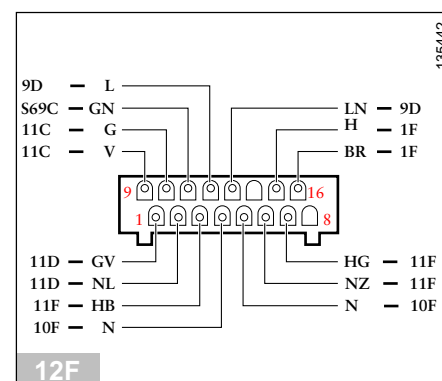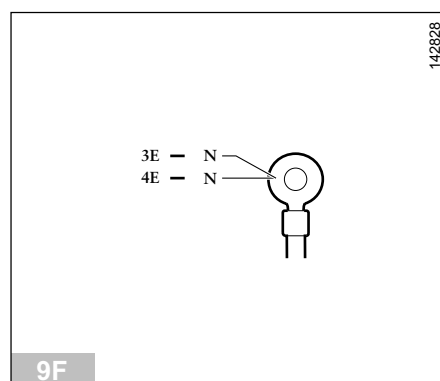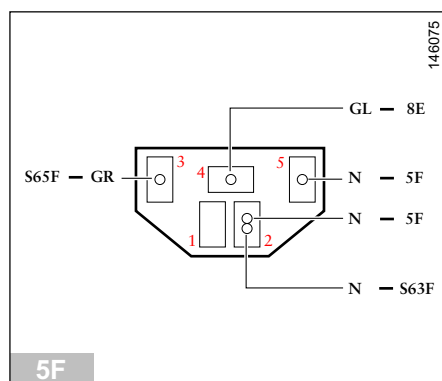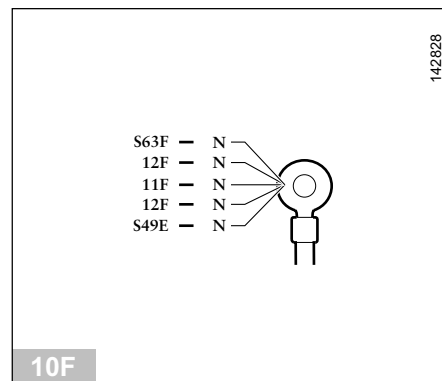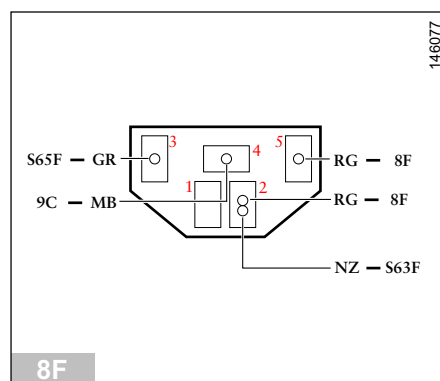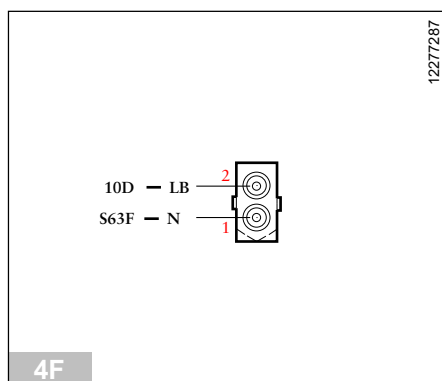

15F - Headlight washer relay with timer (available for eventual use)

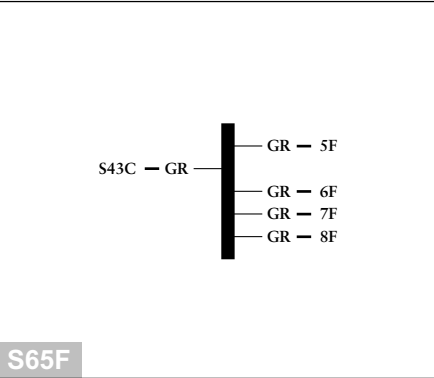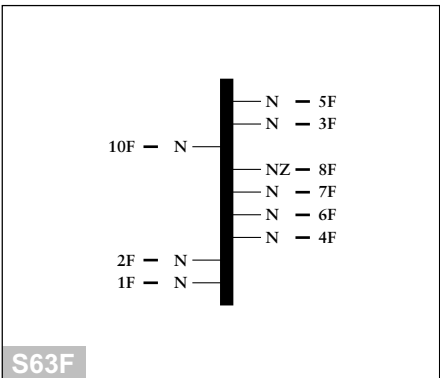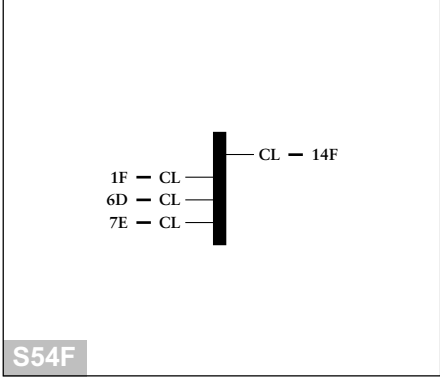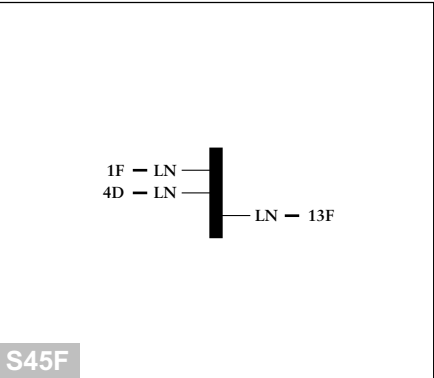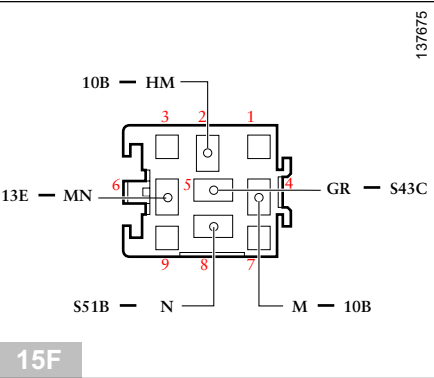

L4.08 Table G - RH SIDE REAR TUNNEL

177913 - RH, rear tunnel

connection cables





182200 - RH, rear tunnel

connection cables, USA M.Y. 2000

1G - RH tunnel cables to LH

tunnel cables joint



2G - RH rear fuse box

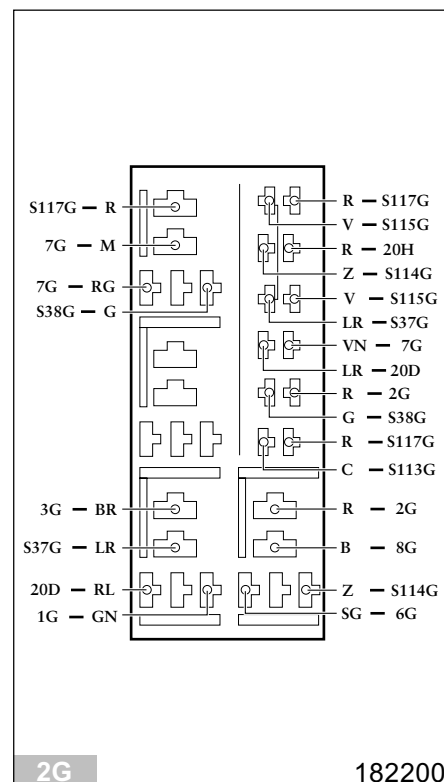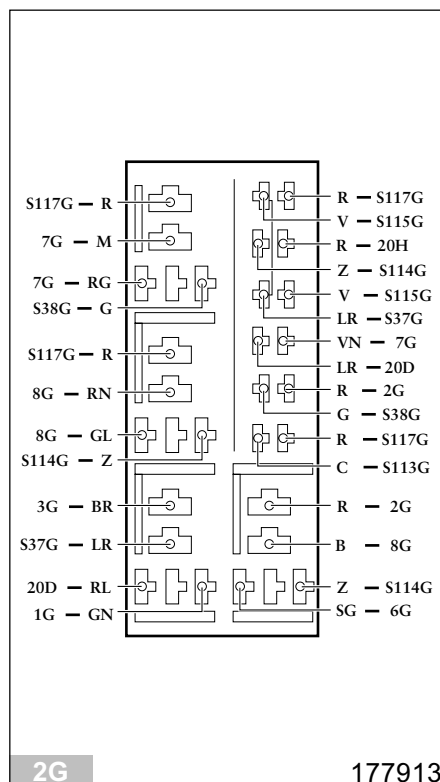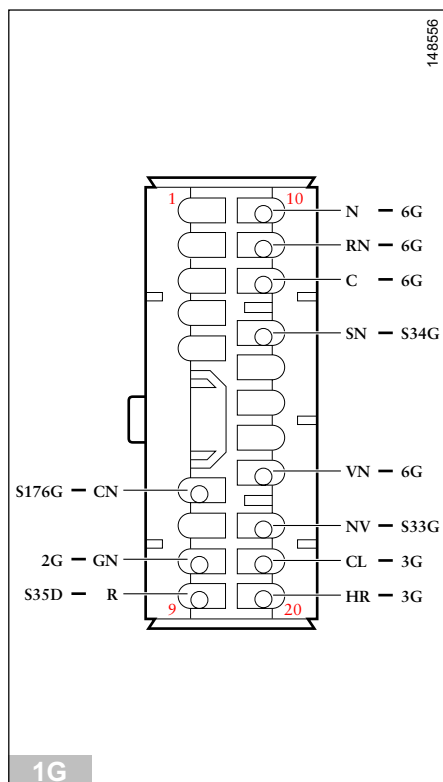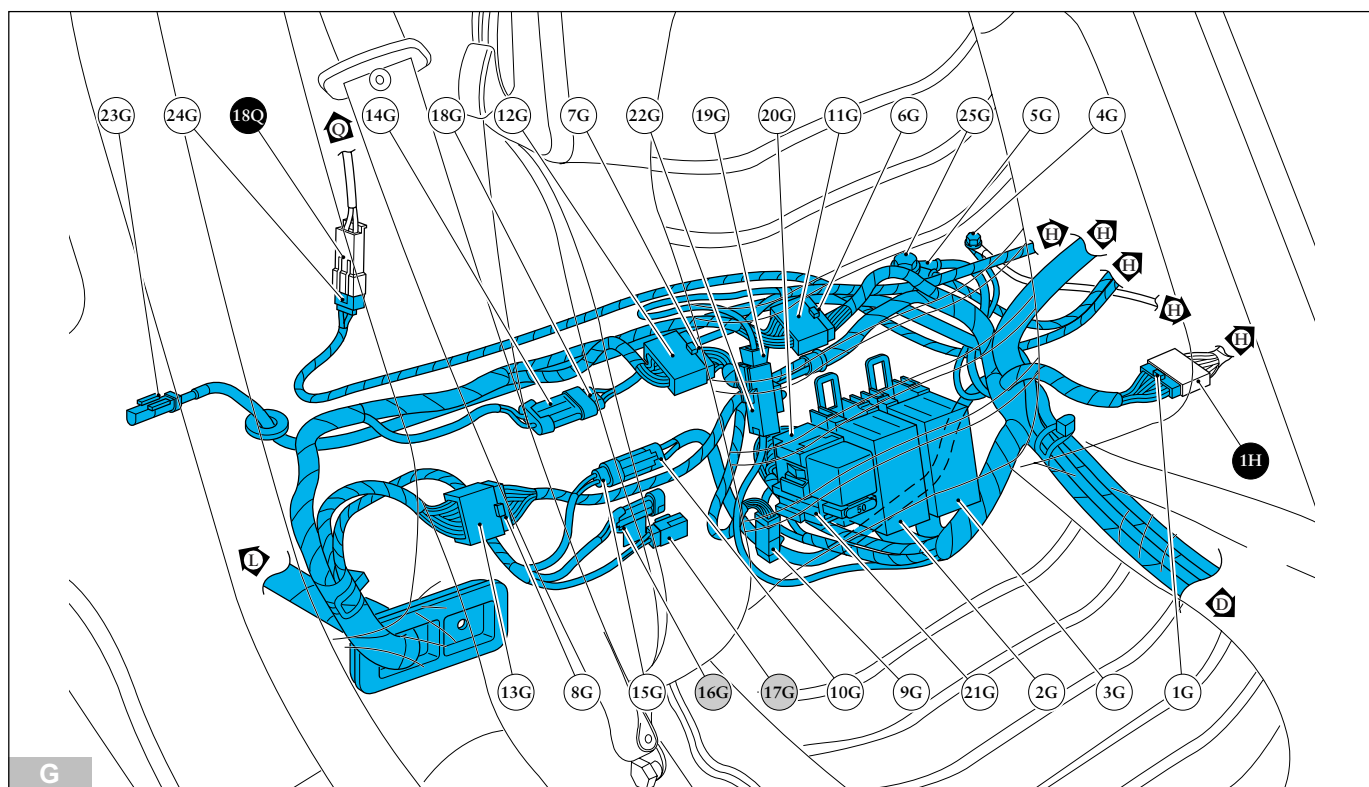



- 3G** - RH rear fuse box
- 4G** - Earth
- 5G** - Earth
- 6G** - RH rear tunnel cables to RH engine compartment cables joint
- 7G** - RH rear tunnel cables to RH engine compartment cables joint

- 8G** - RH rear tunnel cables to RH engine compartment cables joint
- 9G** - Engine indication signals joint







- 188897 - Dashboard connection cables**
- 179194 - Dashboard connection cables**
- 189234 - Dashboard connection cables (For RHD)**
- 186522 - Dashboard connection cables (For RHD)**
- 10G** - Headlight cables to RH engine compartment rear cables joint, for CAN line

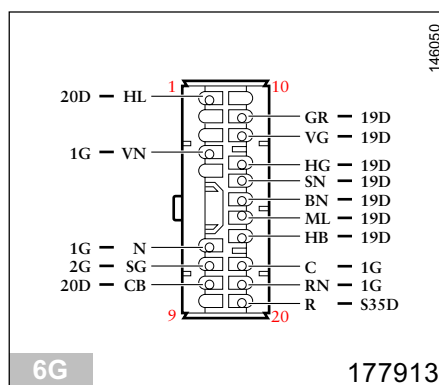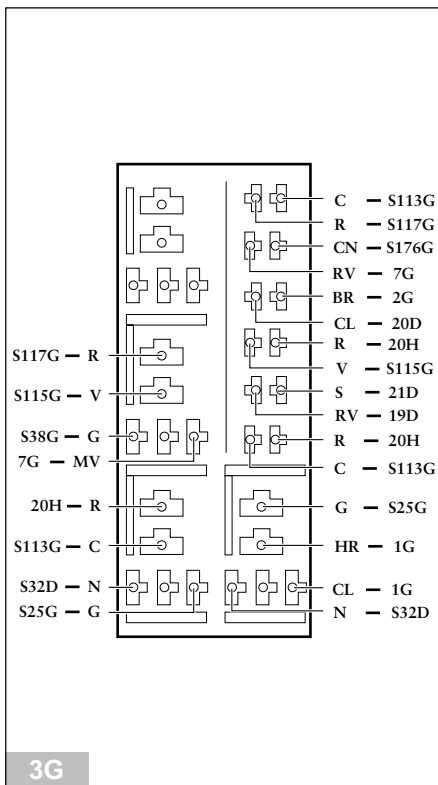

USA M.Y. 2000

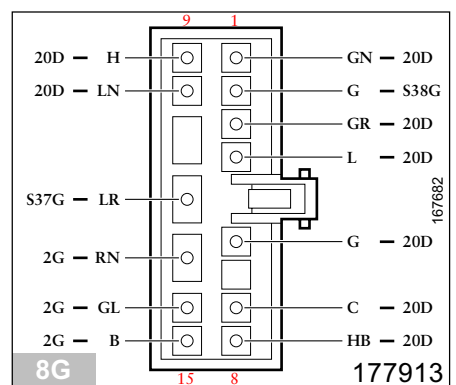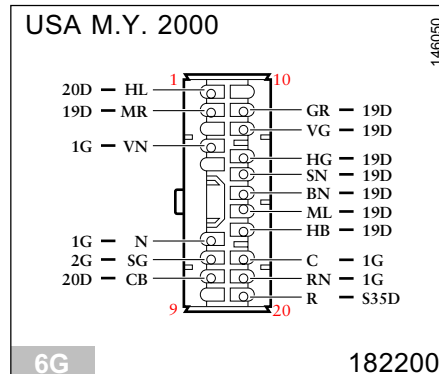

USA M.Y. 2000

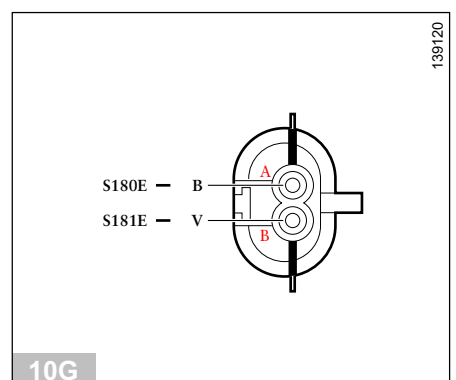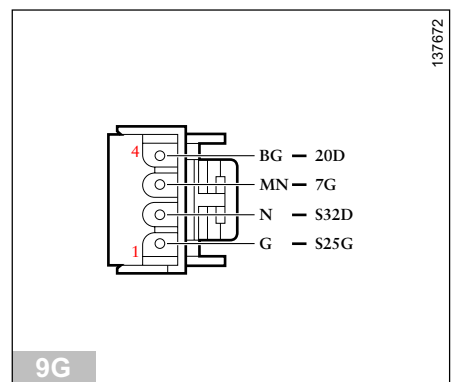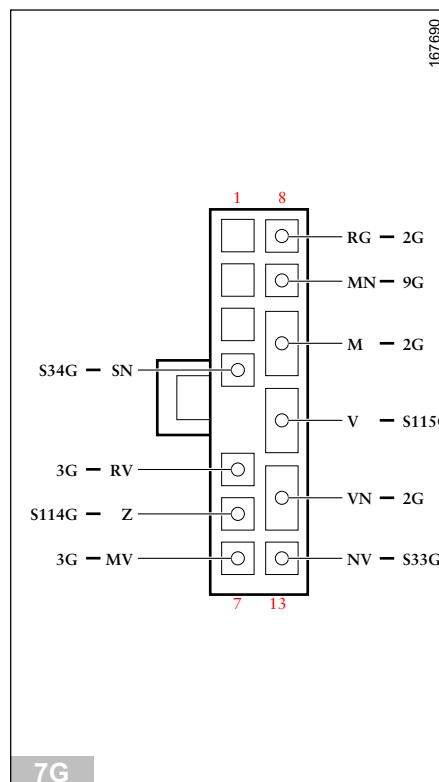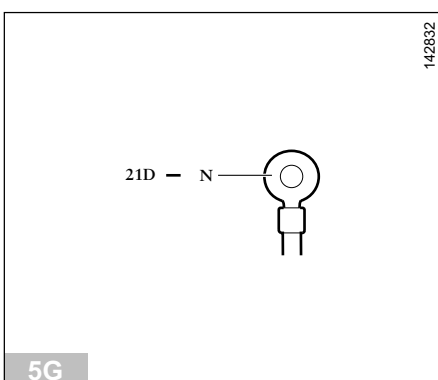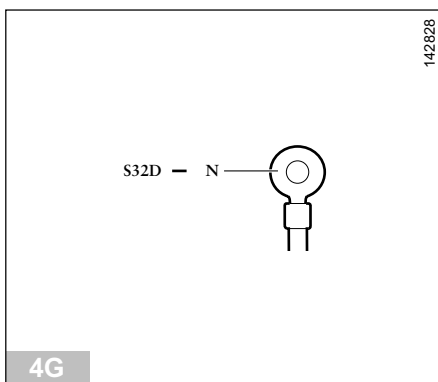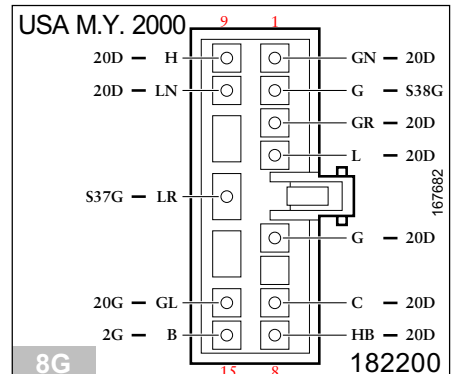

184954 - RH, engine compartment connection cables

179169 - RH, engine compartment connection cables, USA M.Y. 2000

11G - RH engine compartment cables to RH rear tunnel cables joint

12G - RH engine compartment cables to RH rear tunnel cables joint










13G - RH engine compartment cables to RH rear tunnel cables joint

14G - RH engine compartment cables to LH engine compartment cables joint, for CAN line

15G - RH engine compartment cables joint to dashboard cables joint, for CAN line

16G - RH engine compartment cables to F1 gearbox cables joint, for engine revolution indicator

17G - RH engine compartment cables to F1 gearbox cables joint, for CAN line

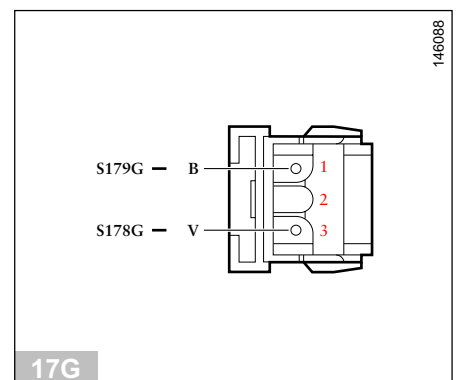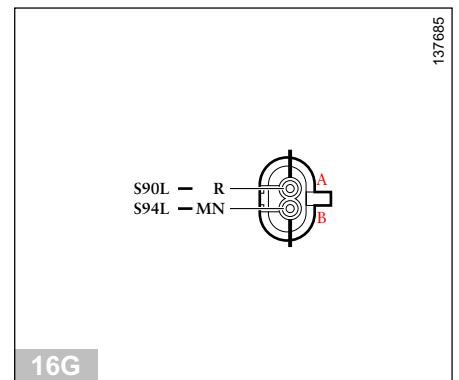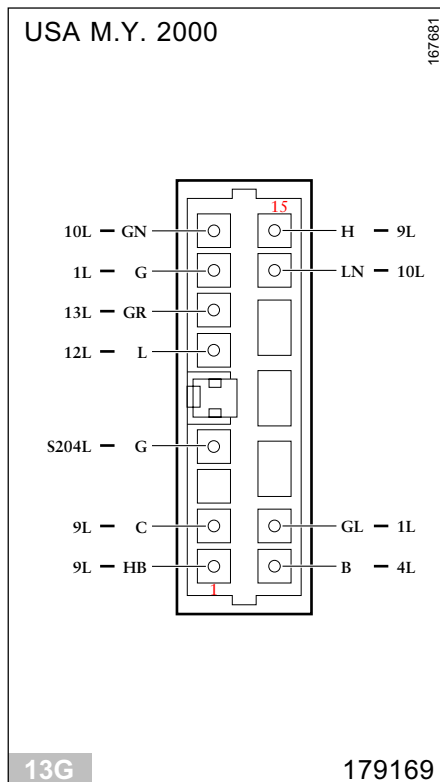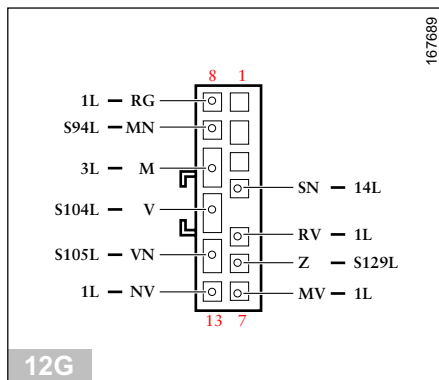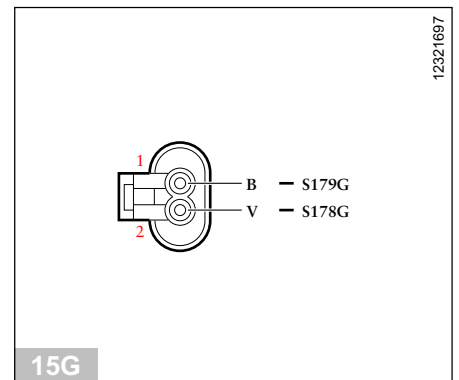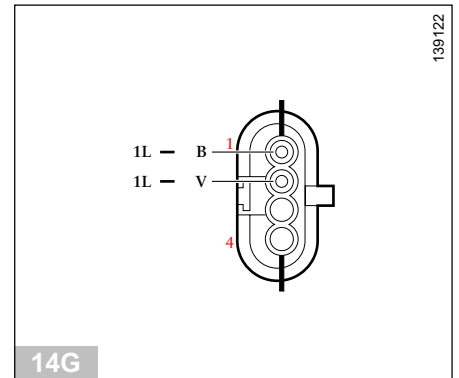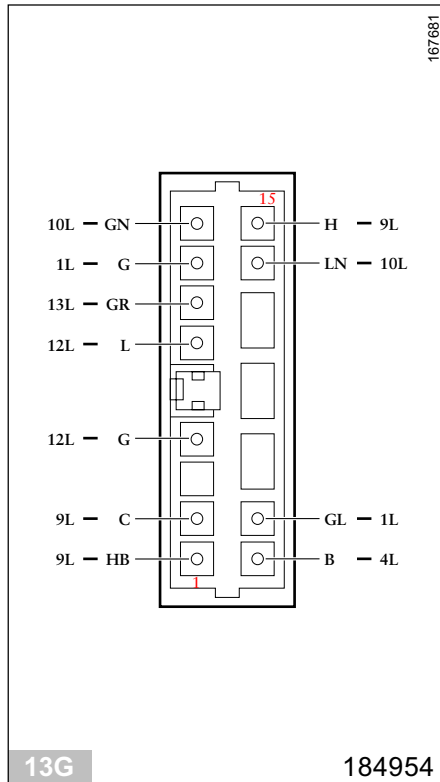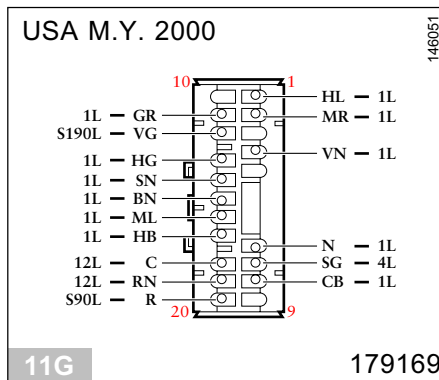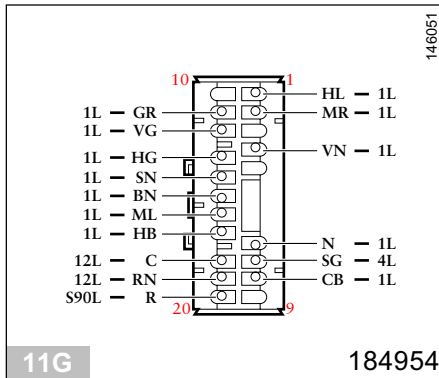

184955 - LH, engine compartment connection cables

179170 - LH, engine compartment connection cables, USA M.Y. 2000

18G - LH engine compartment cables to RH engine compartment cables joint, for CAN line

19G - LH engine compartment cables to RH rear tunnel cables joint.

182200 - RH, rear tunnel connection cables, USA M.Y. 2000

20G - Air pump relay

21G - Air pump fuse

22G - RH rear tunnel cable to LH engine compartment rear cable joint












164825 - Connection cable for Airbag system














23G - RH seatbelt pretensioner joint

179949 – Top connection cable bundle

24G - Top pump power supply

25G - Pump module earth

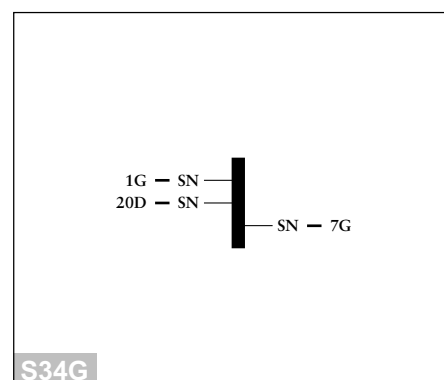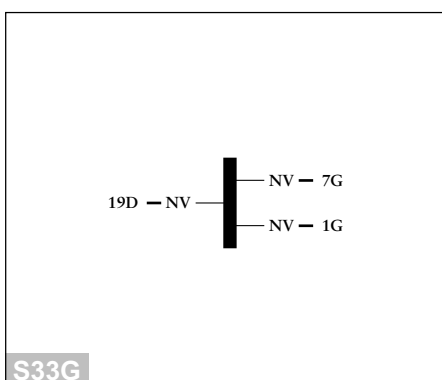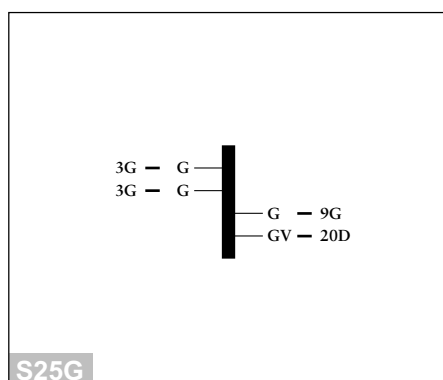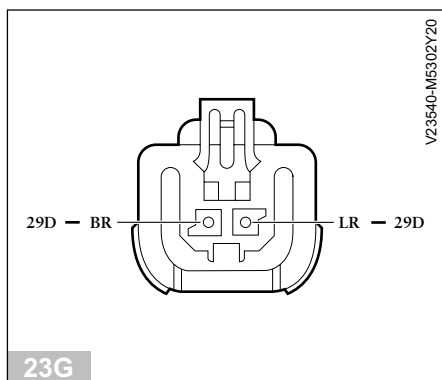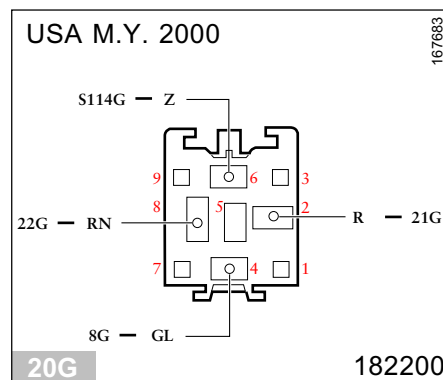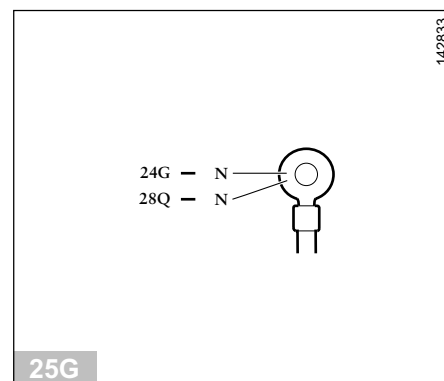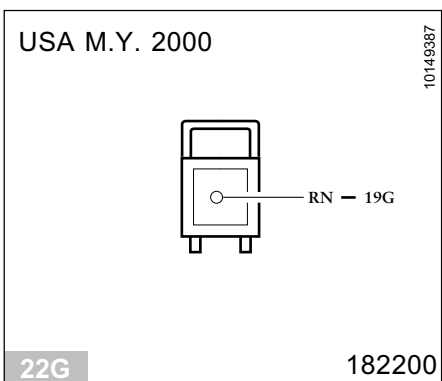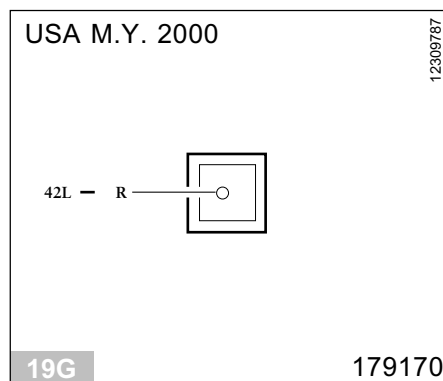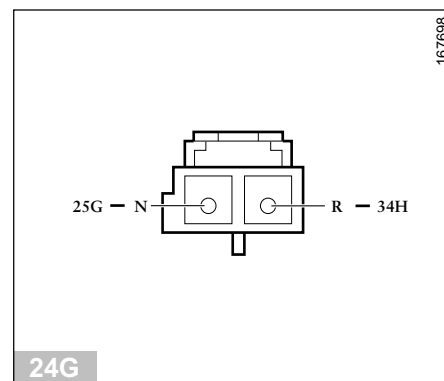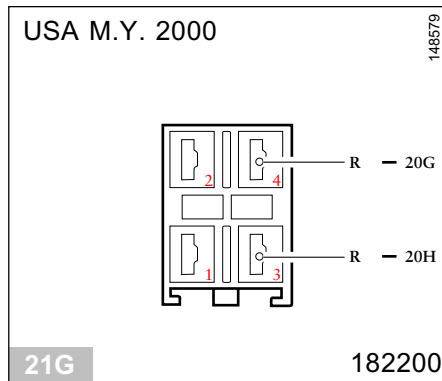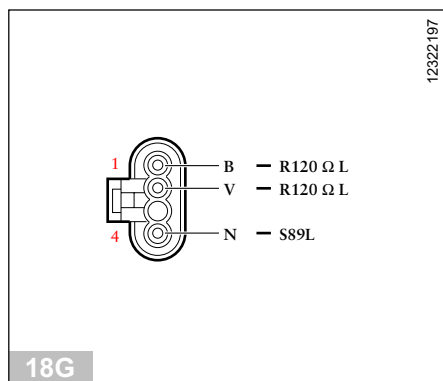

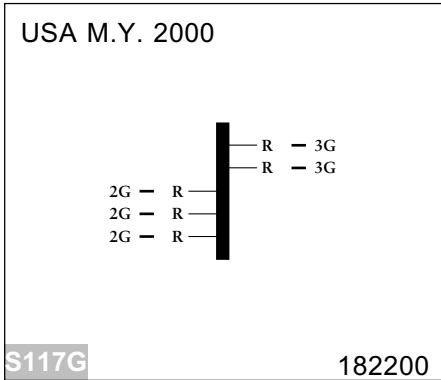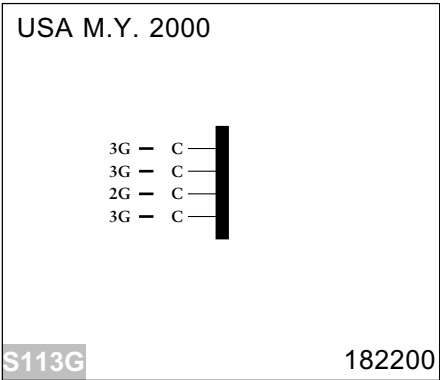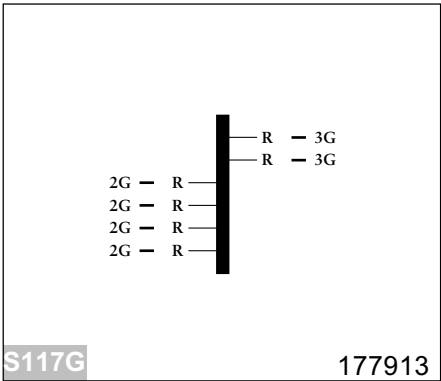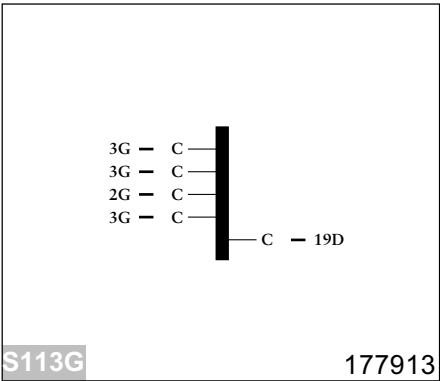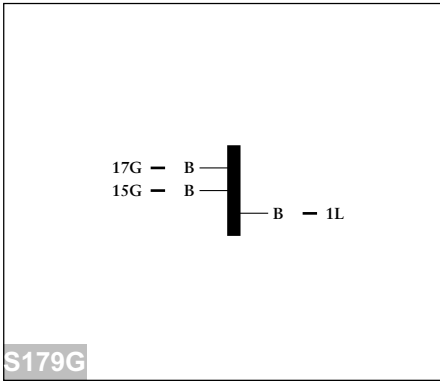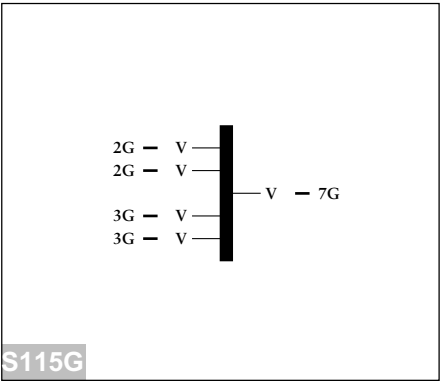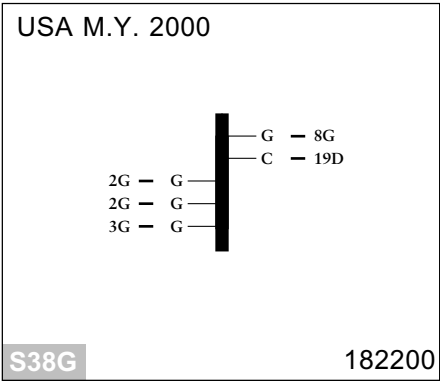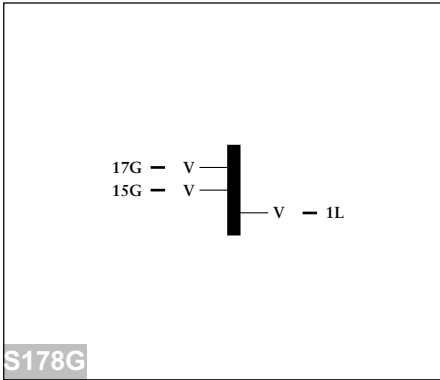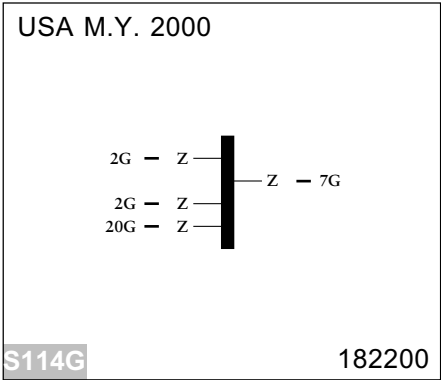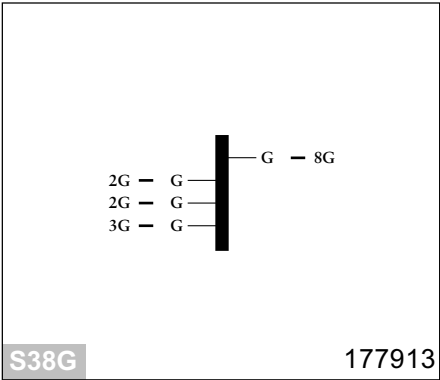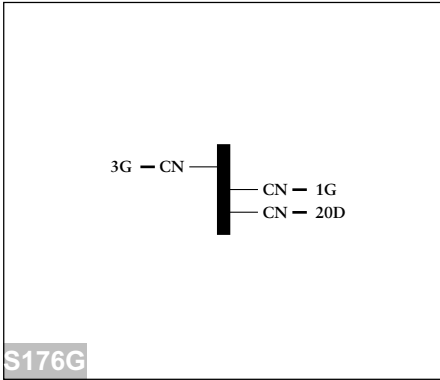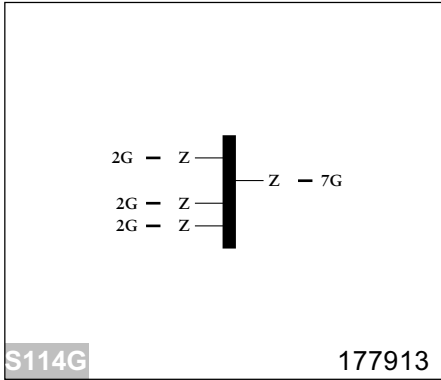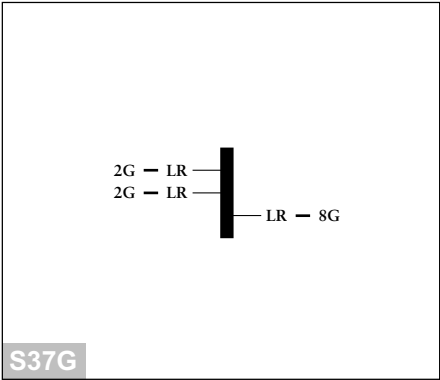

L4.09 Table H - LH SIDE REAR TUNNEL

188898 - LH, rear tunnel
connection cables






179173 - LH, rear tunnel
connection cables

1H - LH tunnel cables to RH
tunnel cables joint







2H - LH tunnel cables to tunnel
switch cables joint

3H - Power earth

4H - Earth

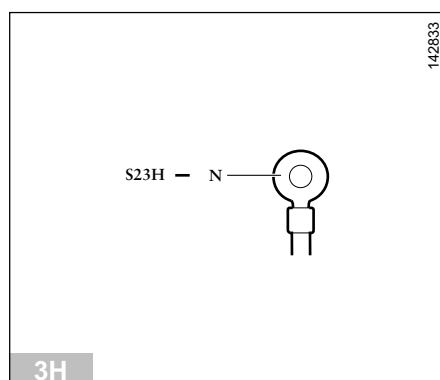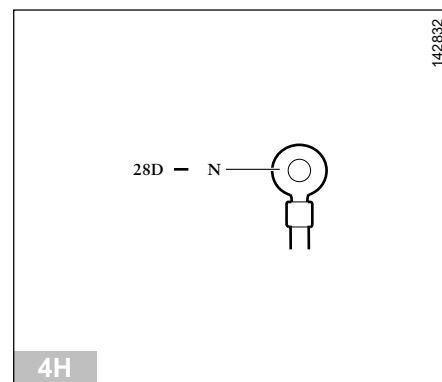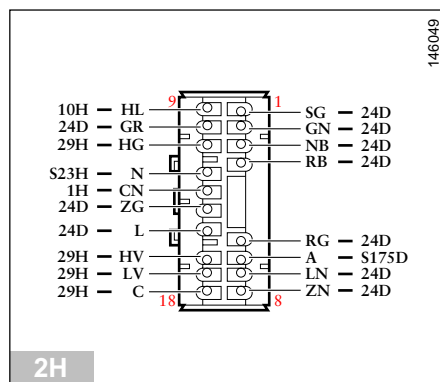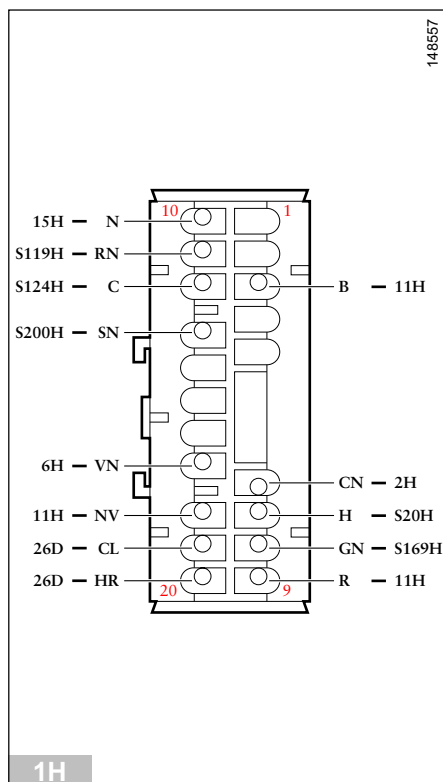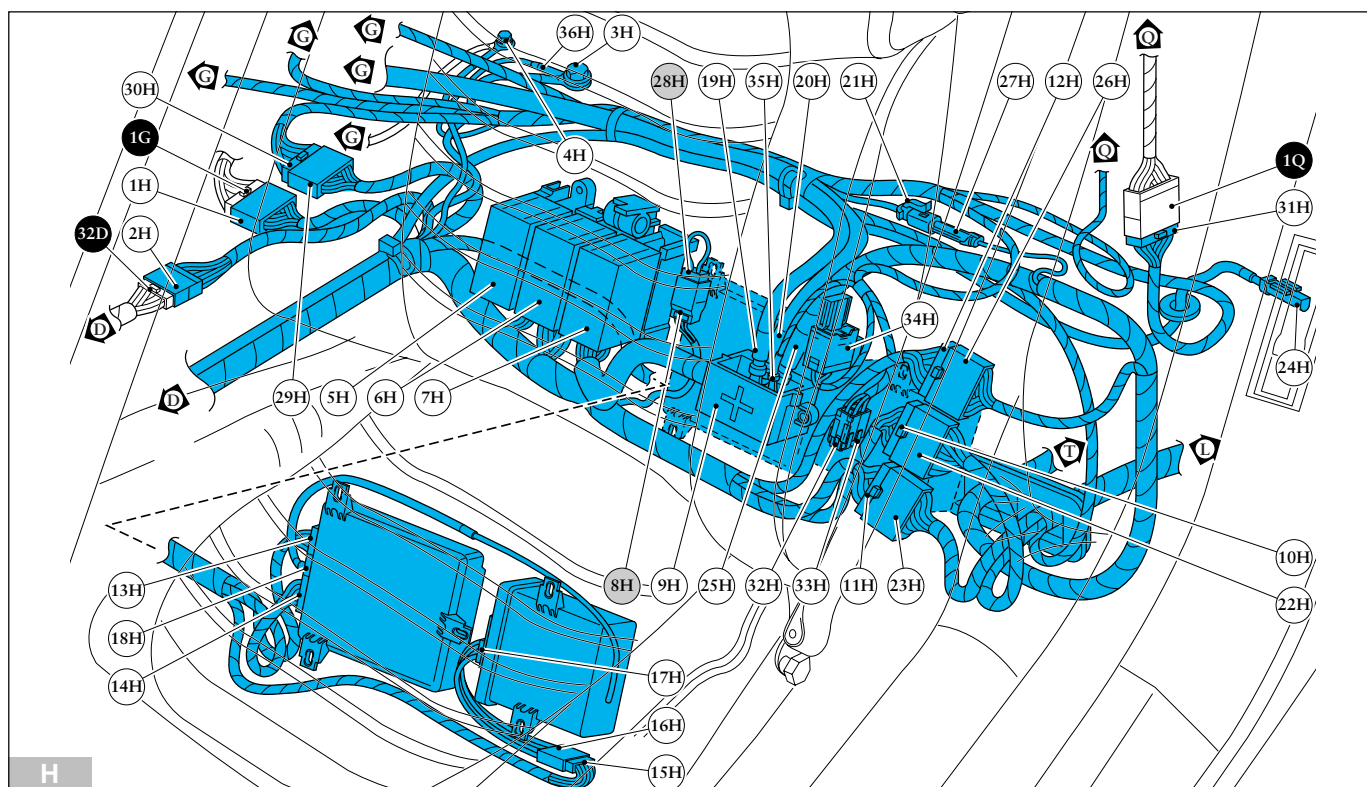












- 10H - LH tunnel cables to LH engine compartment rear cables joint**

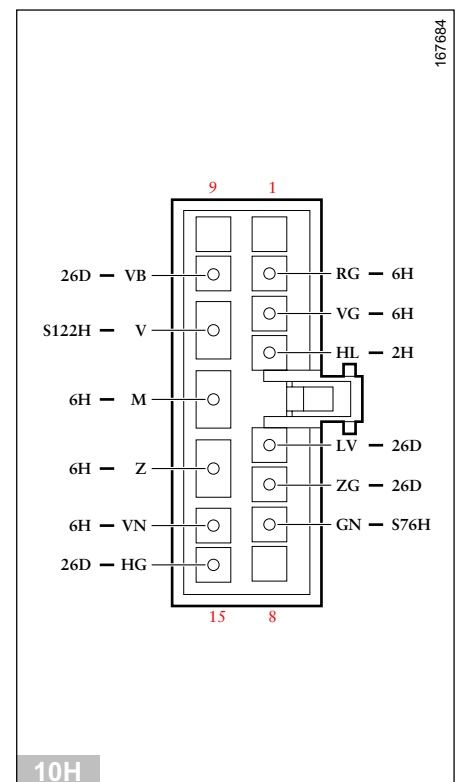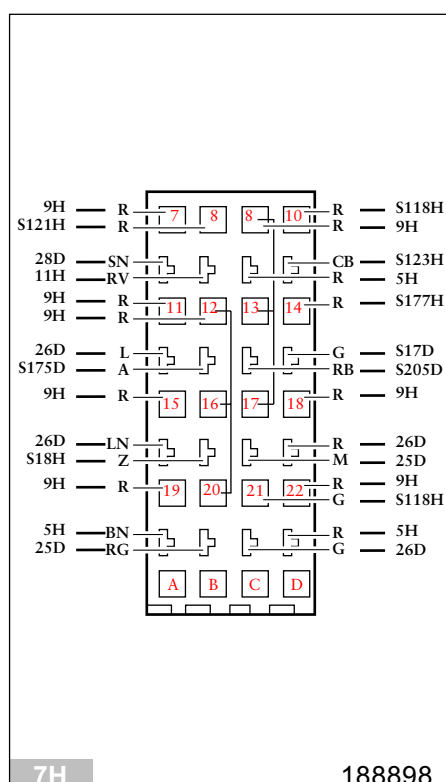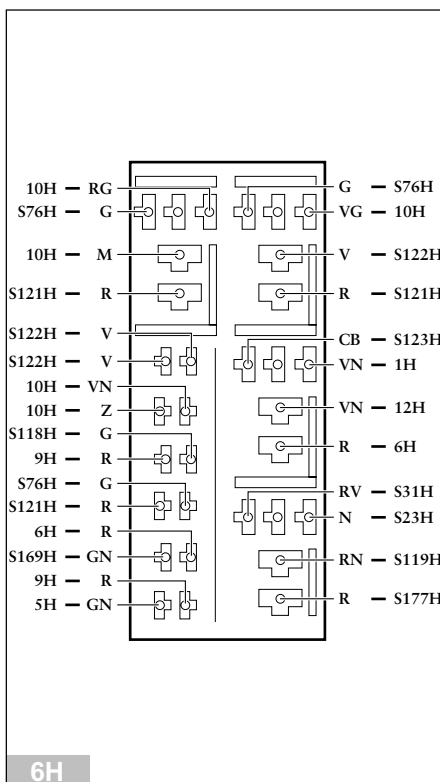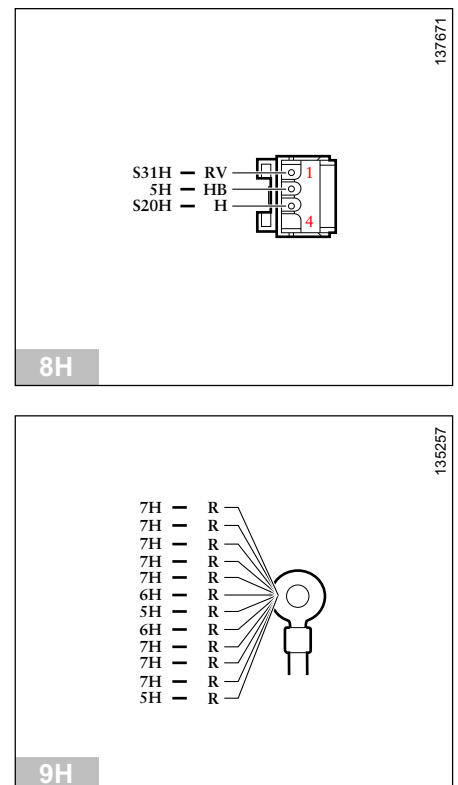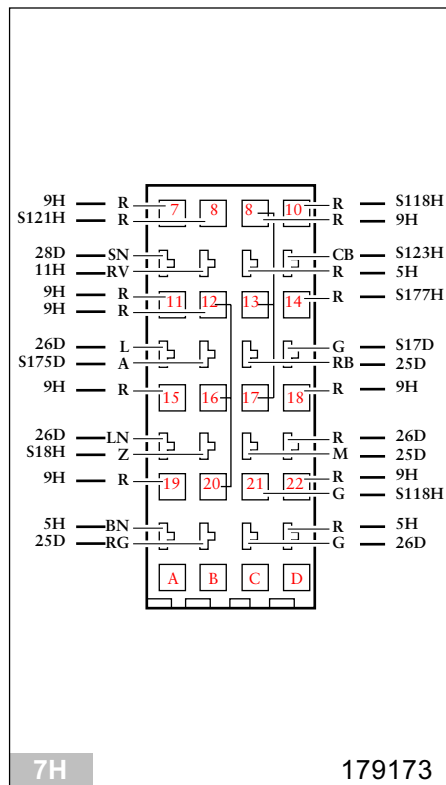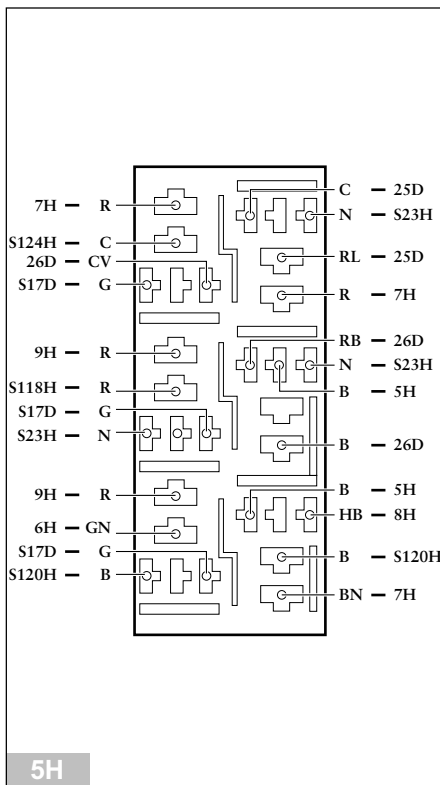

- 11H** - LH tunnel cables to LH engine compartment rear cables joint
- 12H** - LH tunnel cables to engine services wiring loom joint
- 13H** - Alarm system ECU
- 14H** - Alarm system ECU
- 15H** - Joint for alarm system ECU jumpers

- 166420** - Cables to alarm system ECU
- 16H** - Jumpers' joint for cars without alarm system
- 17H** - Injection - alarm system interface ECU
- 18H** - Alarm system aerial ECU

- 177913** - RH, rear tunnel connection cables
- 182200** - RH, rear tunnel connection cables, USA M.Y. 2000
- 19H** - Battery positive
- 20H** - Positive for RH fuse box
- 21H** - Charge indicator joint

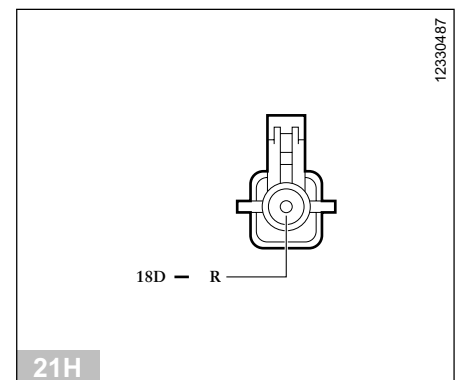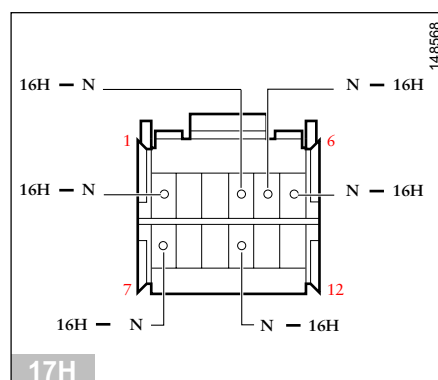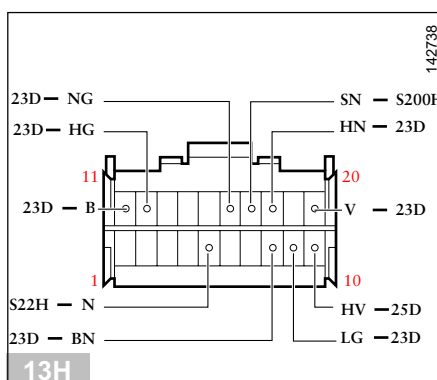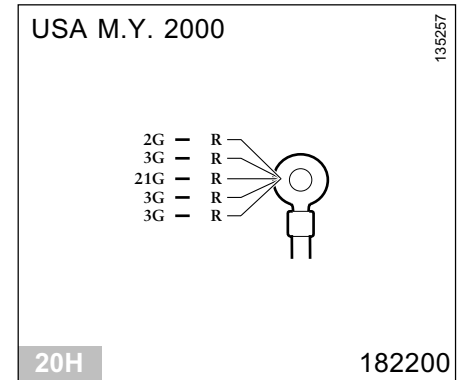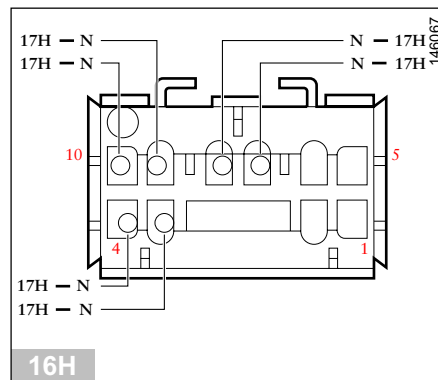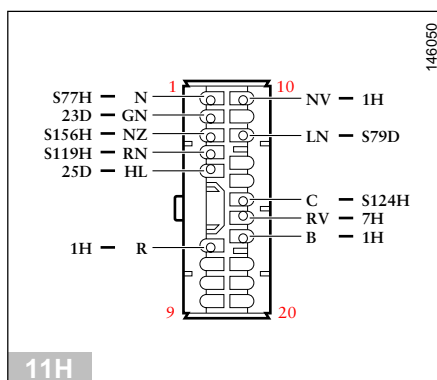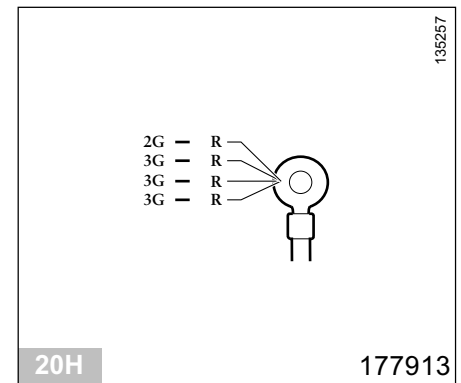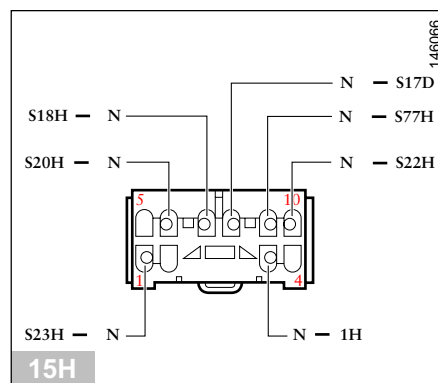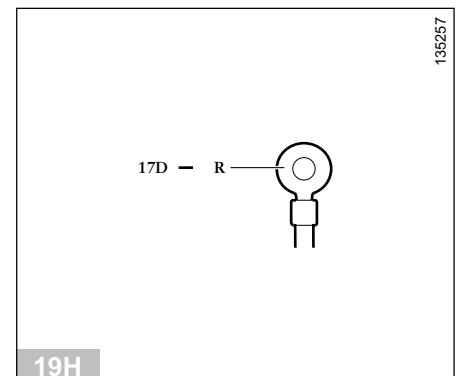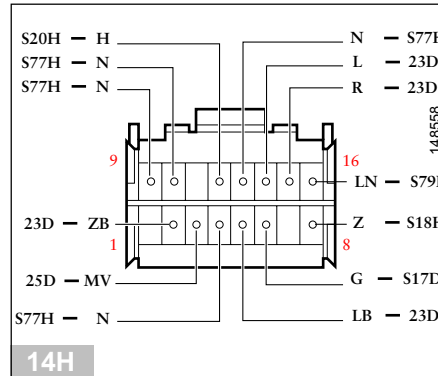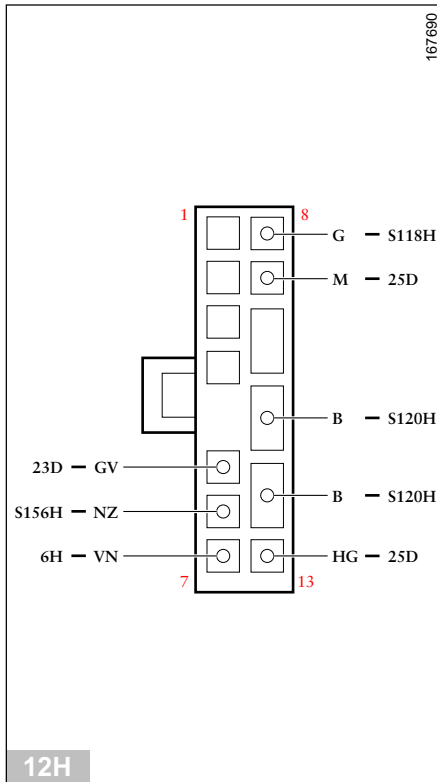

184955 - LH, engine compartment connection cables

179170 - LH, engine compartment connection cables, USA M.Y. 2000

22H - LH engine compartment rear cables to LH tunnel cables joint

23H - LH engine compartment rear cables to LH tunnel cables joint

164825 - Connection cable for Airbag system

24H - LH seat belt pretensioner joint

188108 - Engine services connection wiring loom

25H - Positive for starter motor

26H - Engine services wiring loom to LH tunnel cables joint

27H - Charge indicator joint

178411 - Jumper for mechanical gearbox start-up

28H - Jumper for mechanical gearbox start-up











188898 - LH, rear tunnel connection cables

179173 - LH, rear tunnel connection cables













29H - LH rear tunnel cables joint to top connection cable bundle


179949 - Top connection cable bundle

30H - Top connection cable bundle joint to LH tunnel cables

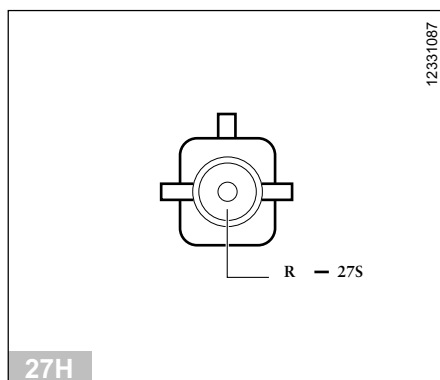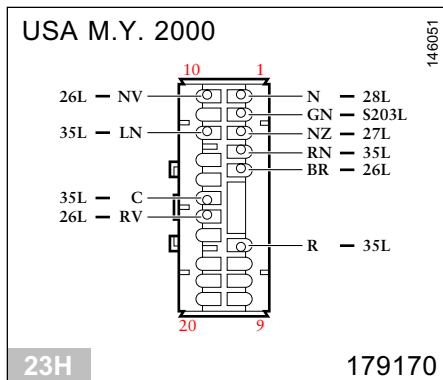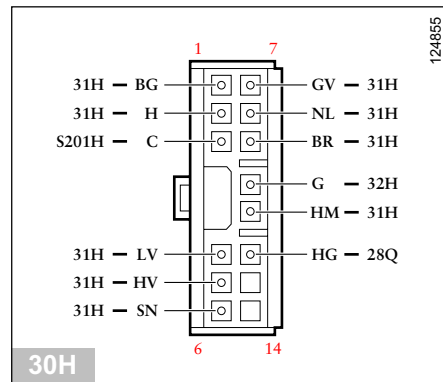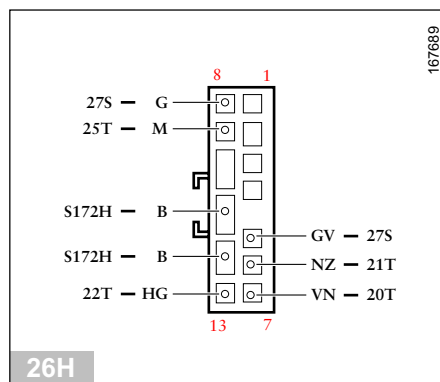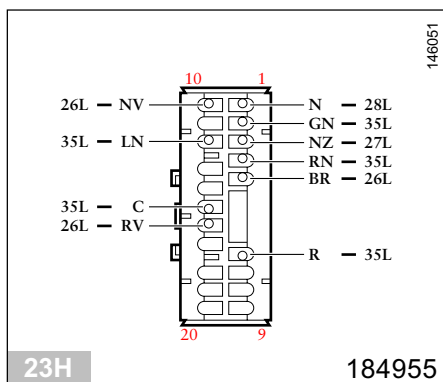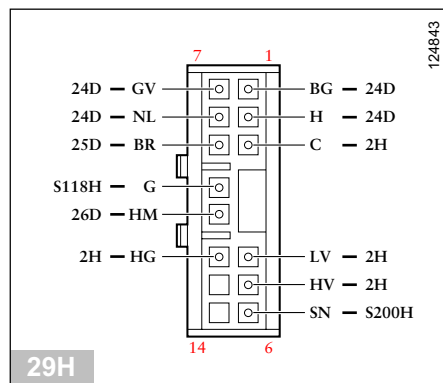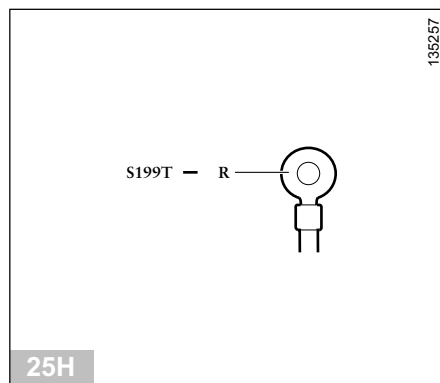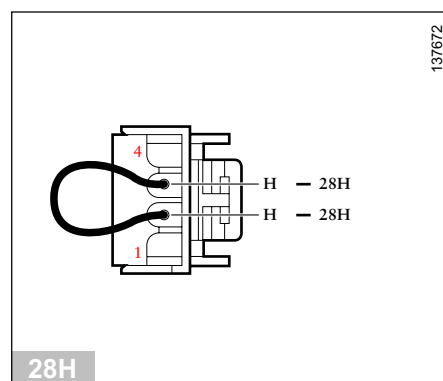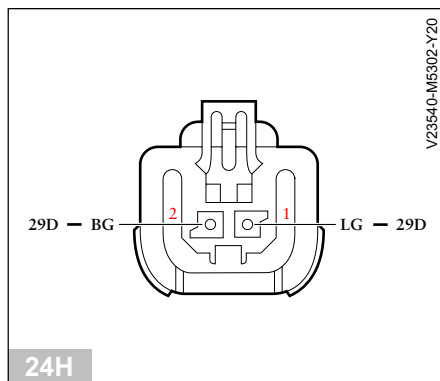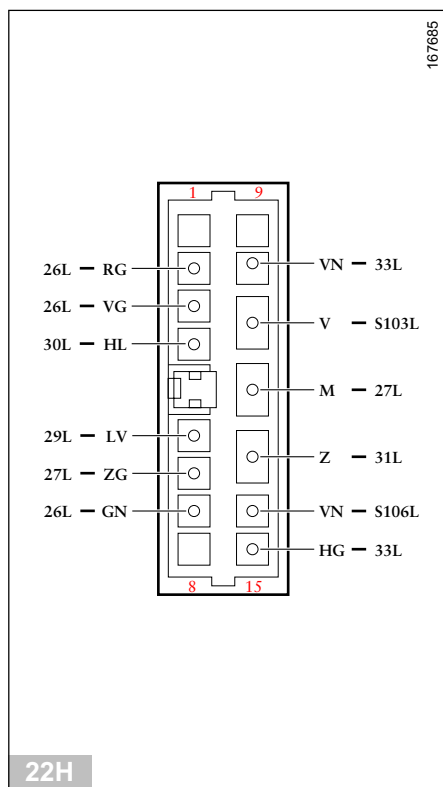


- 31H** - Top connection cable bundle joint to top cables.
- 32H** - Fuse 7,5 A (key power supply).
- 33H** - Fuse 15 A (battery power supply).
- 34H** - 30 A maxi fuse for hydraulic pump
- 35H** - Battery positive
- 36H** - Electronic earth

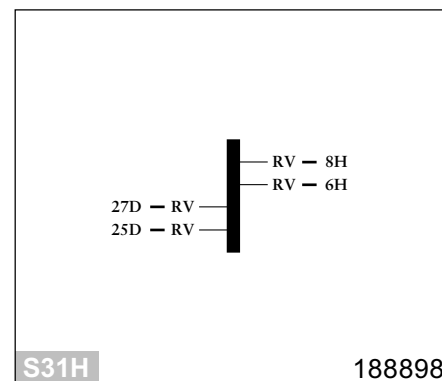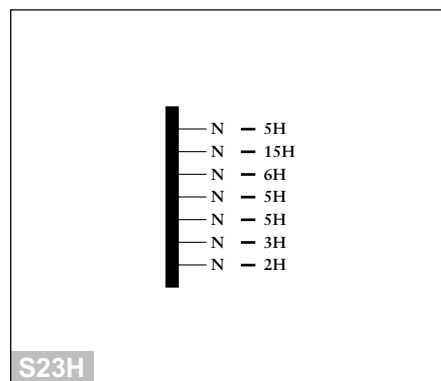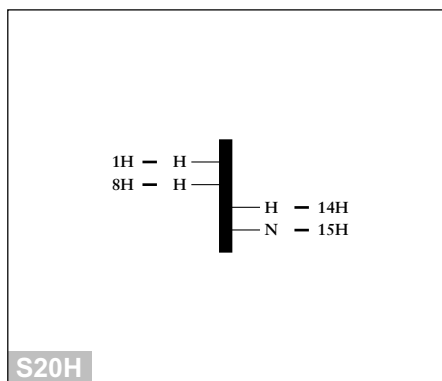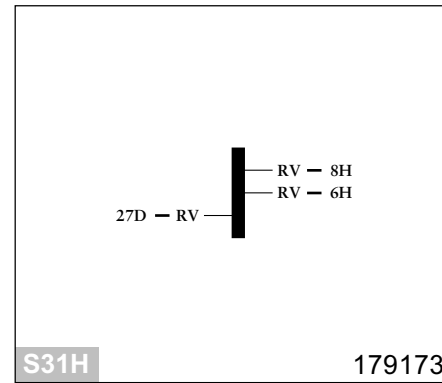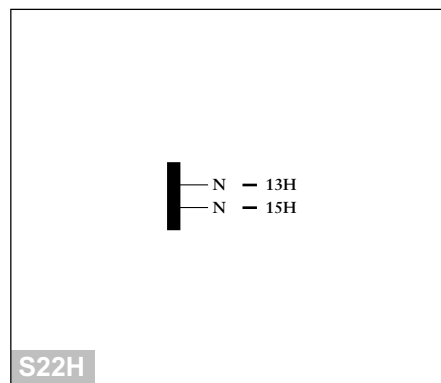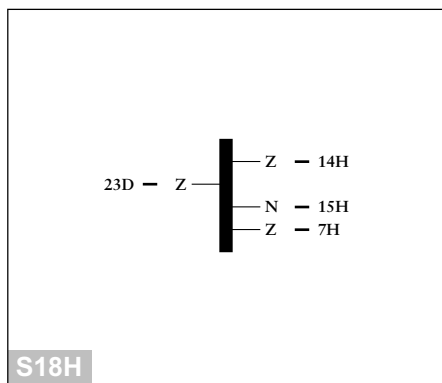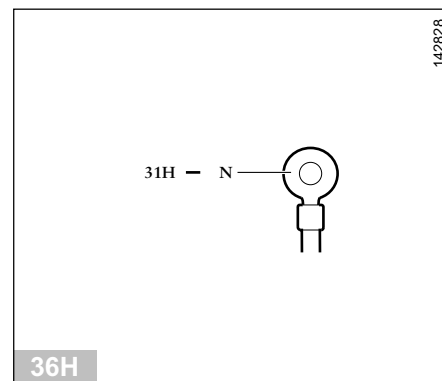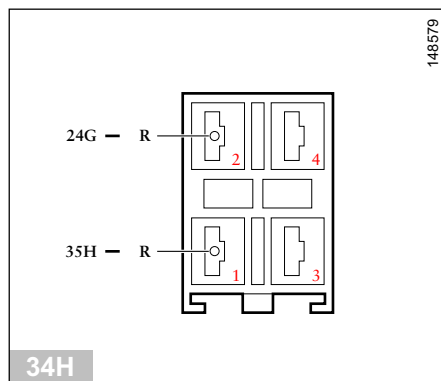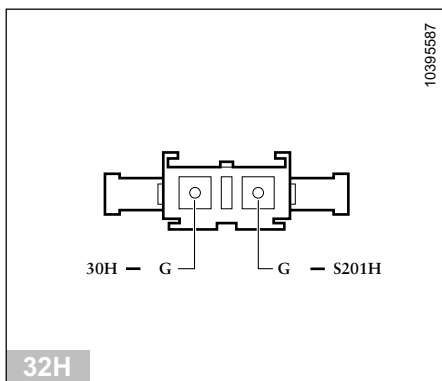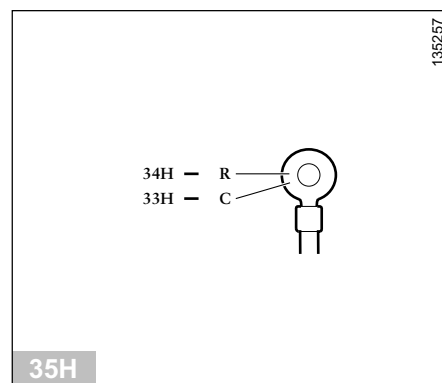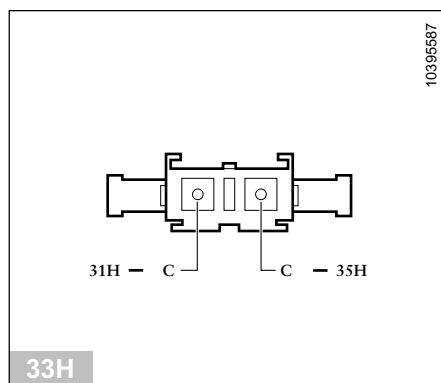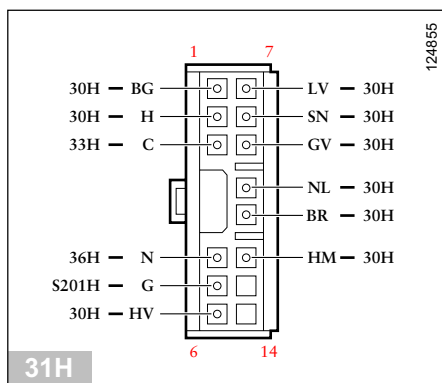


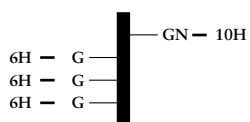


S76H

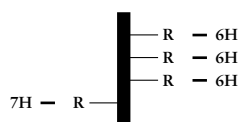

S121H

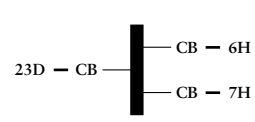


S123H

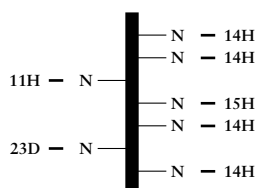


S77H


179173

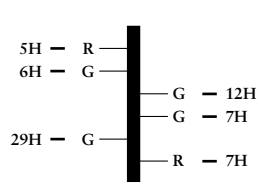

S118H

 


S124H

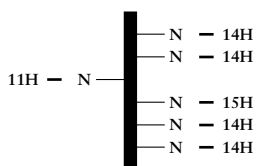


S77H

 
188898




S119H

 


S156H

 


S120H

 


S122H

 


S169H

 


S172H

 

S177H

 

S200H

 


S201H

L4.10 Table L - ENGINE COMPARTMENT CABLES


184954 - RH, engine
compartment connection cables
179169 - RH, engine
compartment connection
cables, USA M.Y. 2000

- 1L - RH Bosch Motronic ECU for
injection start-up
- 3L - RH fuel pump
- 4L - RH rear cables to RH
injection cables joint

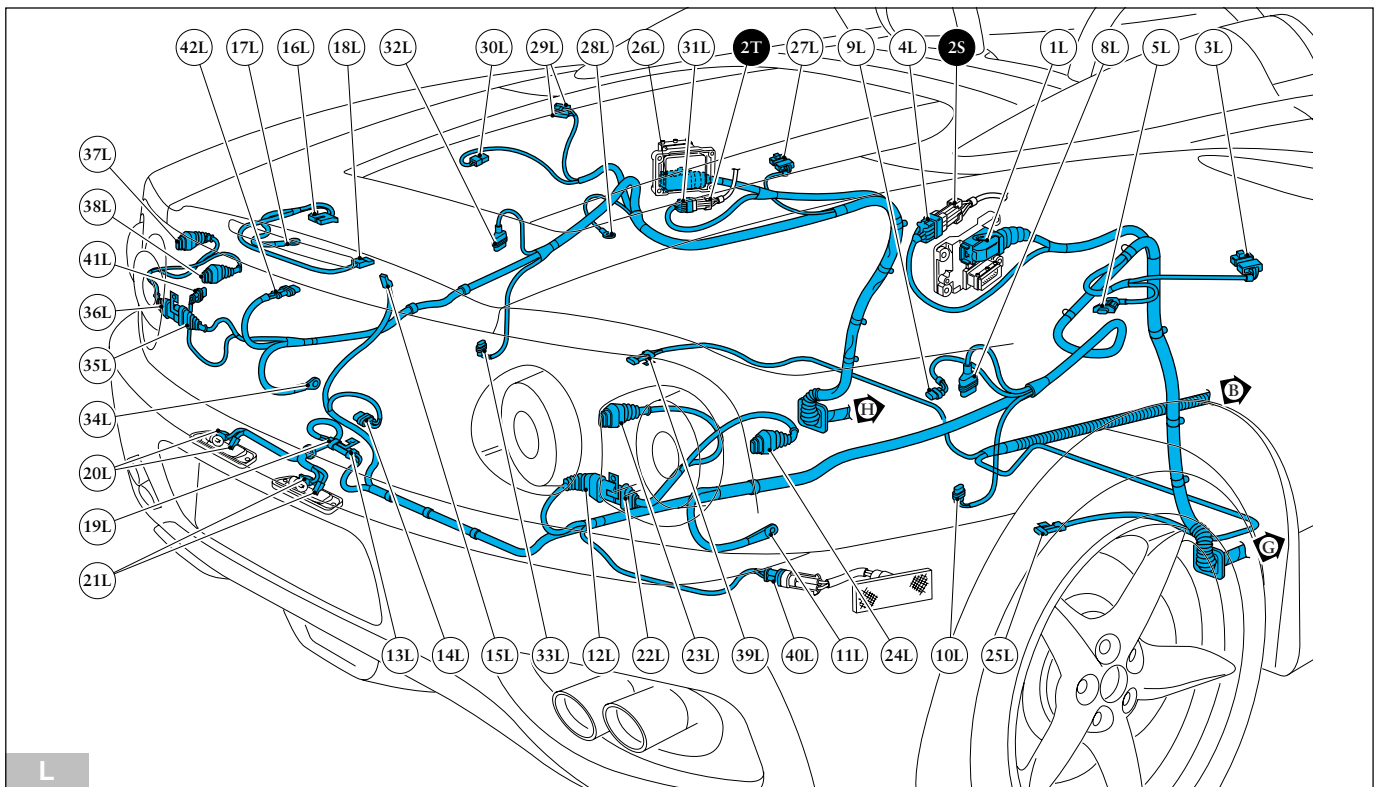

USA M.Y. 2000

172224

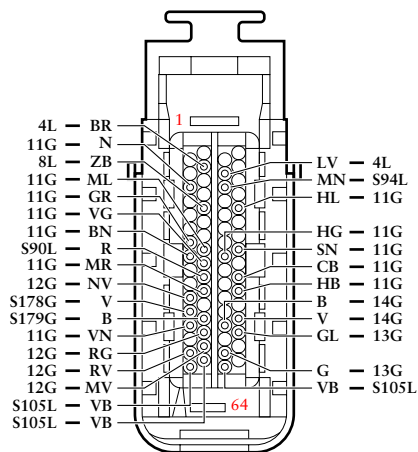


1L

184954


USA M.Y. 2000

172224

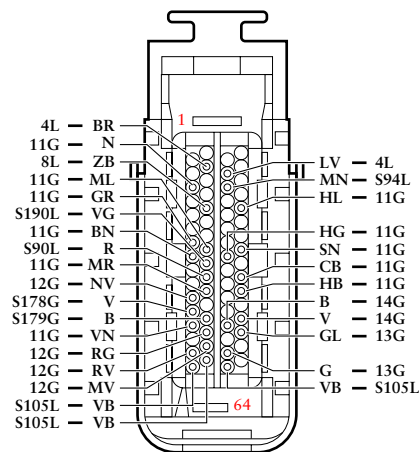


1L

179169

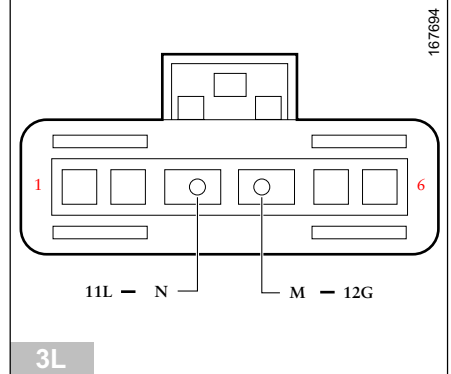

3L

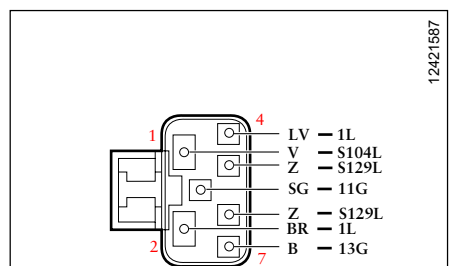













4L

181112

- 5L** - Fuel pressure sensor
- 8L** - Control ECU for RH bank catalytic converter
- 9L** - Vertical acceleration sensor (rear axle)
- 10L** - Solenoid valve for RH rear shock absorber
- 11L** - Earth
- 12L** - Engine compartment rear cables to RH headlight cables joint

- 13L** - Engine compartment rear cables to number plate light cable joint
- 14L** - Micro-switch on rear lid lock
- 15L** - Contact between body shell and door

- 168843 - Stop-lamp connection cables**
- 16L** - Additional stop light

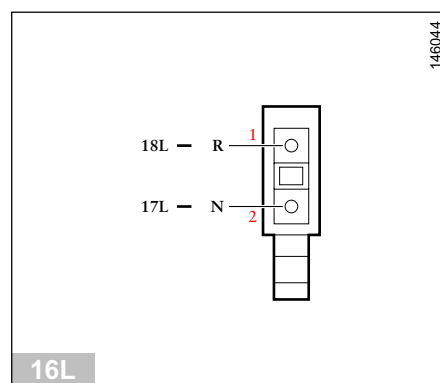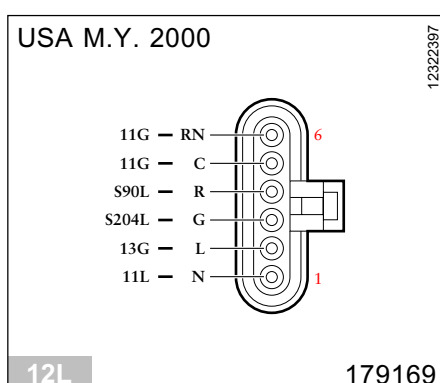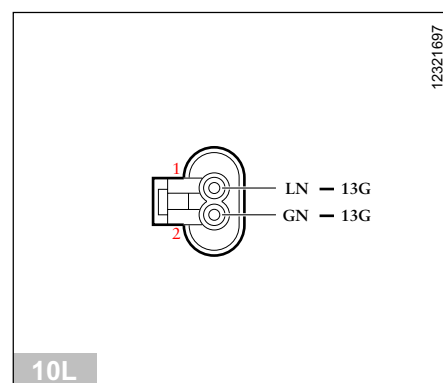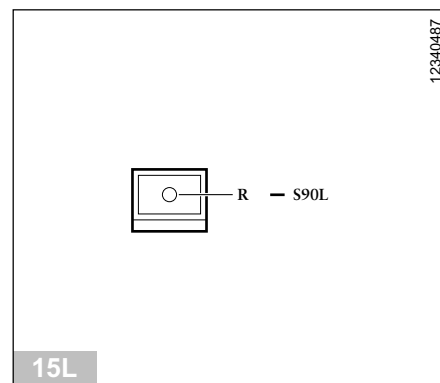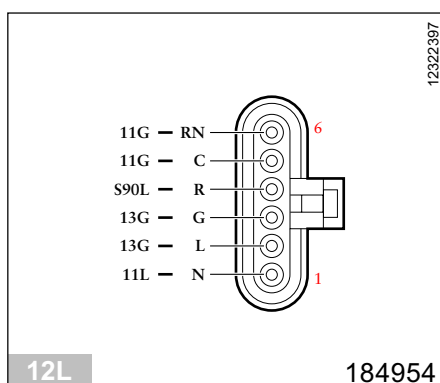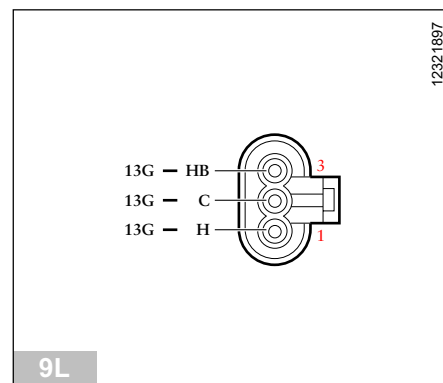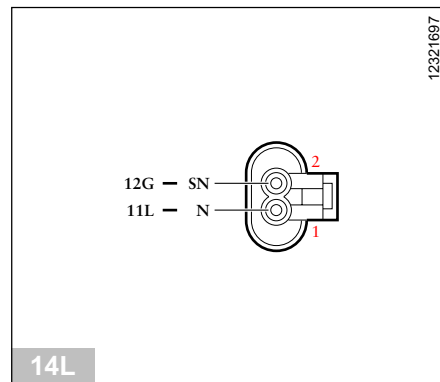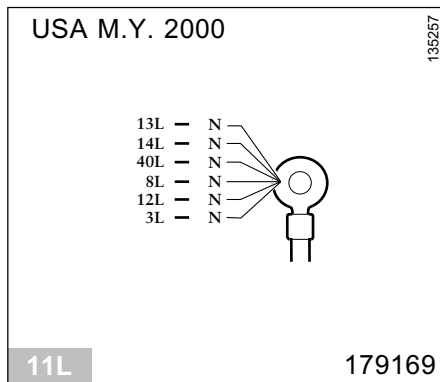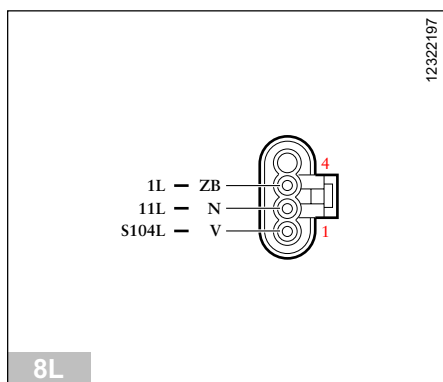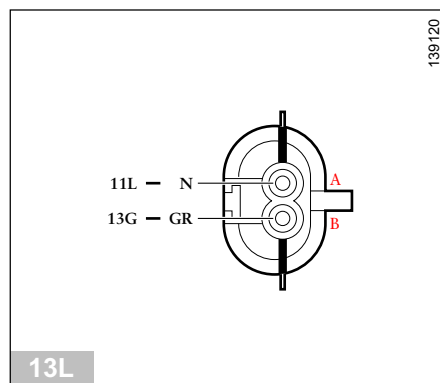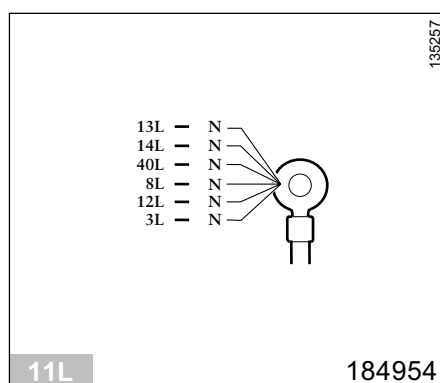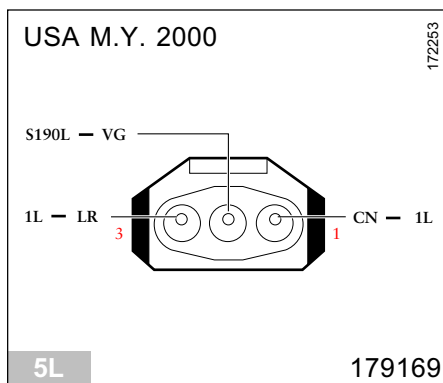

17L - Earth

18L - Contact between body shell and door

182985 - Number plate light cables

19L - Headlight cables to RH engine compartment rear cables joint

20L - LH number plate light

21L - RH number plate light

173429 - Rear lights connection cables

182208 - Rear lights connection cables, USA M.Y. 2000

22L - Headlight cables to RH engine compartment rear cables joint













23L - Tail light for RH reverse gear - rear fog lights

24L - Tail light for RH dipped - direction indicator - stop lights

178310 - ABS/ASR system connection cables

177243 - ABS/ASR system connection cables (For RHD)

25L - RH rear toothed wheel sensor

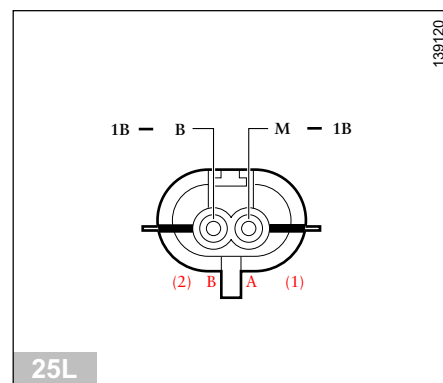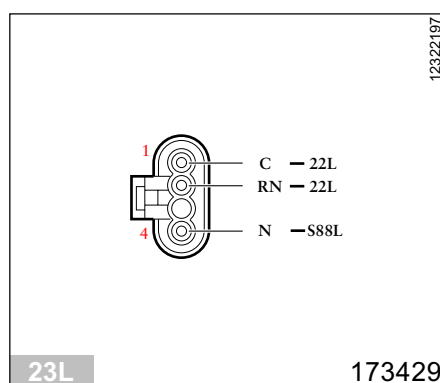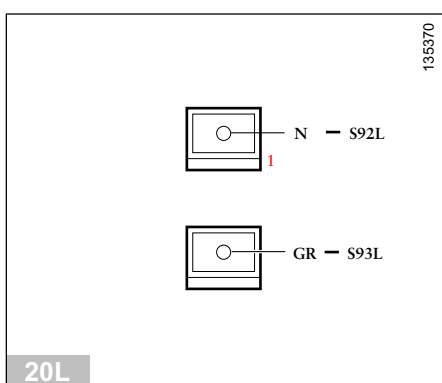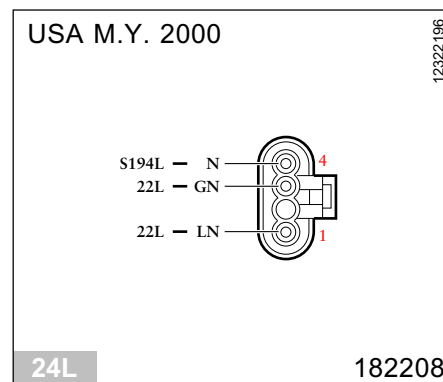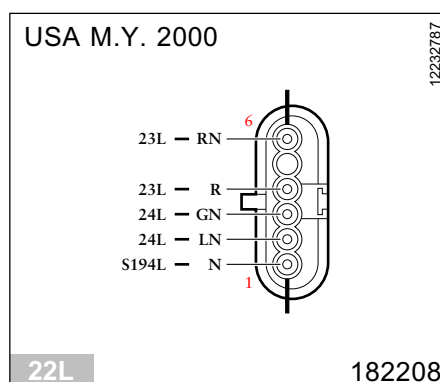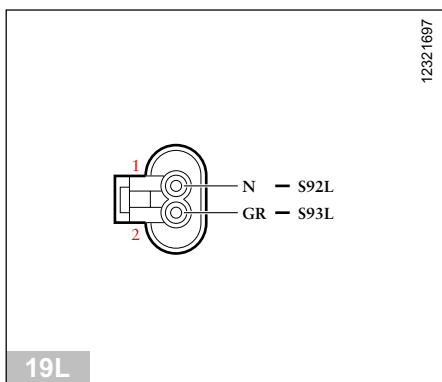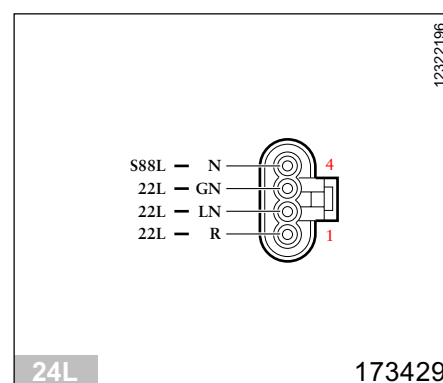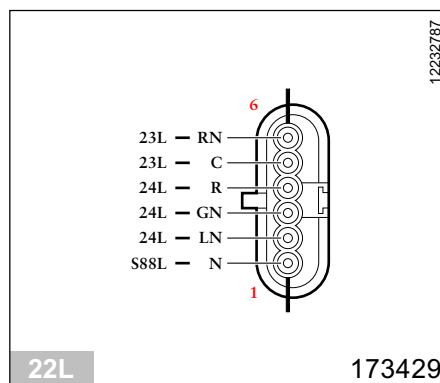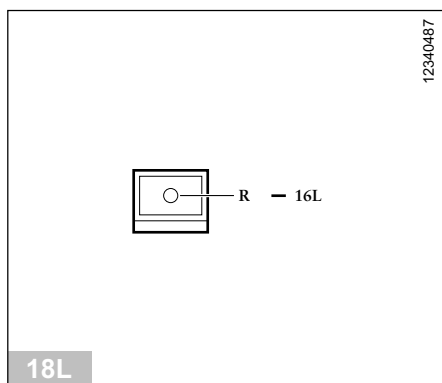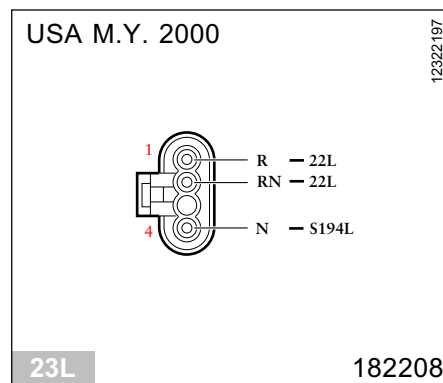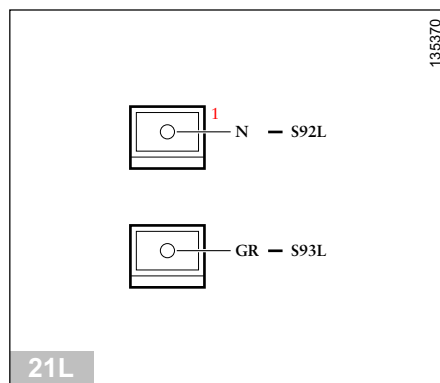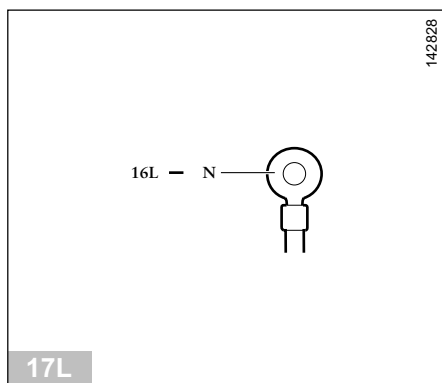

**184955 - LH, engine
compartment connection cables
179170 - LH, engine
compartment connection cables,
USA M.Y. 2000**

**26L - LH Bosch Motronic ECU for
injection start-up**

27L - LH fuel pump

28L - Earth

**29L - Button for fuel tank flap
warning light**











**30L - Solenoid for fuel tank flap
opening**

**31L - LH rear cables to LH
injection cables joint**

**32L - Control ECU for LH bank
catalytic converter**

**33L - Solenoid valve for rear LH
shock absorber**

34L - Earth

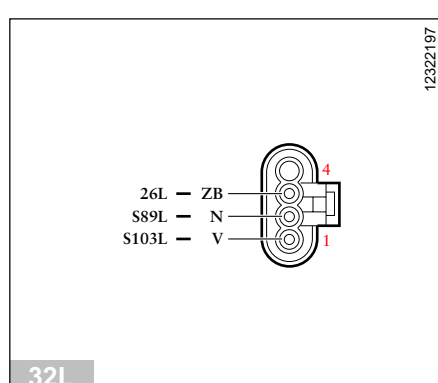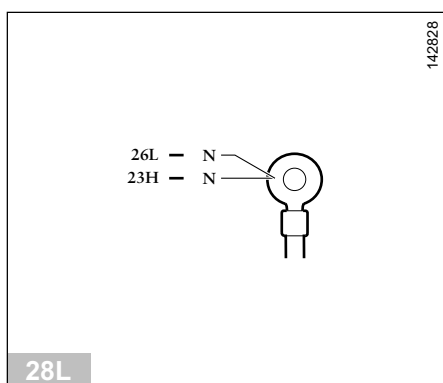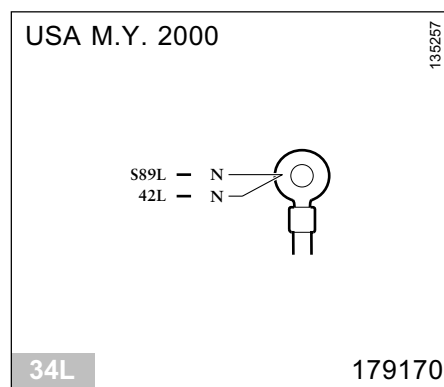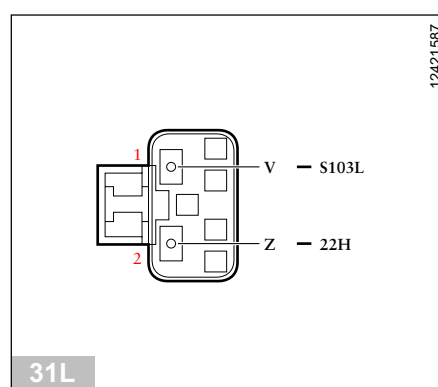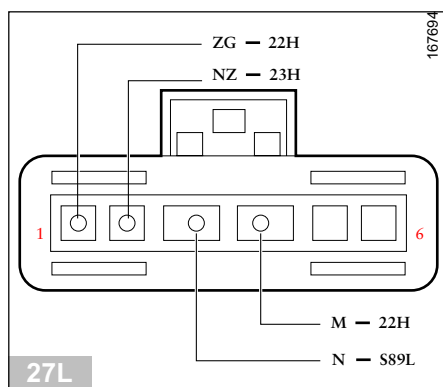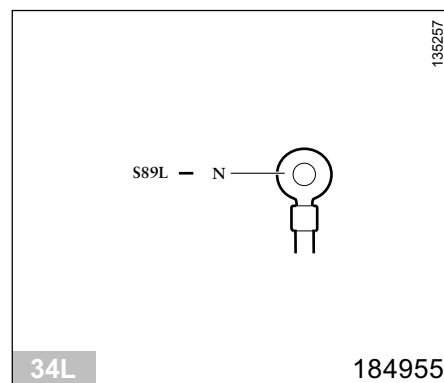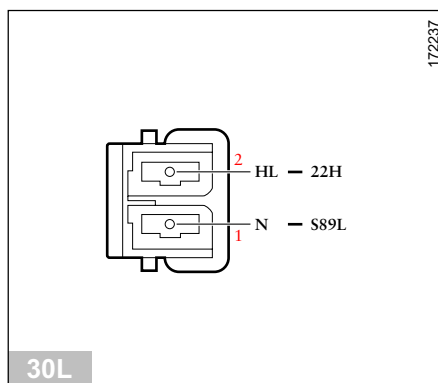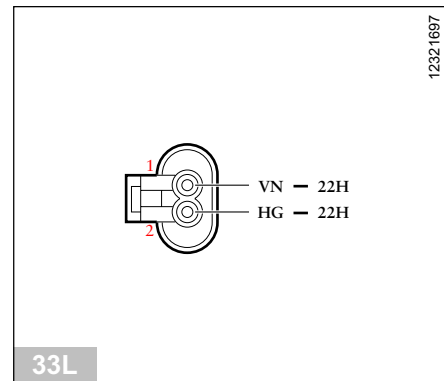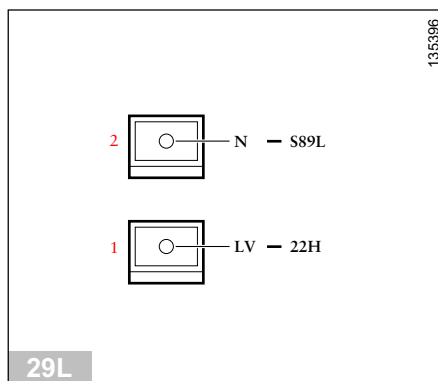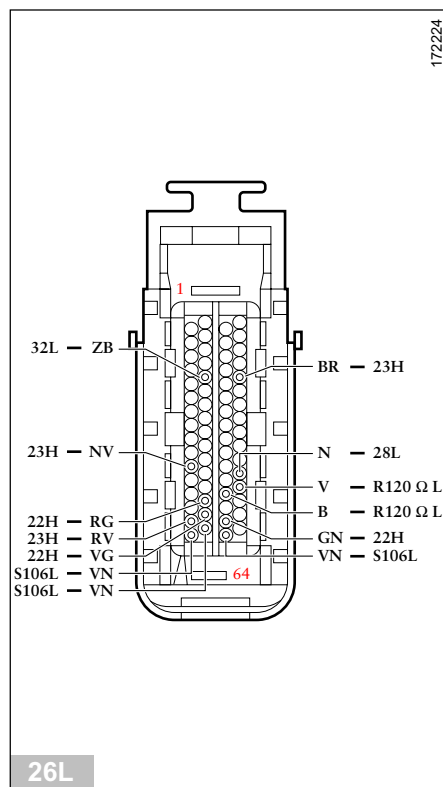

35L - Engine compartment rear cables to LH headlight cables joint

173429 - Rear lights connection cables

182208 - Rear lights connection cables, USA M.Y. 2000

36L - Headlight cables to LH engine compartment rear cables joint

37L - Tail light for LH dipped - direction indicator - stop light
38L - Tail light for LH reverse gear - rear fog lights

178310 - ABS/ASR system connection cables

177243 - ABS/ASR system connection cables (For RHD)

39L - LH rear toothed wheel sensor












179169 - RH engine compartment connection cables, USA M.Y. 2000

40L - RH rear side marker

179170 - LH, engine compartment connection cable, USA M.Y. 2000

41L - LH rear side marker

42L - Air pump

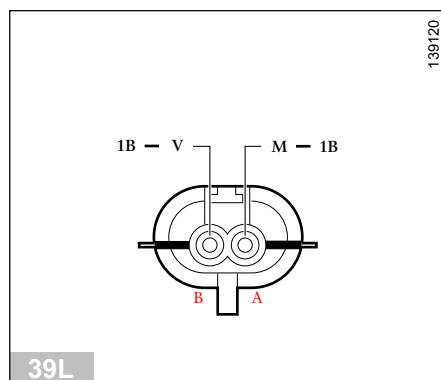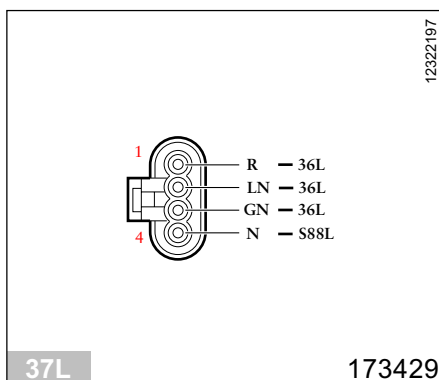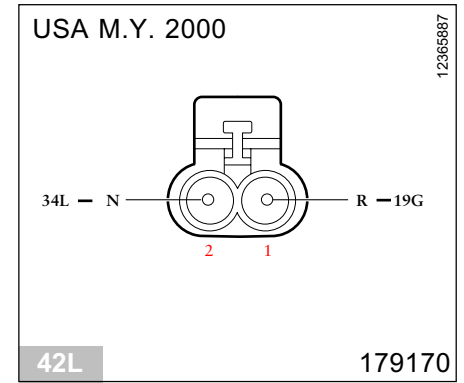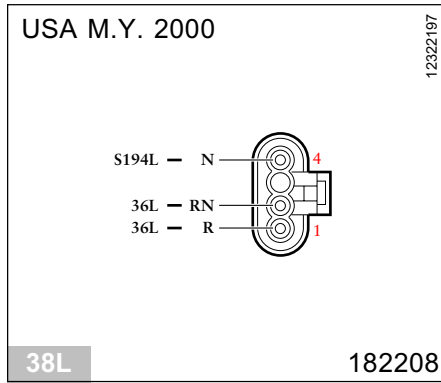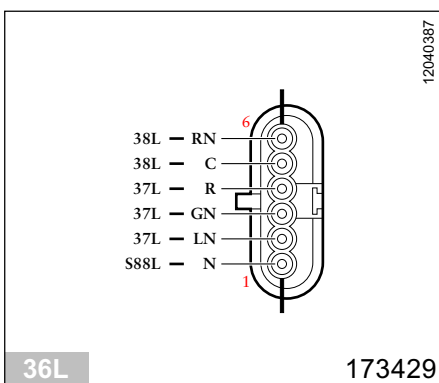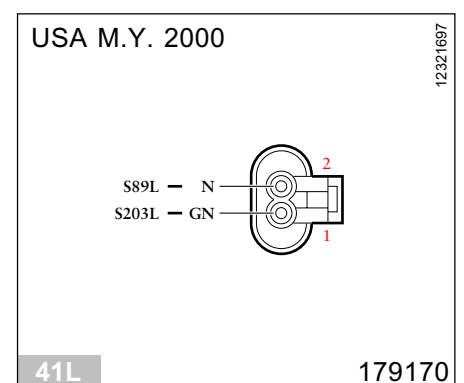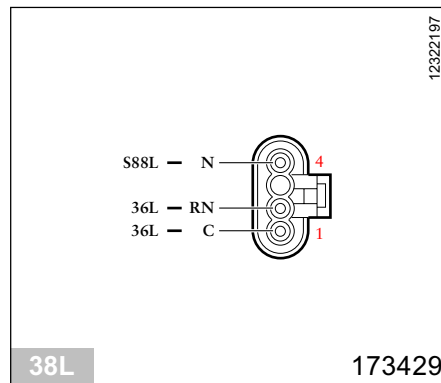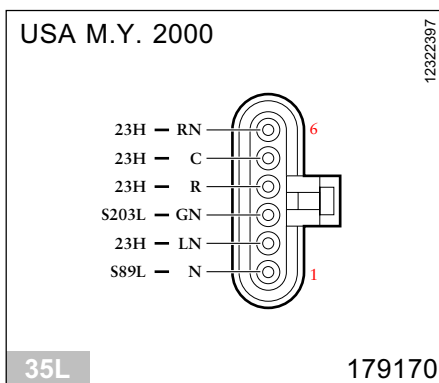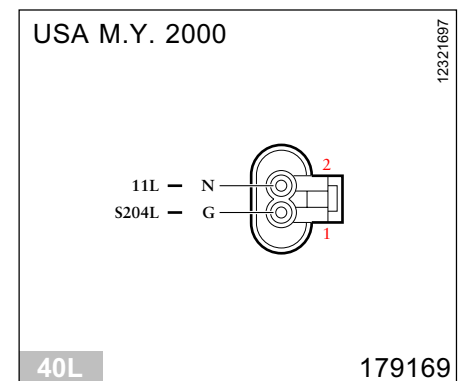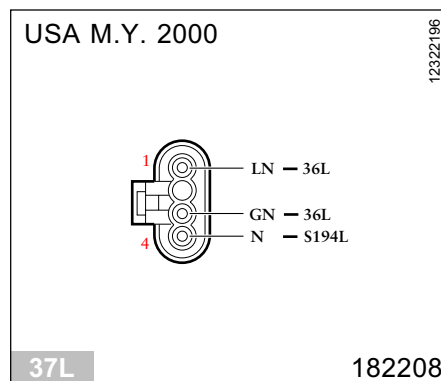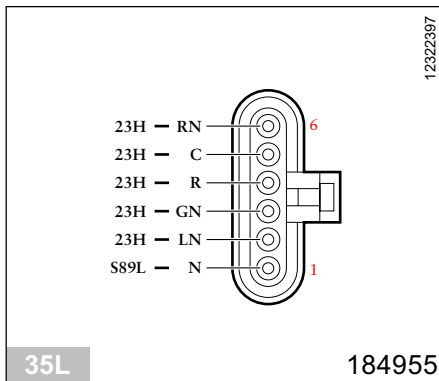

18G — V — V — 26L
 18G — B — B — 26L

R120ΩL

19L — N — N — 21L
 N — 20L

S92L

12G — VN — VB — 1L
 VB — 1L
 VB — 1L

S105L

36L-22L — N — N — 23L-38L
 N — 24L-37L

S88L

173429

19L — GR — GR — 20L
 GR — 21L

S93L

22H — VN — VN — 26L
 VN — 26L

S106L

18G — N — N — 32L
 27L — N —
 29L — N —
 34L — N —
 30L — N — N — 35L

S89L

184955

12G — MN — MN — 1L
 16G — MN —

S94L

12G — Z — Z — 4L
 Z — 4L

S129L

USA M.Y. 2000

18G — N — N — 32L
 27L — N —
 29L — N —
 30L — N — N — 41L
 N — 34L
 N — 35L

S89L

179170

22H — V — V — 31L
 V — 32L

S103L

USA M.Y. 2000

11G — VG — VG — 5L
 VG — 1L

S190L

179169

1L — R — R — 15L
 16G — R — R — 12L
 11G — R —

S90L

4L — V — V — 8L
 12G — V —

S104L

 
USA M.Y. 2000

36L — N — N — 38L
 N — 23L
 22L — N — N — 24L
 N — 37L

S194L

182208


USA M.Y. 2000



S203L

179170

 USA M.Y. 2000









S204L

179169

L4.11 Table M - LH DOOR CABLES











183327 - Door connection cables

- 1M** - Dashboard cables to driver's door cables joint
- 2M** - Wing mirror
- 3M** - Loudspeaker for high tones (Tweeter)
- 4M** - Key lock set micro-switch
- 5M** - External handle micro-switch

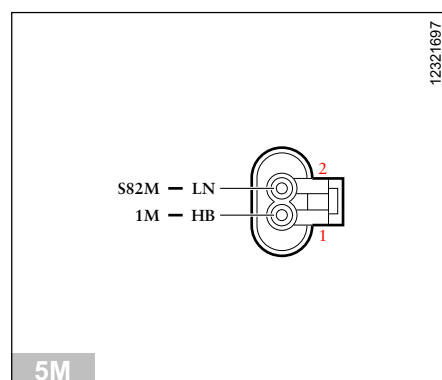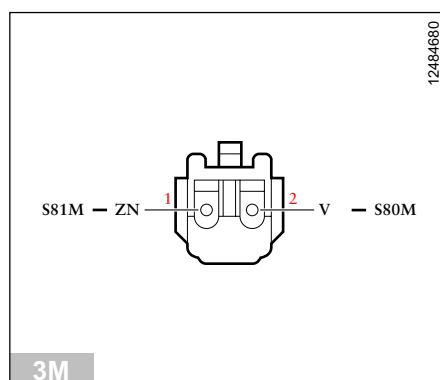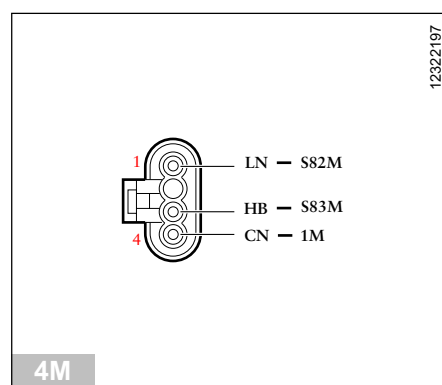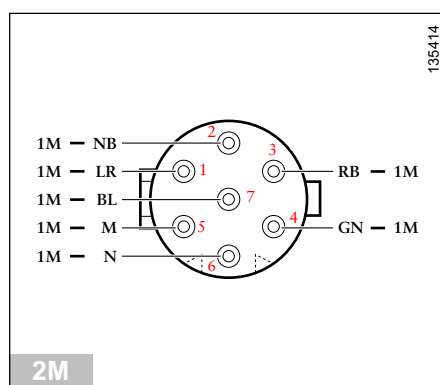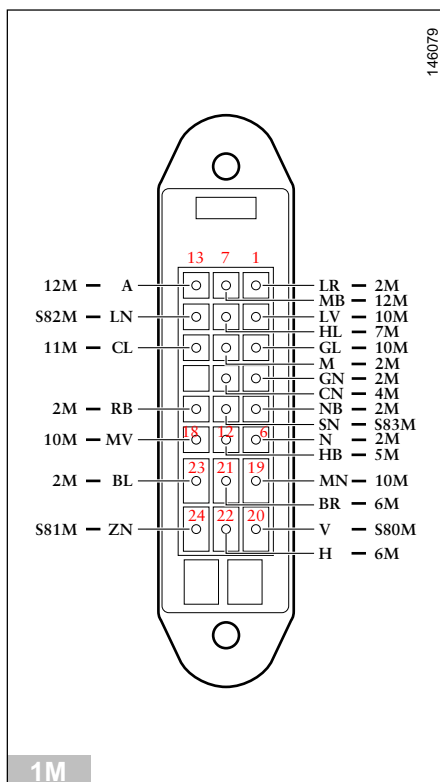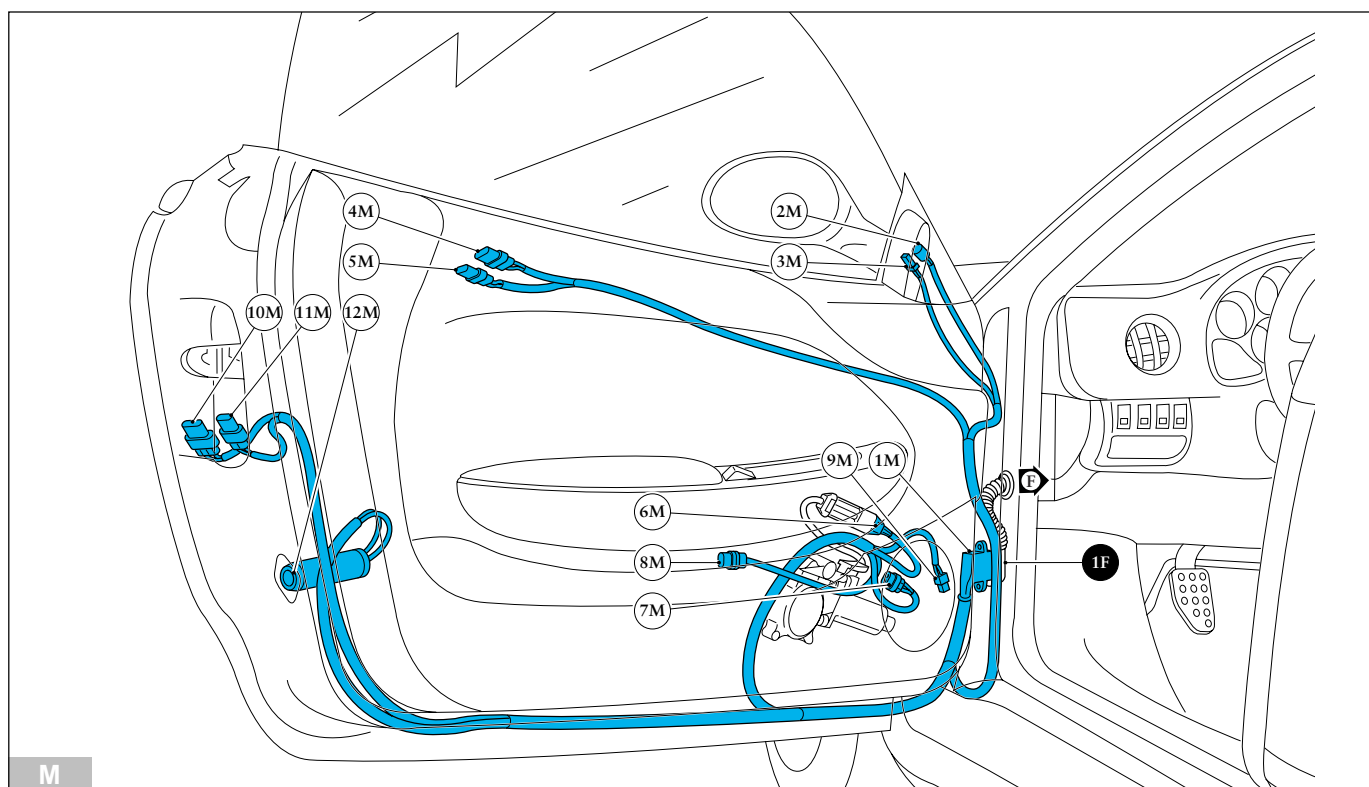

- 6M** - Power window motor
- 7M** - Micro for window position indication
- 8M** - Internal handle micro switch
- 9M** - Loudspeaker for low tones (Woofer)
- 10M** - Door locking actuator and lock set micro for warning light control







- 11M** - Door locking actuator and lock set micro for warning light control
- 12M** - LH door opening indicator light

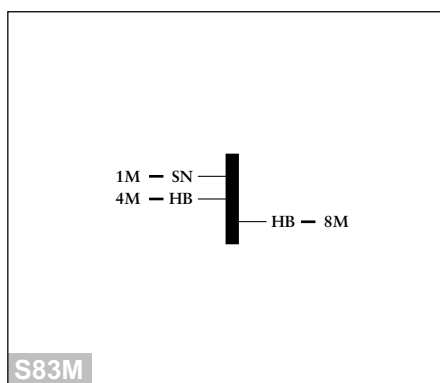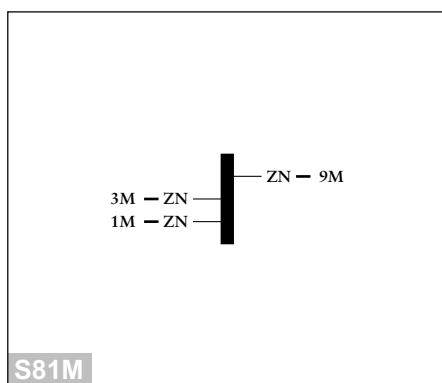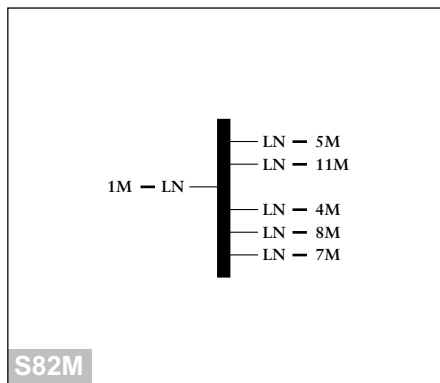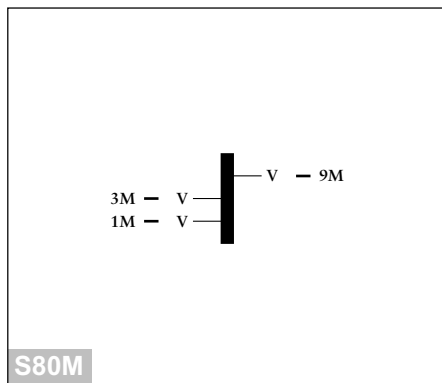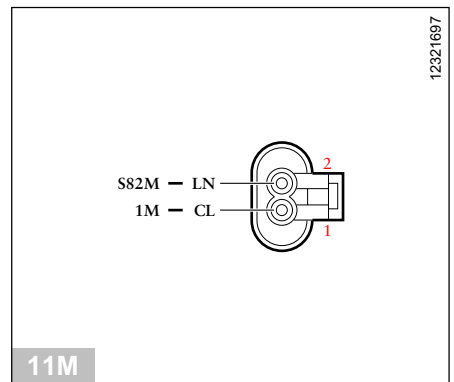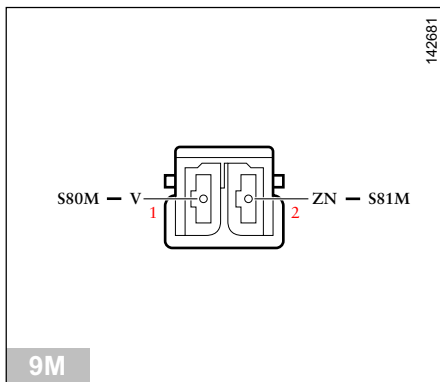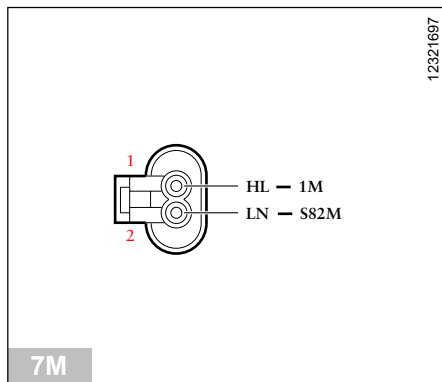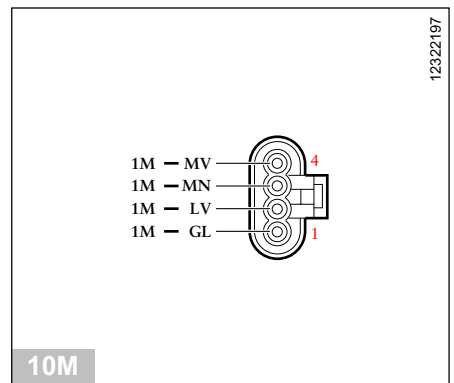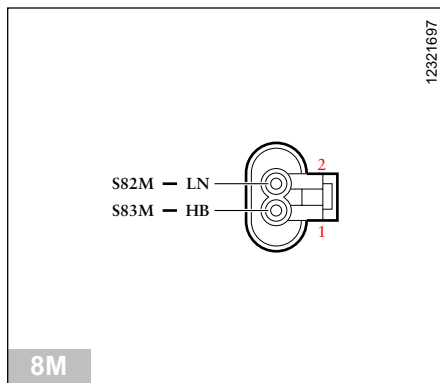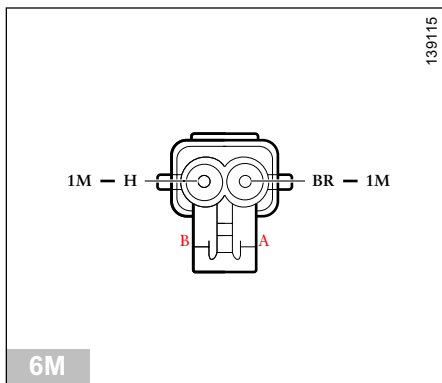

L4.12 Table N - RH DOOR CABLES











183327 - Door connection cables

- 1N - Dashboard cables to passenger's door cables joint
- 2N - Wing mirror
- 3N - Loudspeaker for high tones (Tweeter)
- 4N - Key lock set micro-switch
- 5N - External handle micro-switch

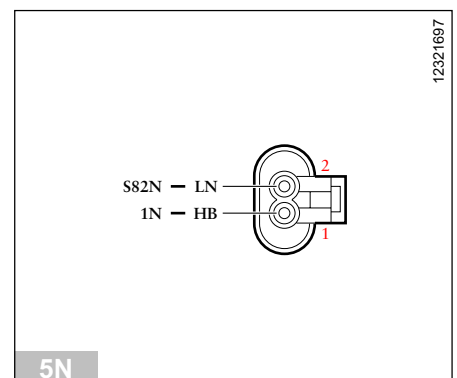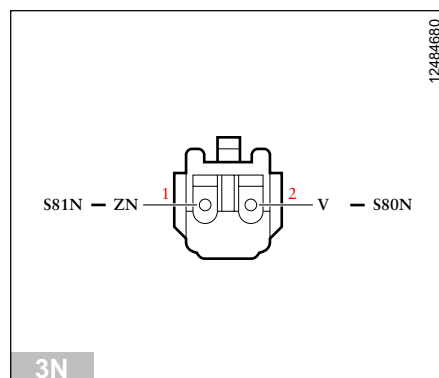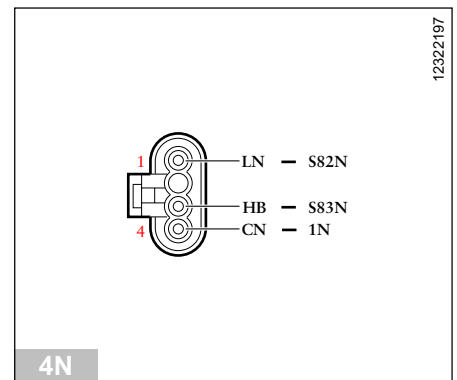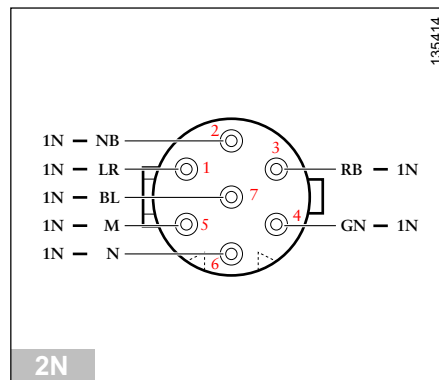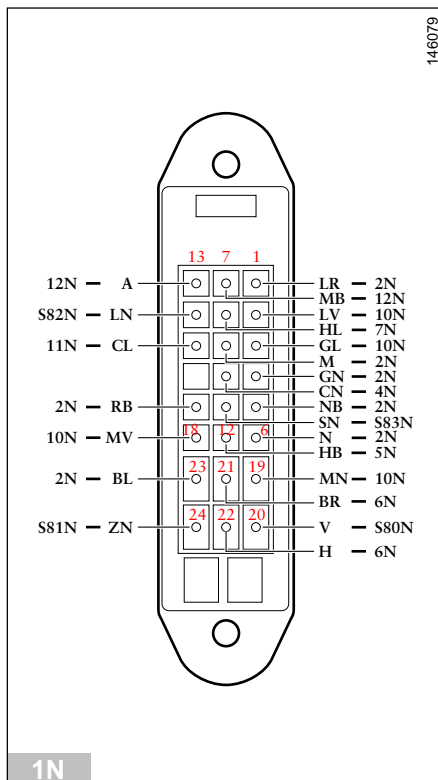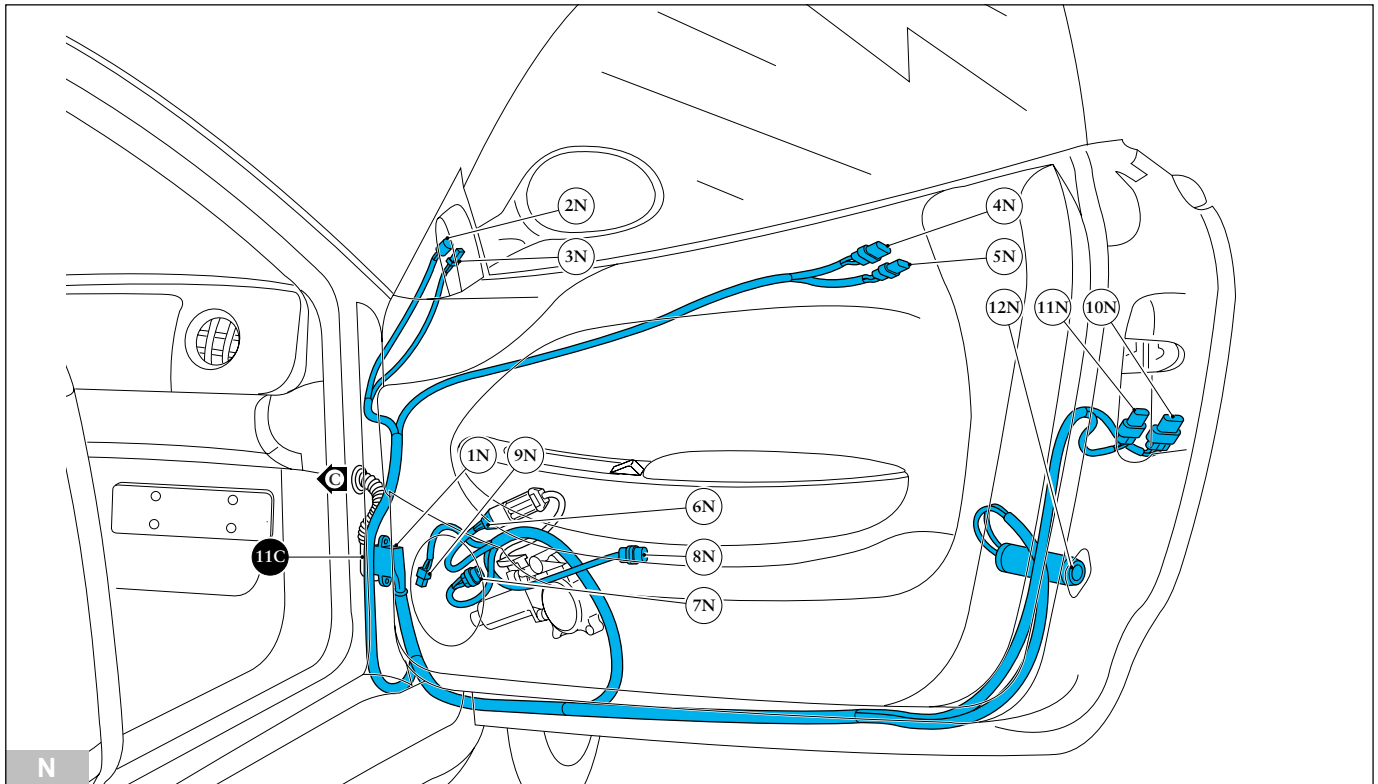

- 6N** - Power window motor
- 7N** - Micro for window position indication
- 8N** - Internal handle micro-switch
- 9N** - Loudspeaker for low tones (Woofer)
- 10N** - Door locking actuator and lock set micro for warning light control







- 11N** - Door locking actuator and lock set micro for warning light control
- 12N** - RH door opening indicator light

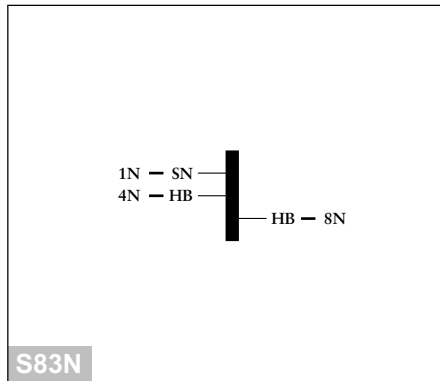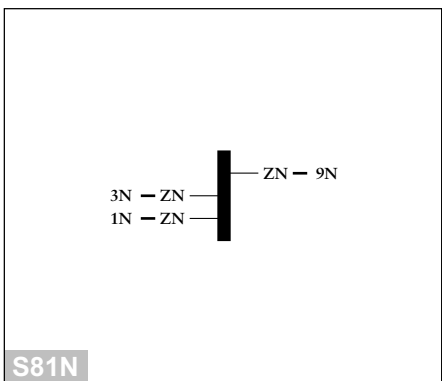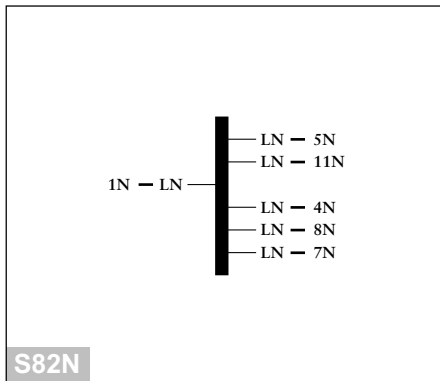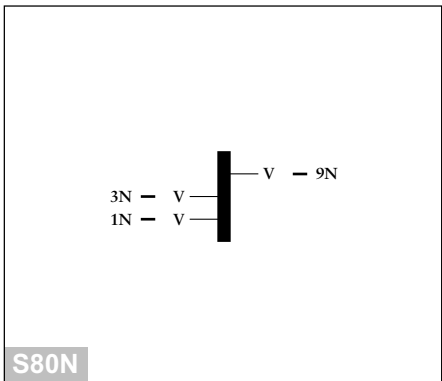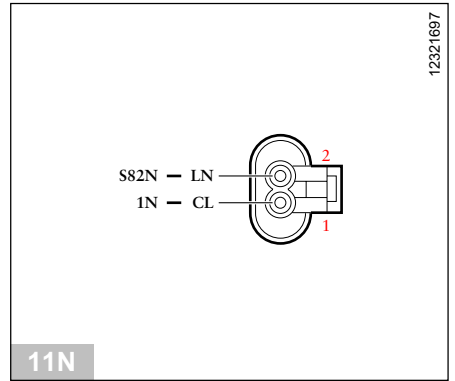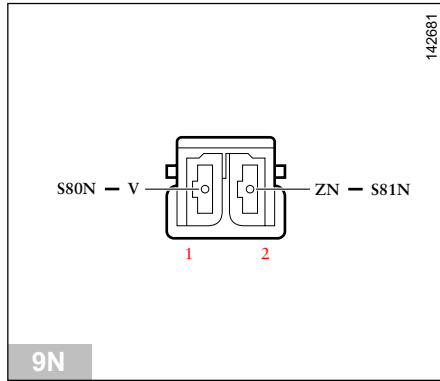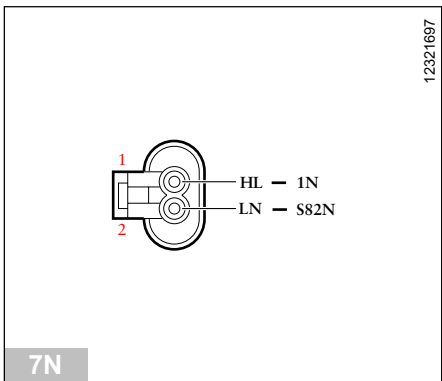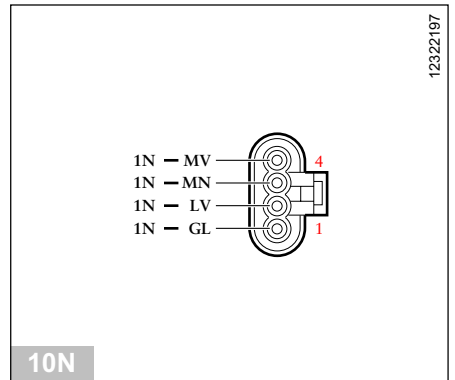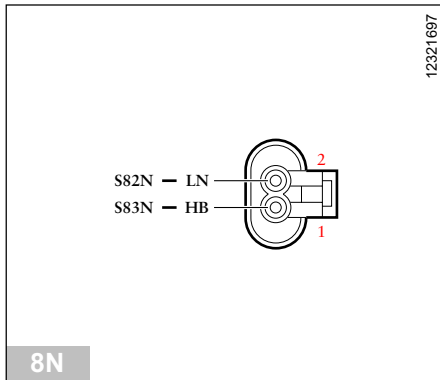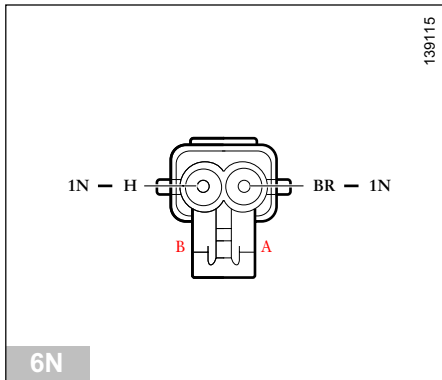

L4.13 Table P - ELECTRONICALLY CONTROLLED GEARBOX WIRING












181343 - Electronically-controlled gearbox connection cable

- 1P - Dashboard/F1 connection joint
- 2P - Small instrument panel for electronically-controlled gearbox
- 3P - Earth (A)
- 4P - Earth (B)
- 5P - LH rear tunnel /F1 joint






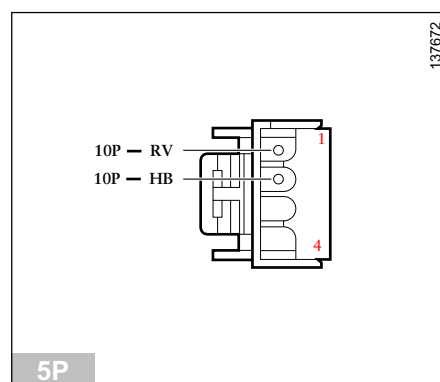
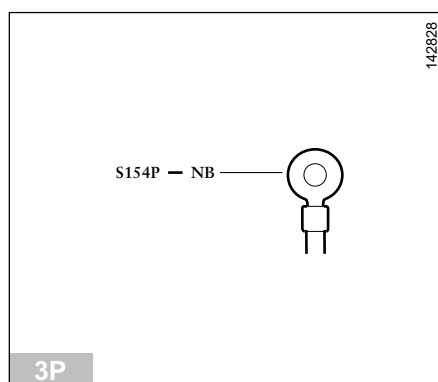
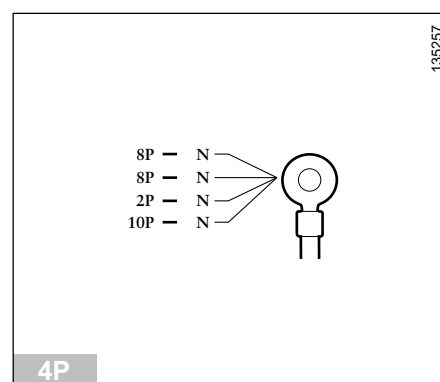
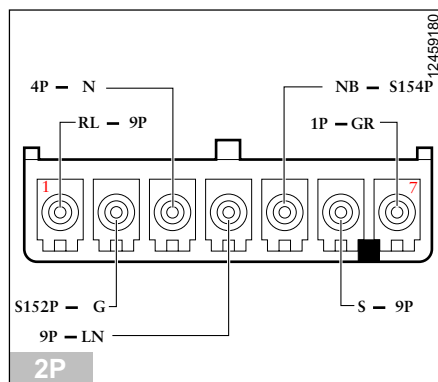
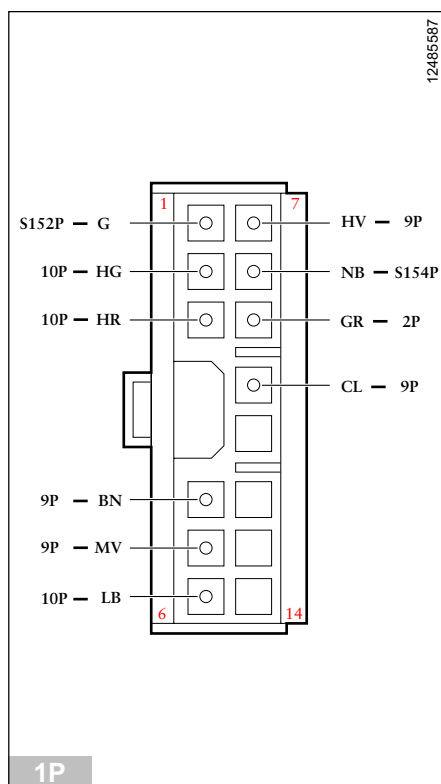
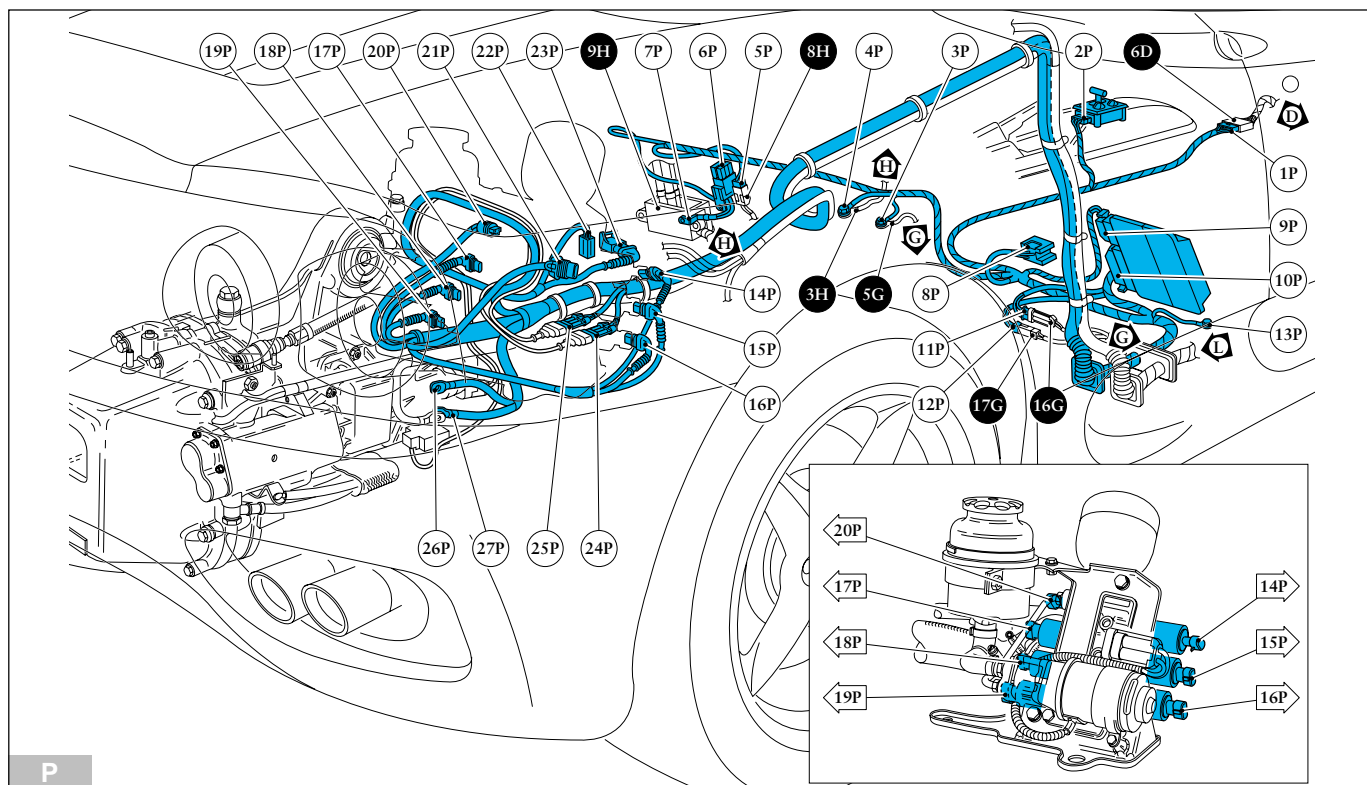



- 6P** - Fuses inside electronically-controlled gearbox housing
- 7P** - Positive for electronically-controlled gearbox cable
- 8P** - Pump relay
- 9P** - ECU for electronically-controlled gearbox
- 10P** - ECU for electronically-controlled gearbox
- 11P** - Rear joint for RH engine compartment/F1, for engine revolution indicators

- 12P** - Rear joint for RH engine compartment/F1, for CAN line
- 13P** - Earth (E)
- 14P** - Electroactuator, clutch valve
- 15P** - Electroactuator, valve 1
- 16P** - Electroactuator, valve 2

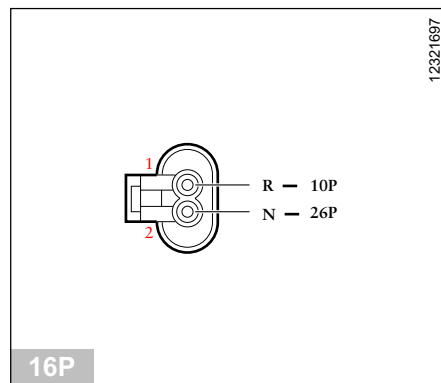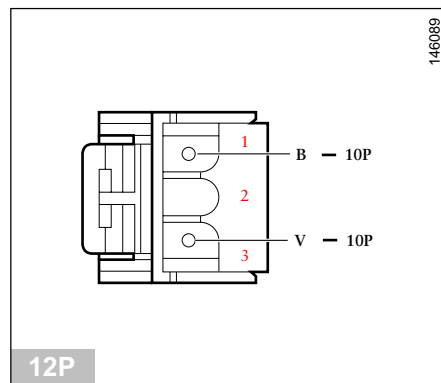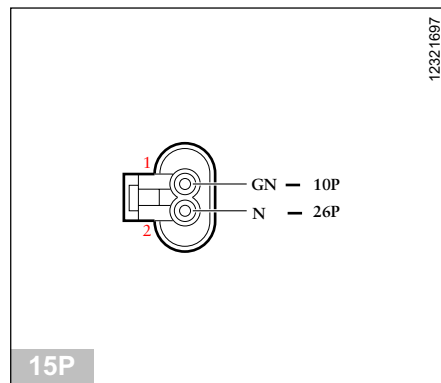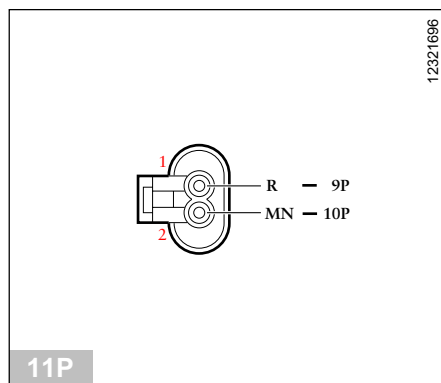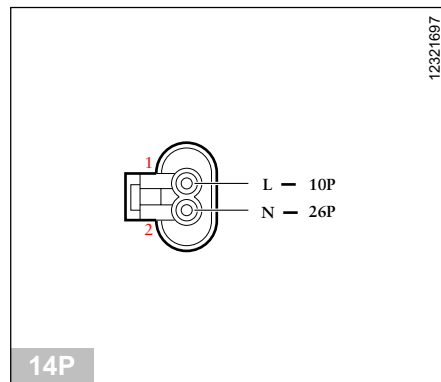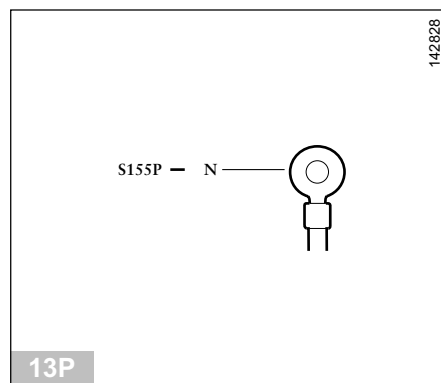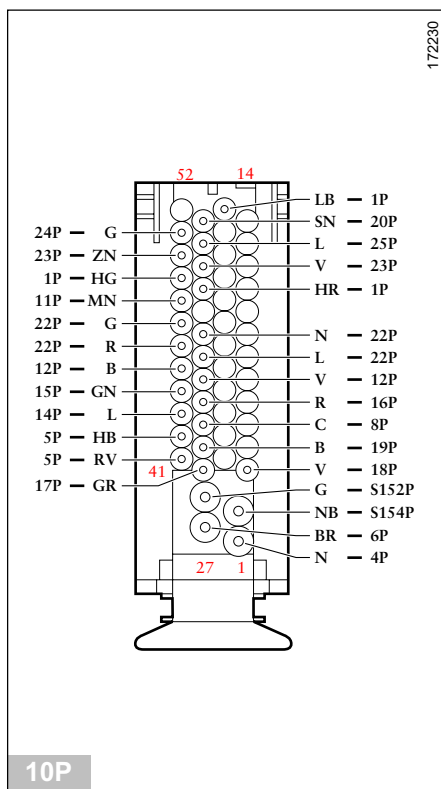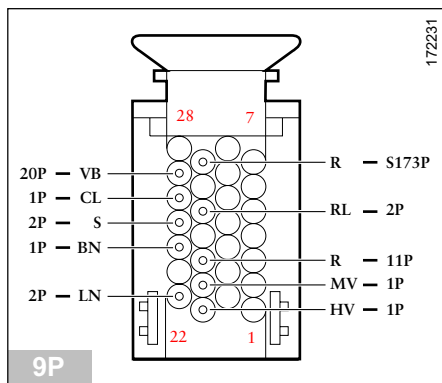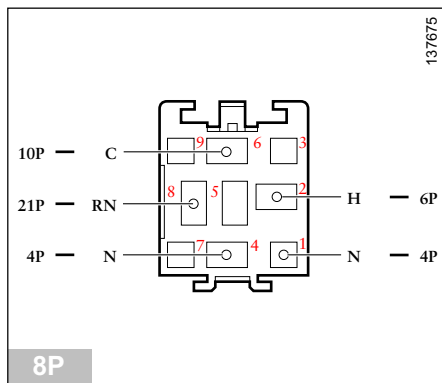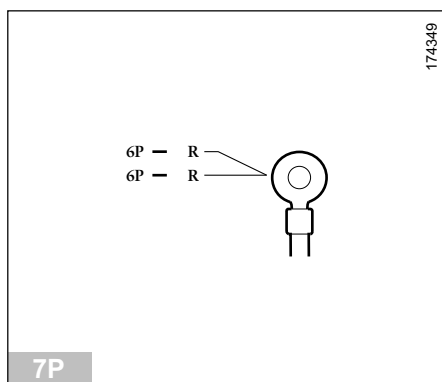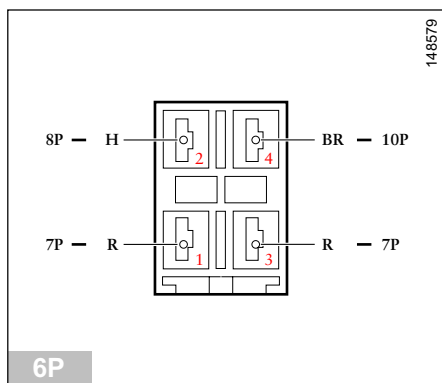

 - 17P** - Electroactuator, valve 3
- 18P** - Electroactuator, valve 4
- 19P** - Electroactuator, valve 5
- 20P** - Pressure transducer
- 21P** - Pump unit
- 22P** - Clutch sensor
- 23P** - Gearbox sensor
- 24P** - Gear selection potentiometer
- 25P** - Gear engagement potentiometer
- 26P** - Earth (C)
- 27P** - Earth (D)

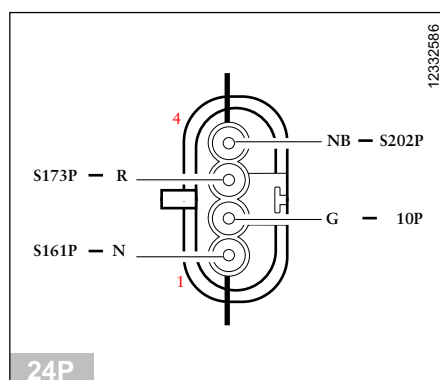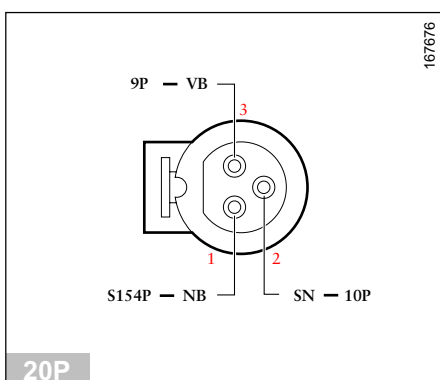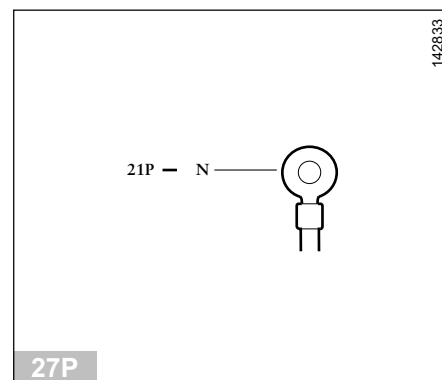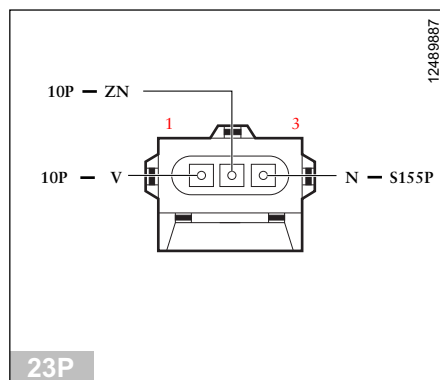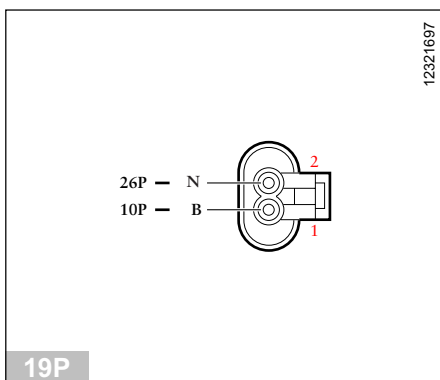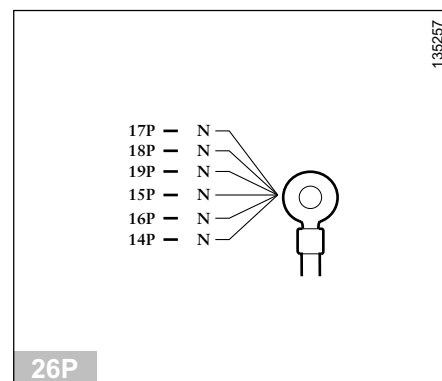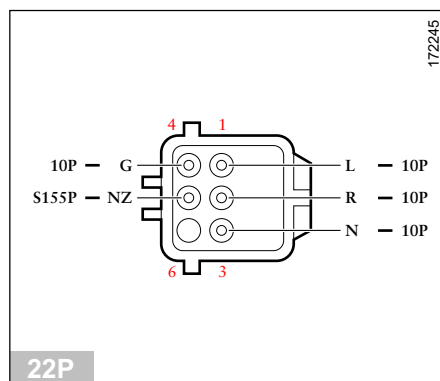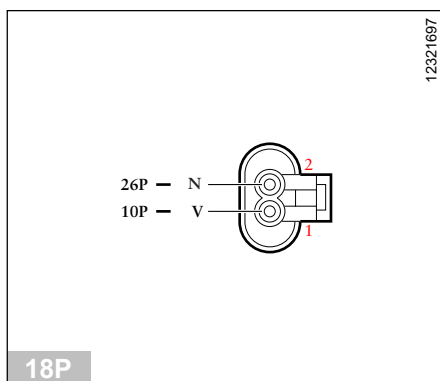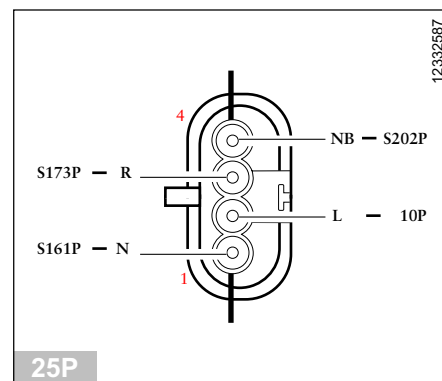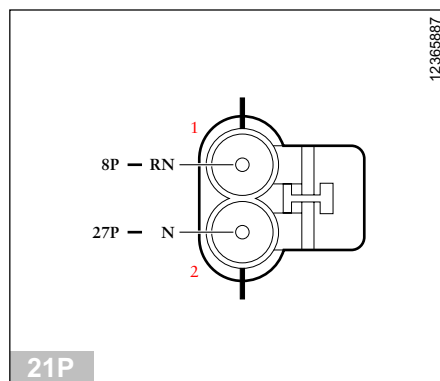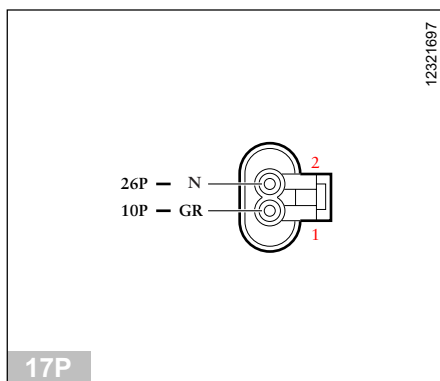





S152P




S202P

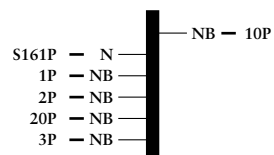


S154P

 

S155P

 

S161P







 


S173P

L4.14 Table Q – TOP SYSTEM WIRING

66455200 – Top system wiring

- 1Q** - Top wiring joint to car connection cable bundle
- 2Q** - Top ECU joint
- 3Q** - Top ECU joint
- 4Q** - Top ECU joint
- 5Q** - Microswitch joint for flaps open
- 6Q** - Microswitch joint for flaps closed

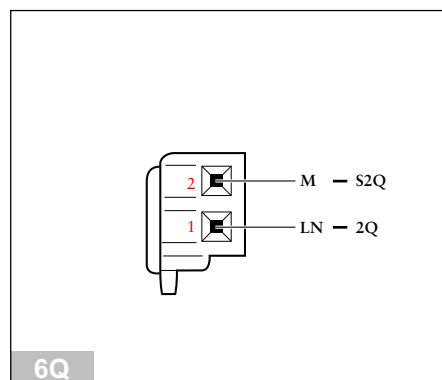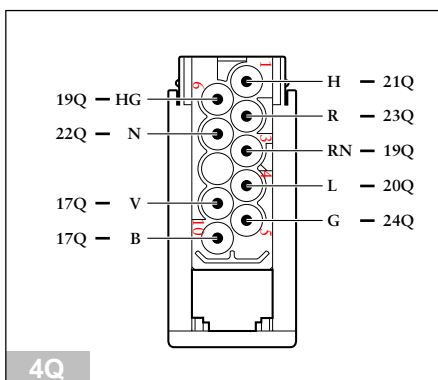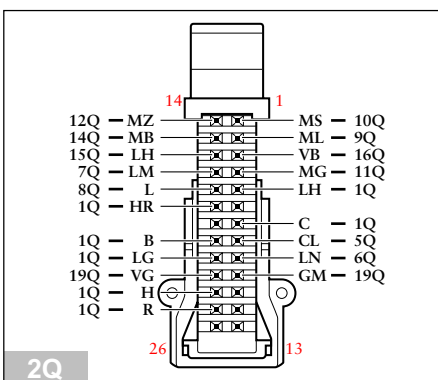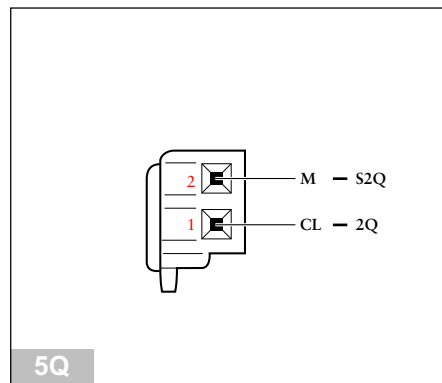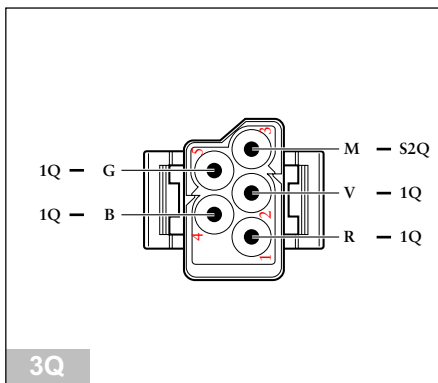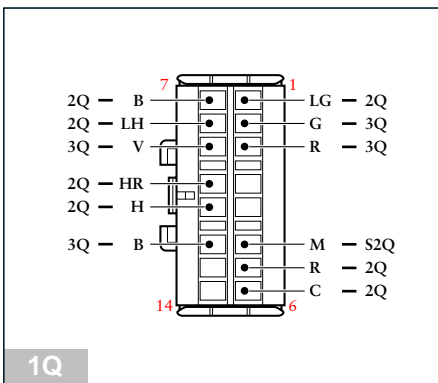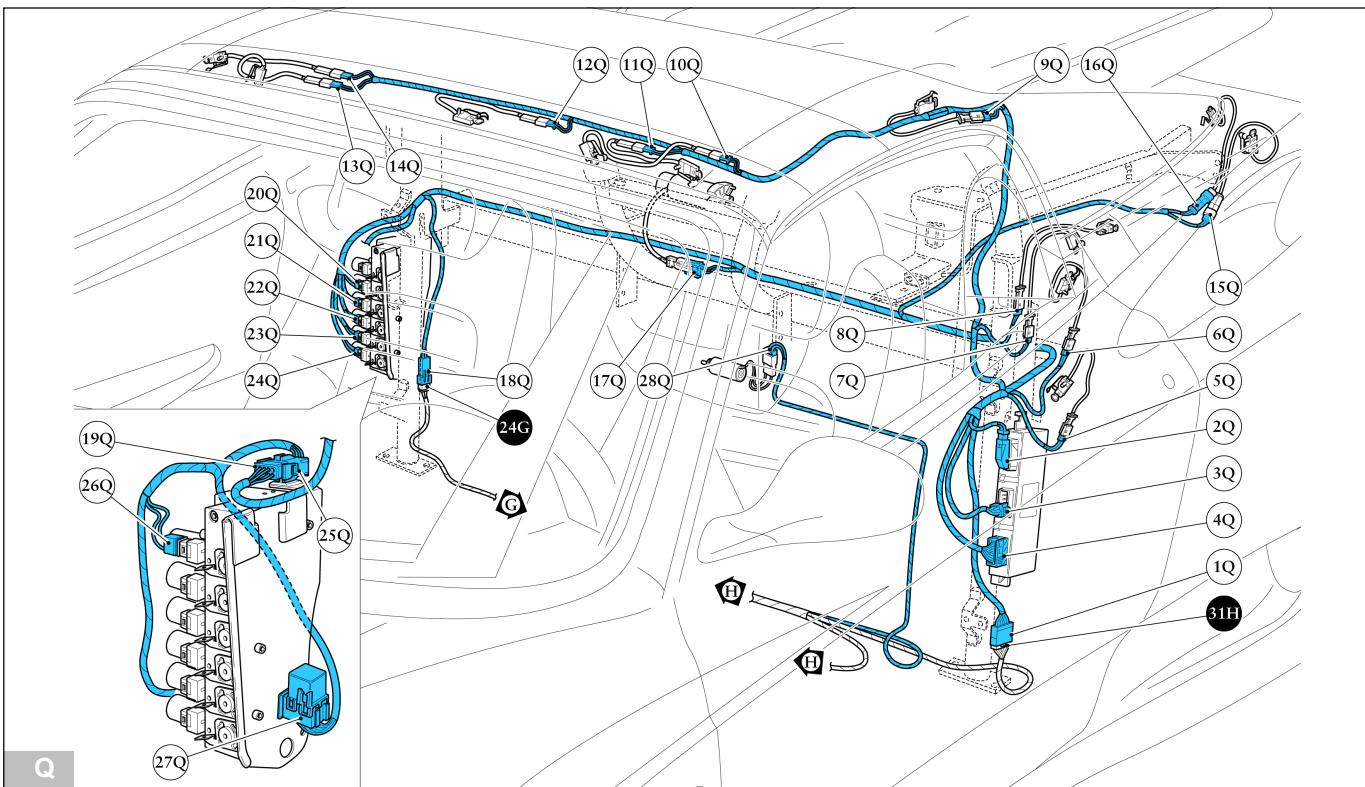

7Q - Microswitch joint for top inside bay

8Q - Microswitch joint for top outside bay

9Q - Front microswitch joint for top folded back

10Q - Microswitch joint for LH hook open

11Q - LH striker plates microswitch joint

12Q - Cross member microswitch joint

13Q - Microswitch joint for RH hook open













14Q - RH striker plates microswitch joint

15Q - Closed cover microswitch joint

16Q - Open cover microswitch joint

17Q - Flap control motor joint











18Q - Hydraulic pump power supply joint to car system connection cable bundle

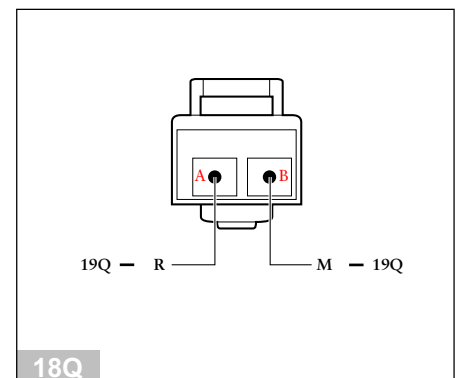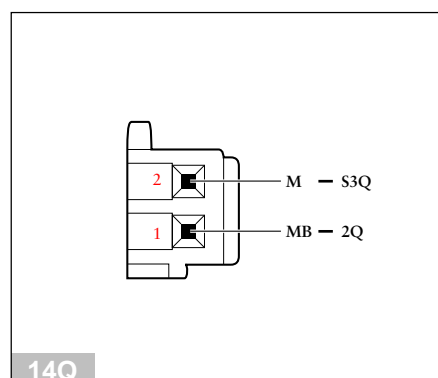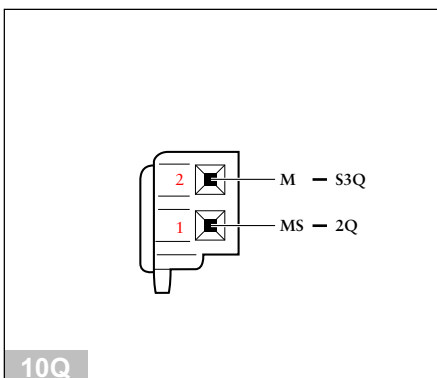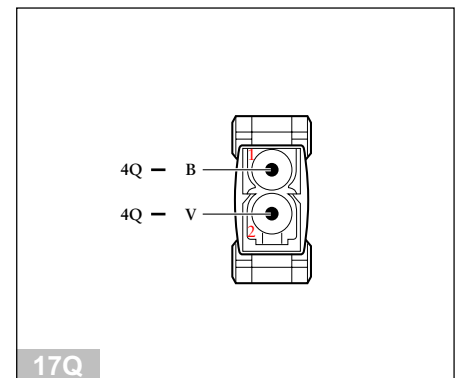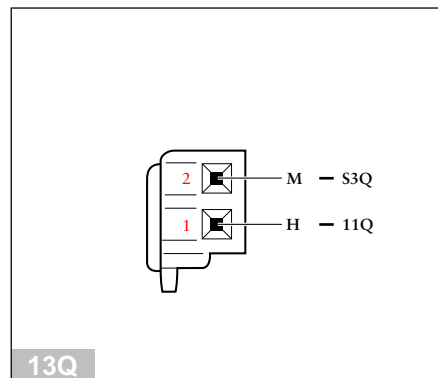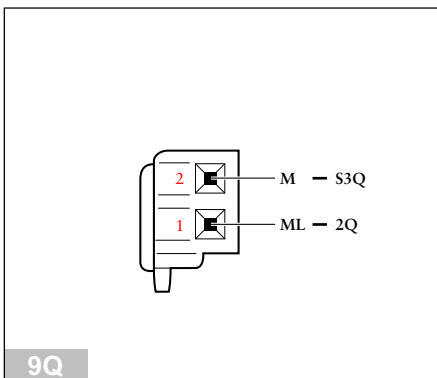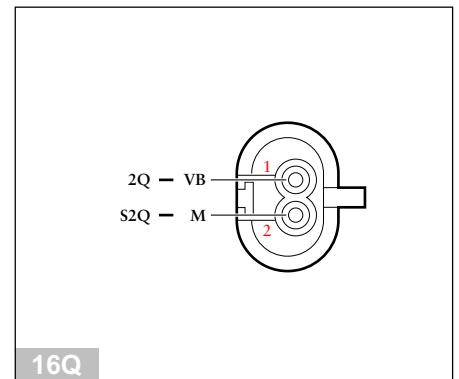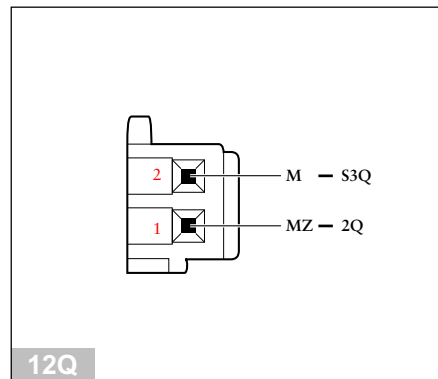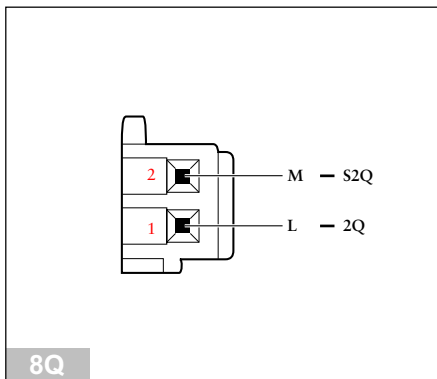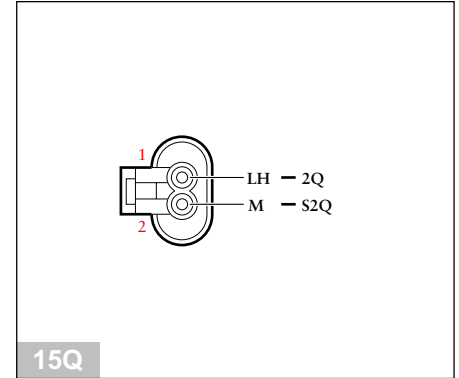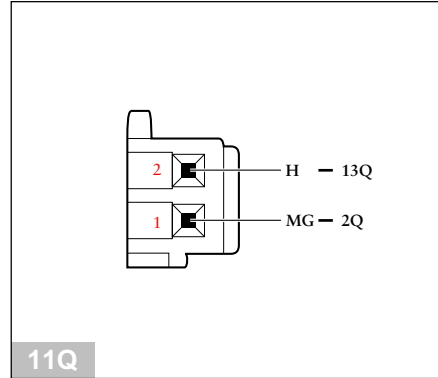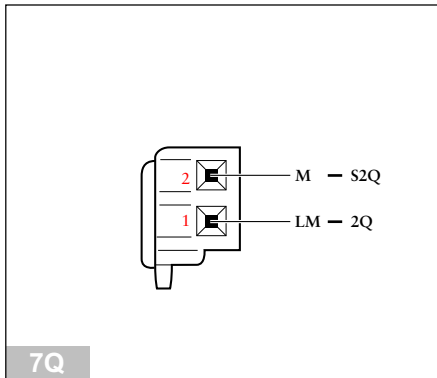

- 19Q** - Top wiring joint to hydraulic pump wiring
- 20Q** - Hooks control solenoid valve joint
- 21Q** - Cover control solenoid valve joint
- 22Q** - Solenoid valve joint for top front part opening
- 23Q** - Solenoid valve joint for top front part closing
- 24Q** - Solenoid valve joint for top central part control





- 6637600 – Hydraulic pump**
- 25Q** - Hydraulic pump wiring joint to top wiring
- 26Q** - Main solenoid valve joint
- 27Q** - Pump relay joint

- 179949 – Top connection cable bundle**
- 28Q** - Actuator joint for map compartment lid opening

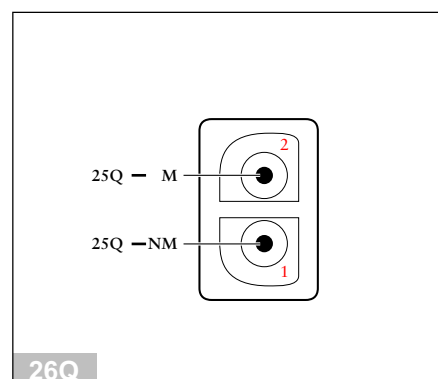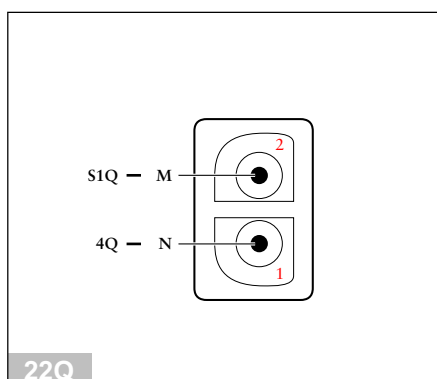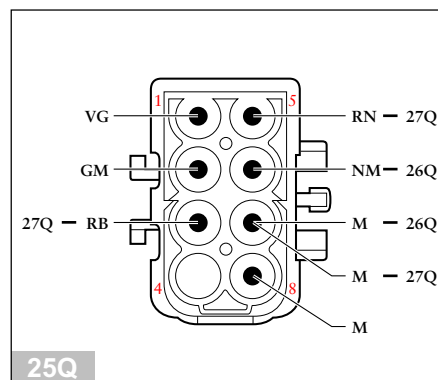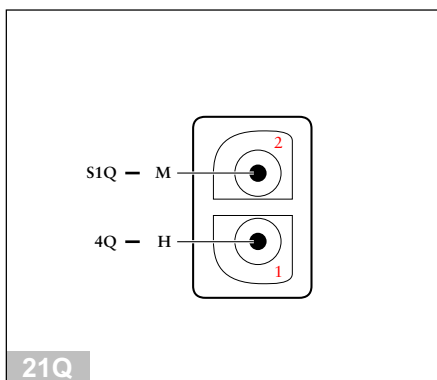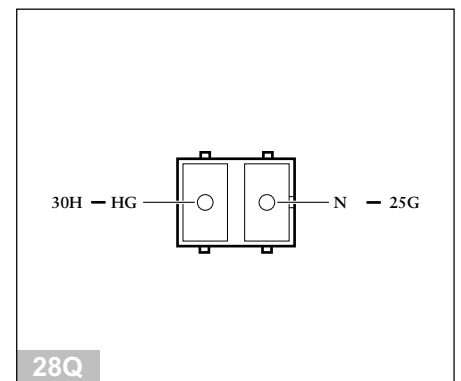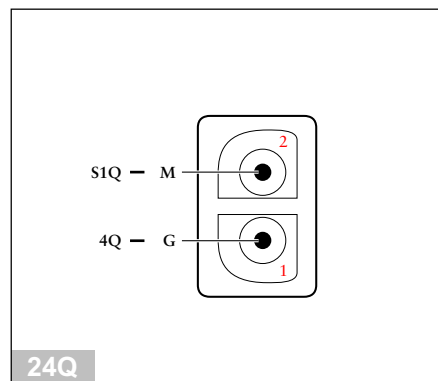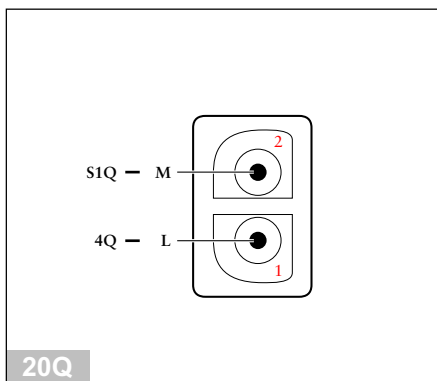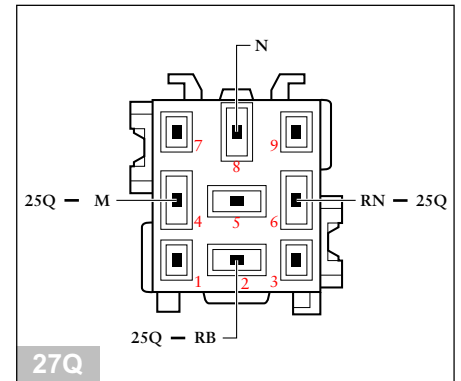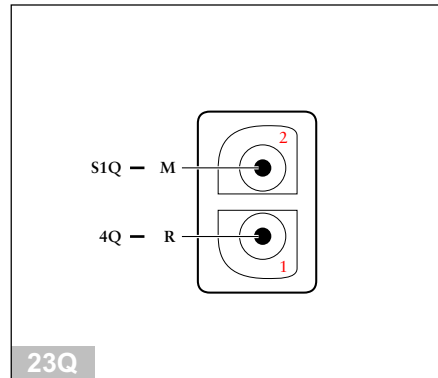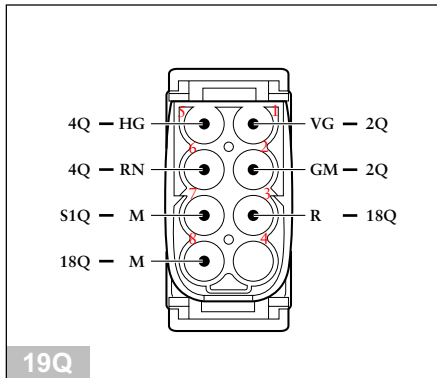

L4.15 Table R - AIR CONDITIONING SYSTEM CABLES

- 1R - ECU connector
- 2R - ECU connector
- 3R - Air distribution motor
- 4R - Treated air temperature sensor

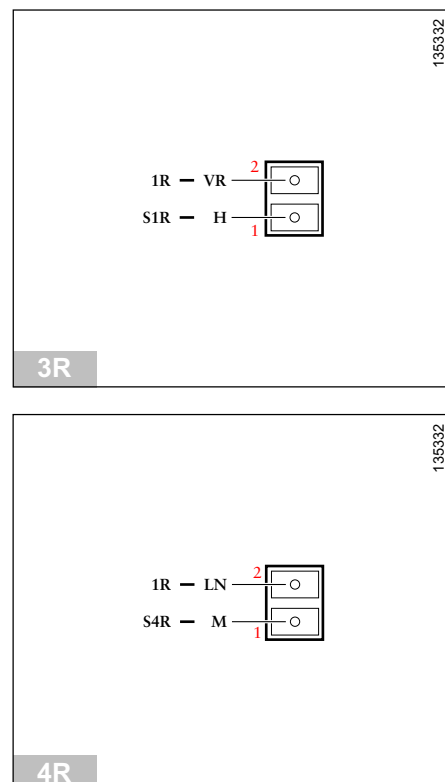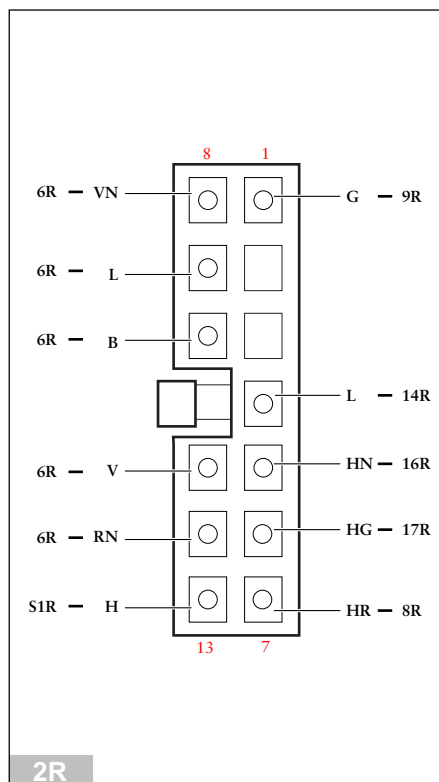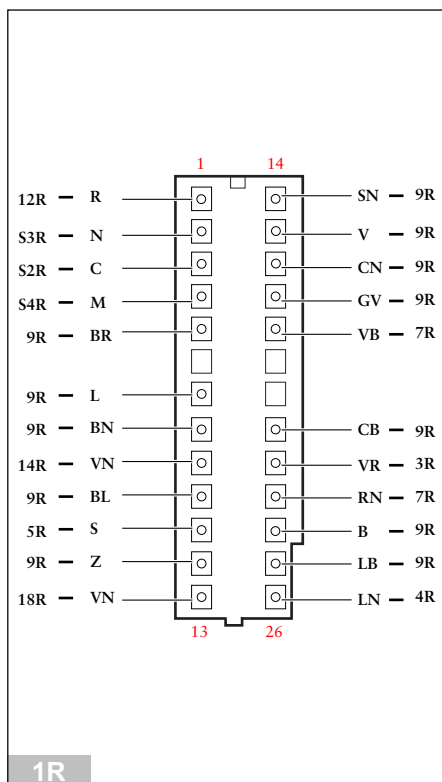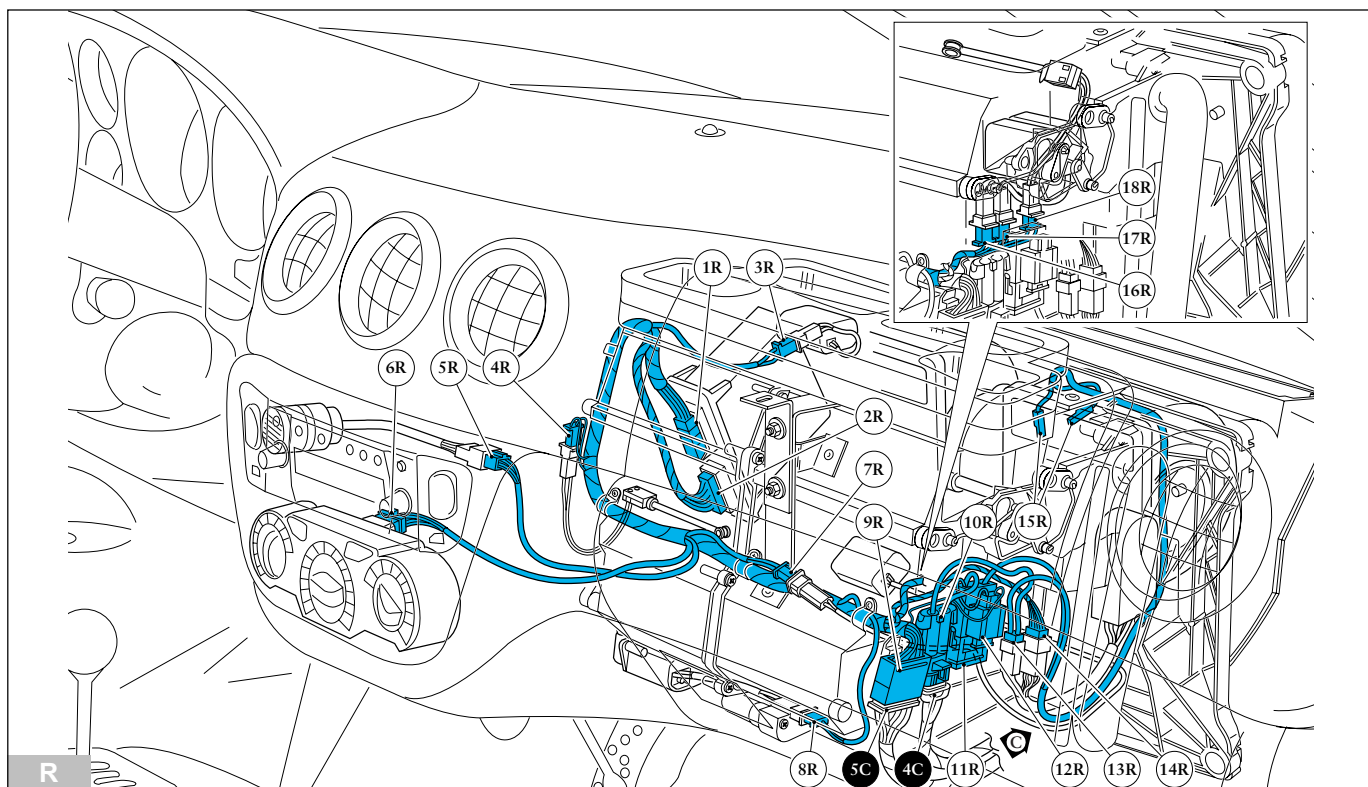

5R - Passenger compartment temperature sensor

6R - Small instrument panel

7R - Outside air/inside recirculation motor

8R - Air distribution motor for foot area

9R - A.C. system to dashboard system connection joint

10R - A.C. system to power supply joint


11R - Solenoid valve protection fuse

12R - ECU protection fuse


13R - Fan speed adjuster

14R - Fan speed adjuster


15R - Electric fan motor

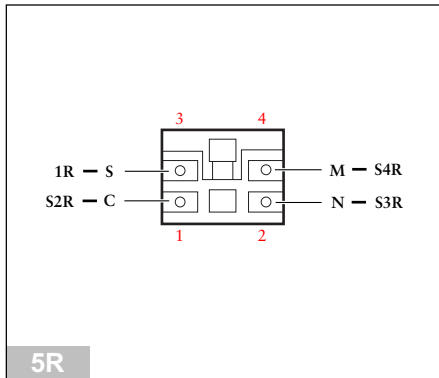


5R

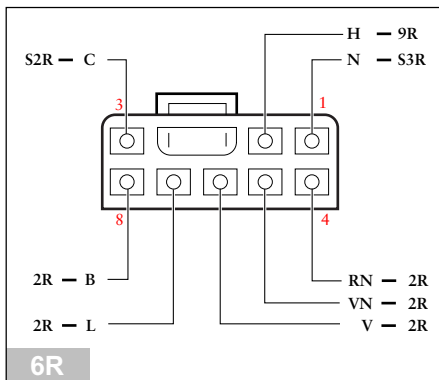


6R

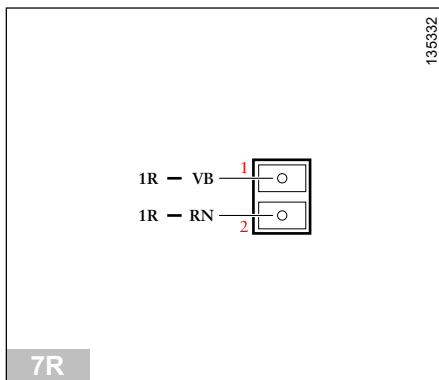


7R

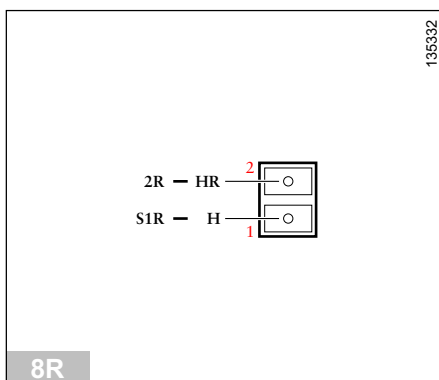


8R

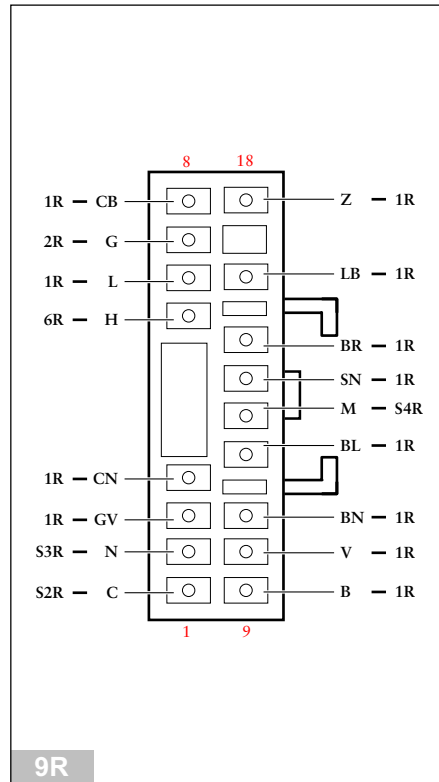


9R

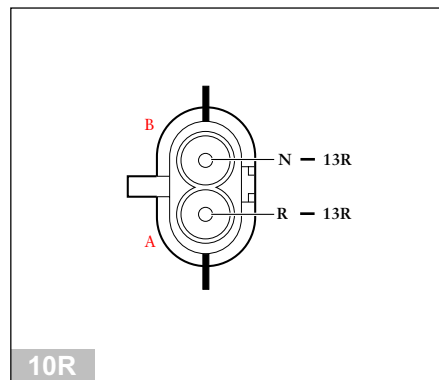


10R

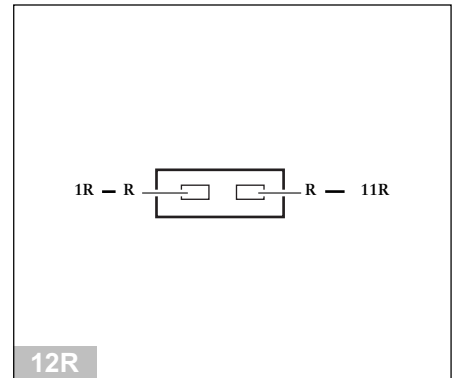


12R

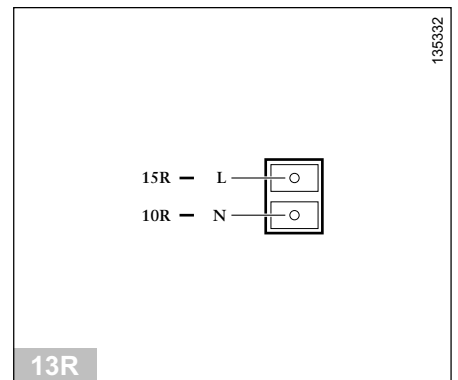


13R

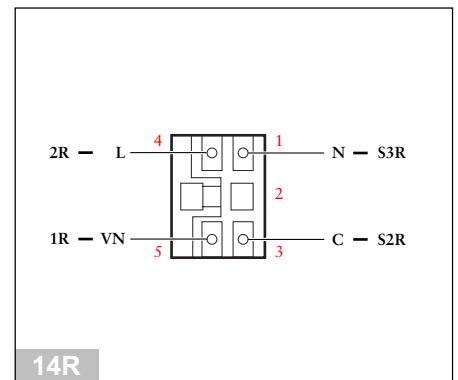

14R


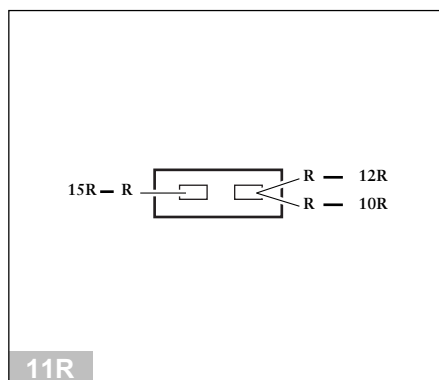


11R

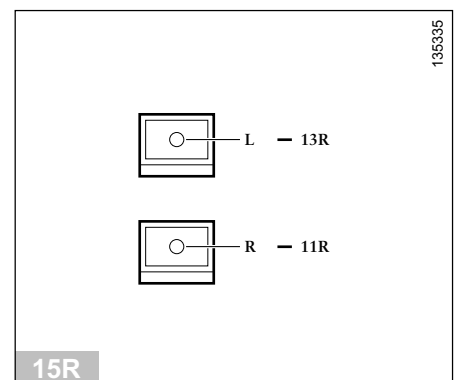

15R







16R - Hot-cold air mixer motor
17R - Hot-cold air mixer motor
18R - Treated temperature sensor

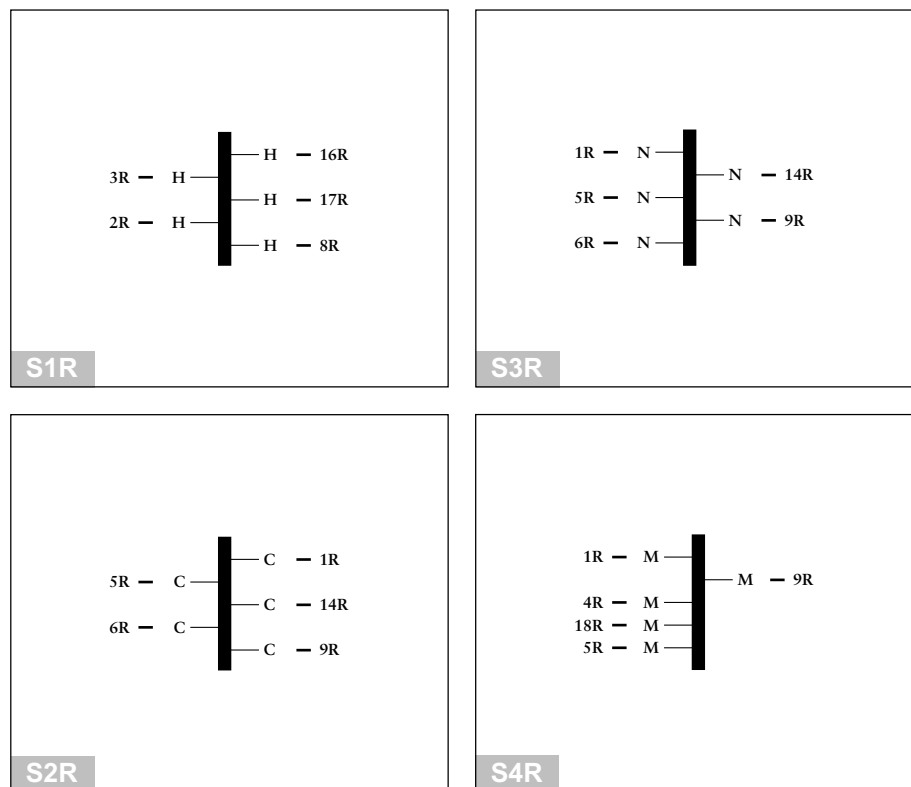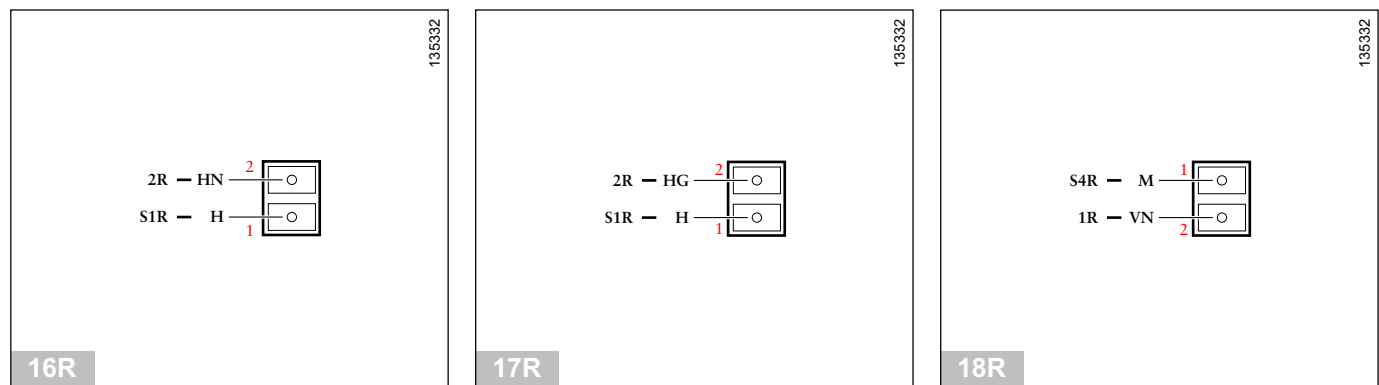

L4.16 Table S - RH INJECTION AND ENGINE SERVICES WIRING













179167 - RH, bank connection cables

- 1S** - RH BOSCH MOTRONIC ECU for injection start-up
- 2S** - RH injection cable to RH engine compartment cable connection joint
- 3S** - ECU earth
- 4S** - Earth
- 5S** - Earth

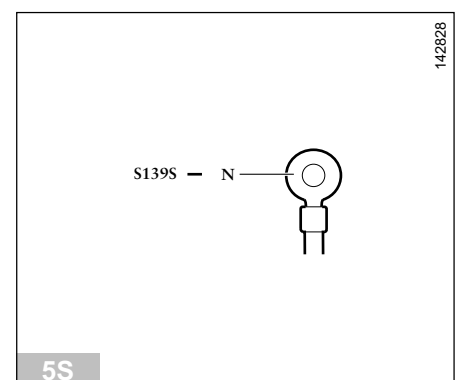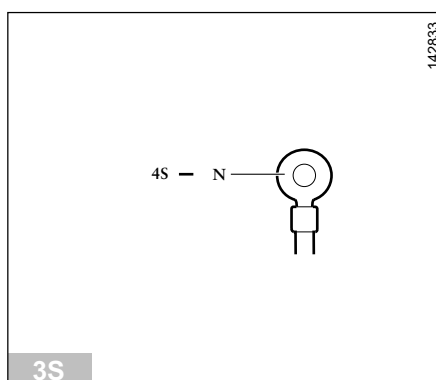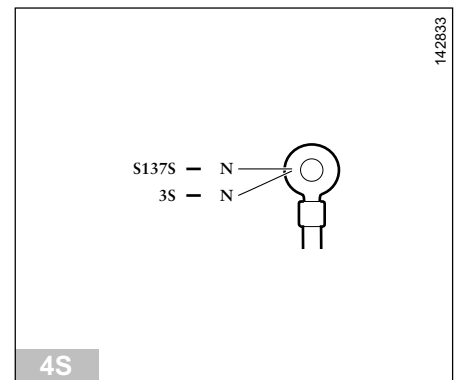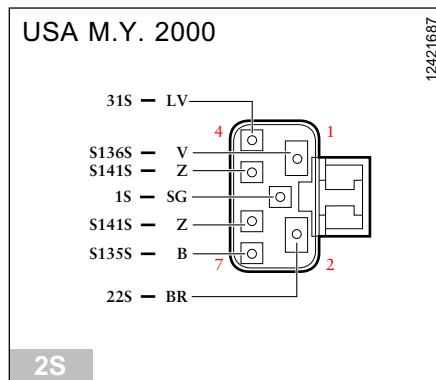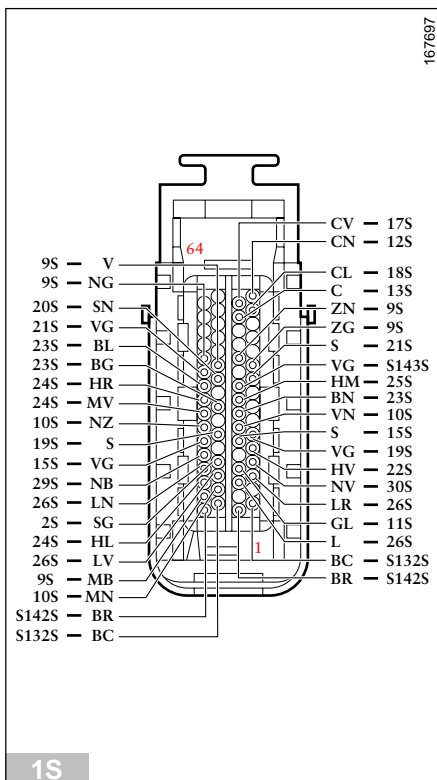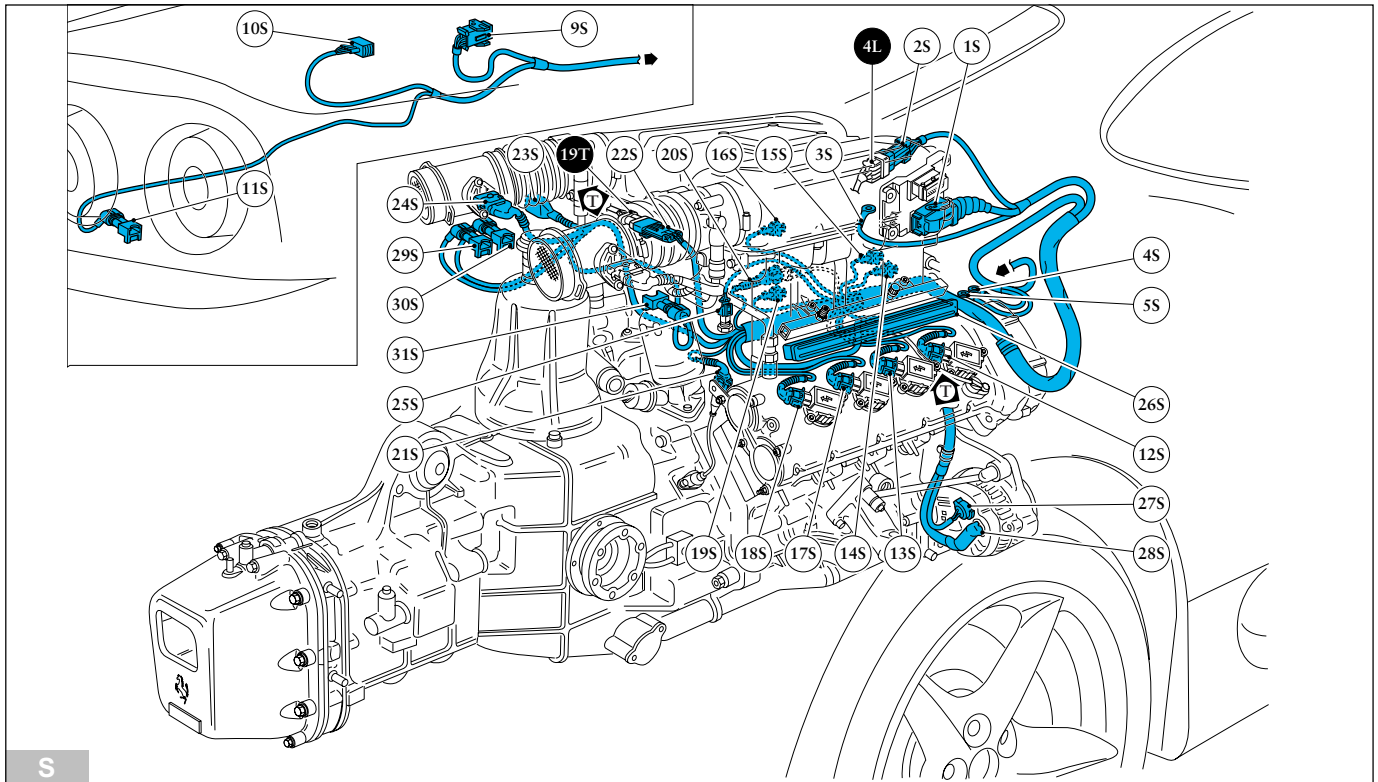









9S - OXYGEN sensor and heater for RH front bank
10S - OXYGEN sensor and heater for RH rear bank
11S - RH exhaust manifold balancing valve
12S - Cylinder 1 coil
13S - Cylinder 2 coil
14S - RH timing variator
15S - Detonation sensor 1
16S - LH timing variator

17S - Cylinder 3 coil
18S - Cylinder 4 coil
19S - Detonation sensor 2
20S - RH timing sensor

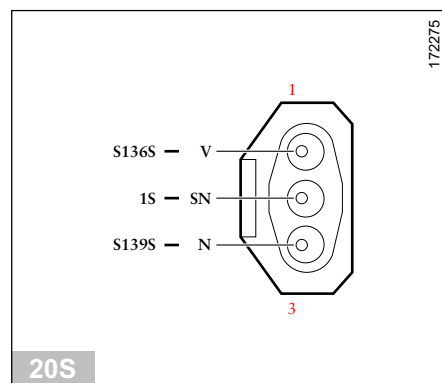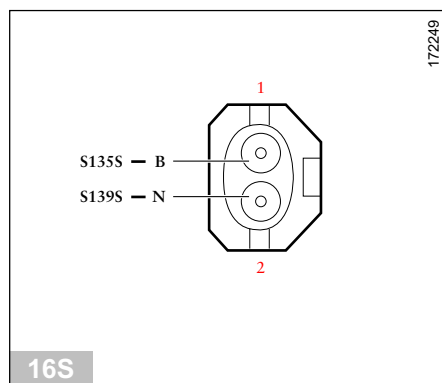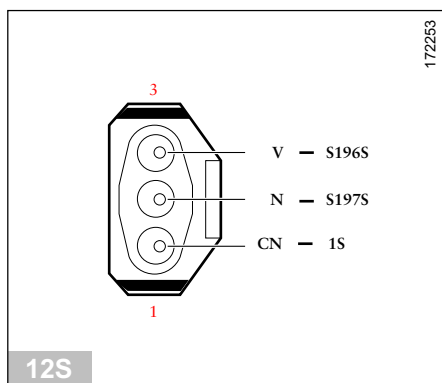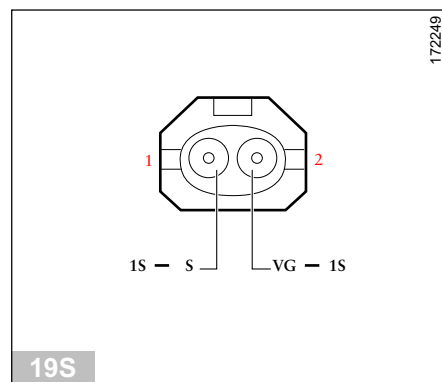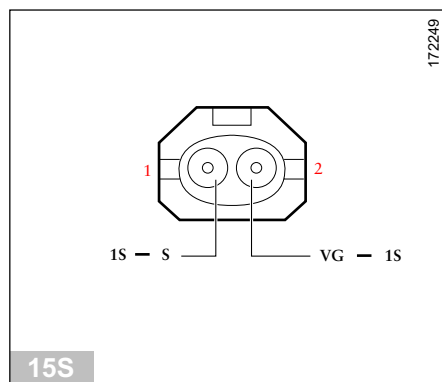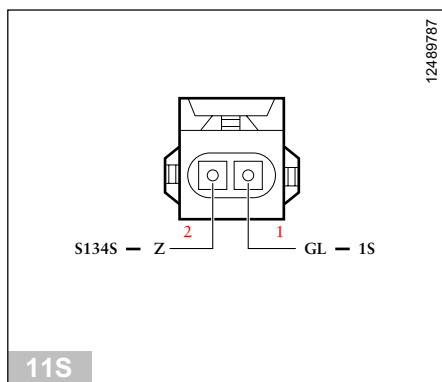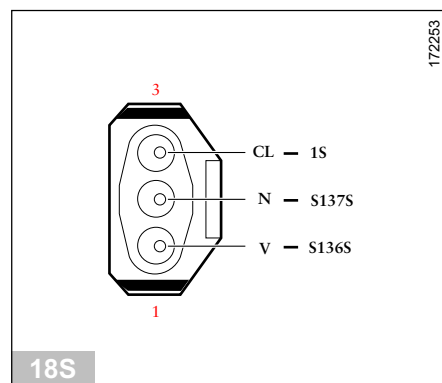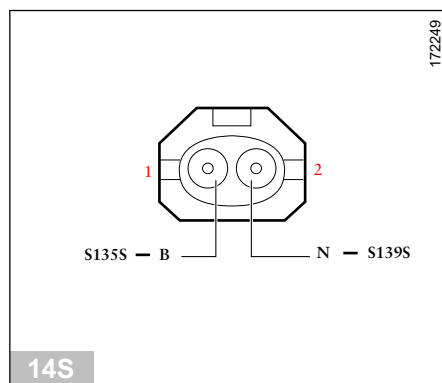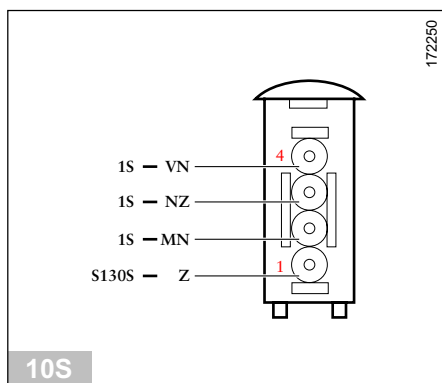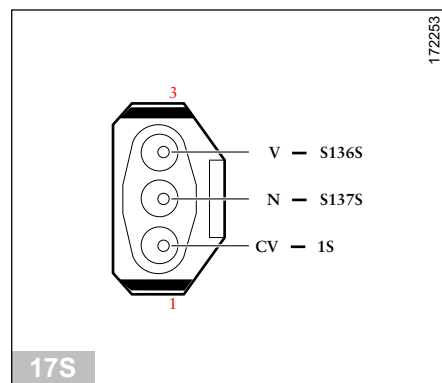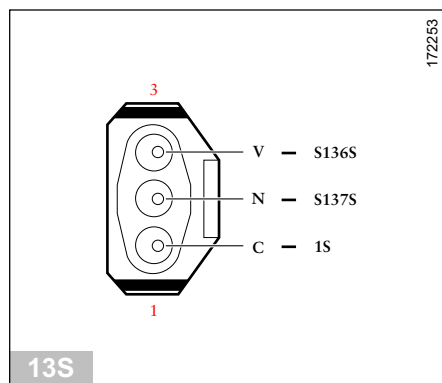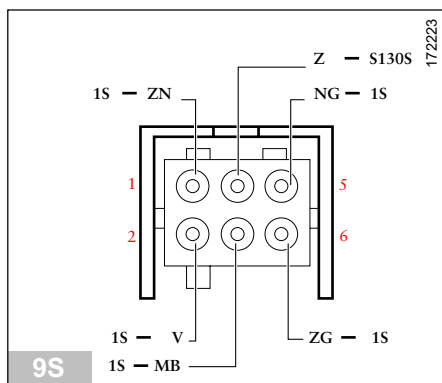

- 21S** - RH revolution sensor
- 22S** - RH injection cable to LH
injection cable connection
joint
- 23S** - RH motor-driven throttle
- 24S** - Hot-film air flow meter, RH
bank
- 25S** - Water temperature sensor
- 26S** - Cable trough for injectors
1/2/3/4

- 188108 - Engine services
connection wiring loom**
- 27S** - Alternator with integrated
adjuster
- 28S** - Alternator with integrated
adjuster


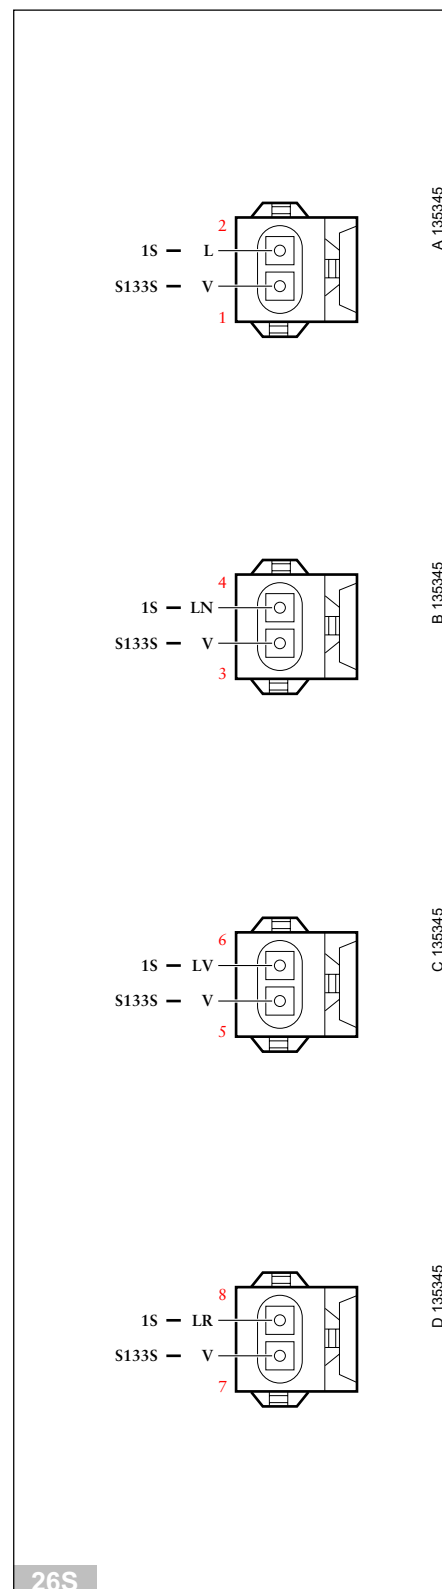
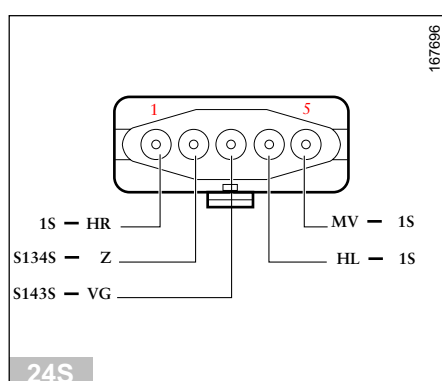
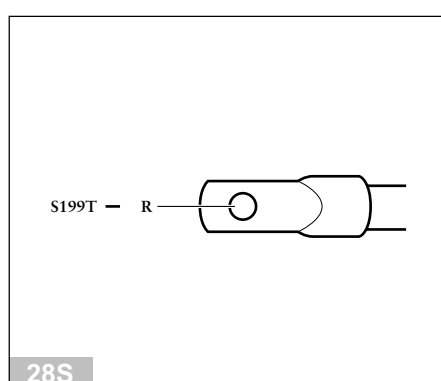
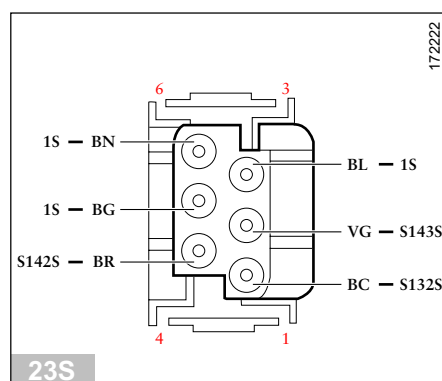
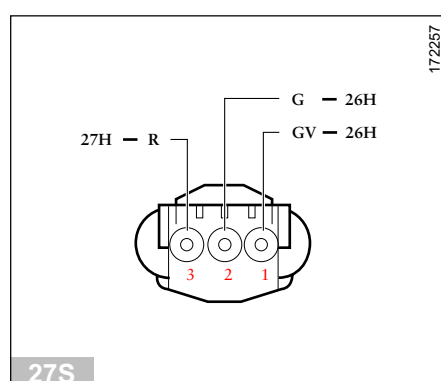
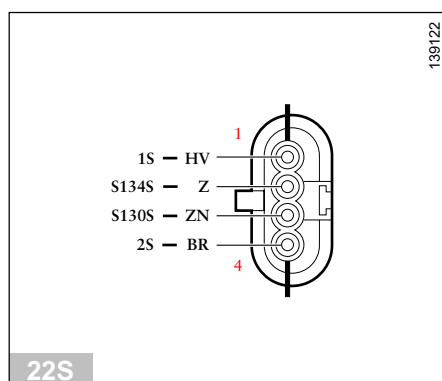
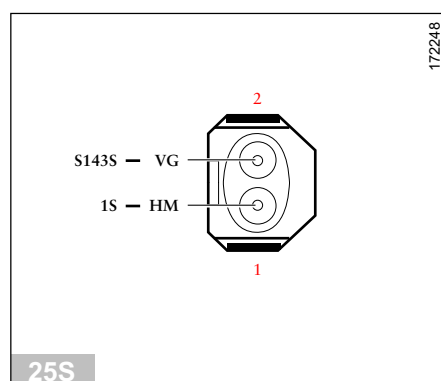
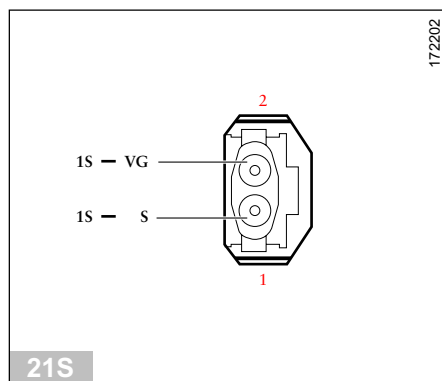



**179167 - RH, bank connection
cables**

29S - Modular manifold solenoid
valve


30S - Intake manifold compensa-
tion solenoid valve

31S - Secondary air solenoid valve
(USA)

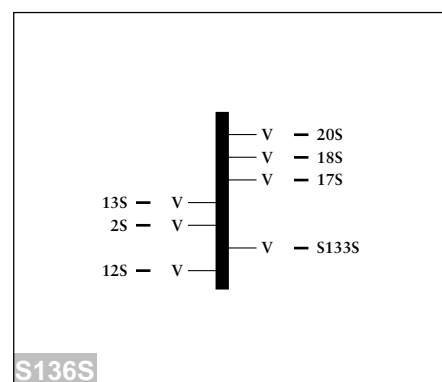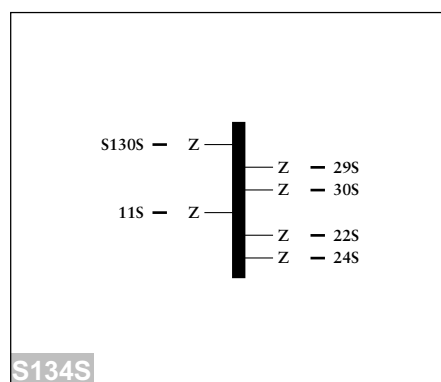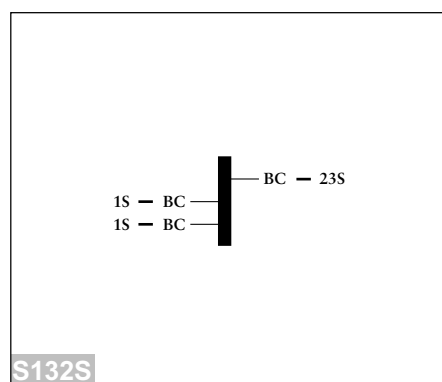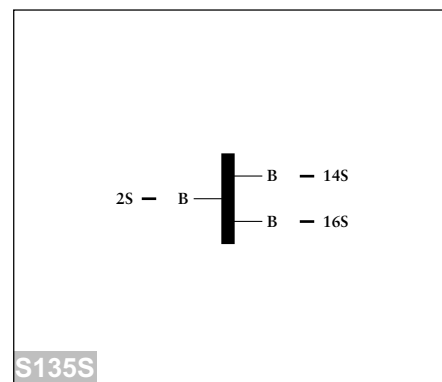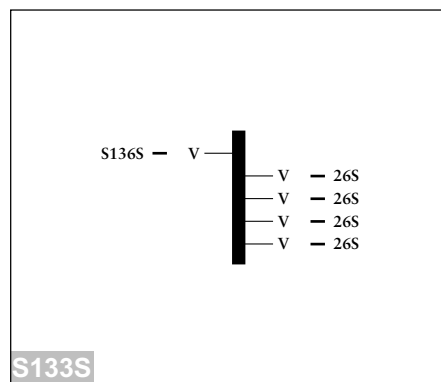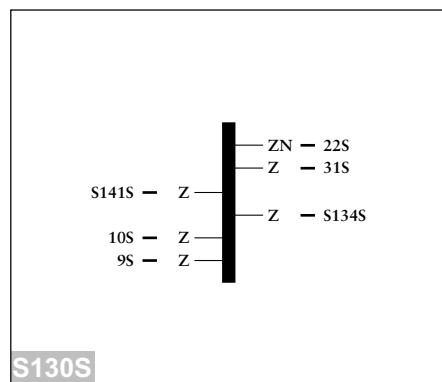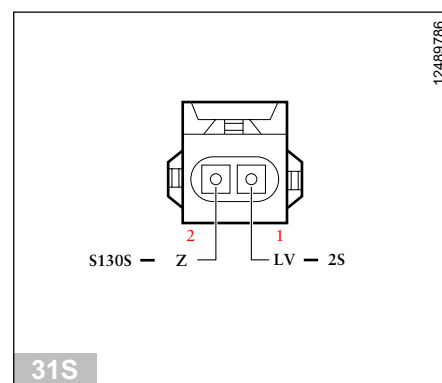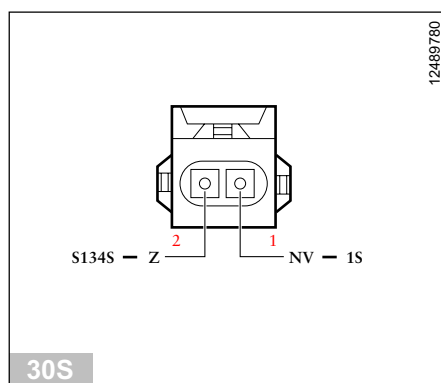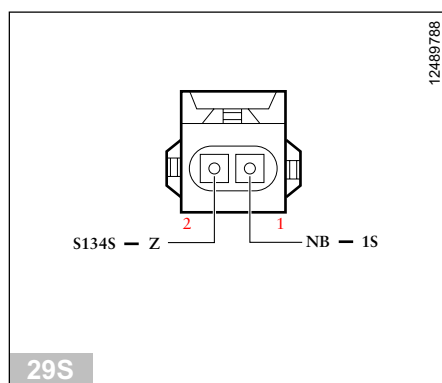


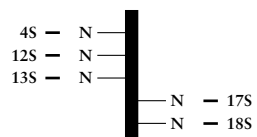


S137S

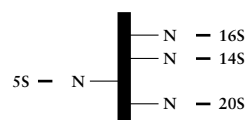


S139S

 

S141S

 

S142S

 







S143S

L4.17 Table T - LH INJECTION AND ENGINE SERVICES WIRING

179168 - LH, bank connection cables













- 1T - BOSCH MOTRONIC ECU for injection start up
- 2T - LH injection cable to LH engine cable connection joint
- 3T - Earth
- 4T - Earth

5T - OXYGEN sensor and heater for LH front bank

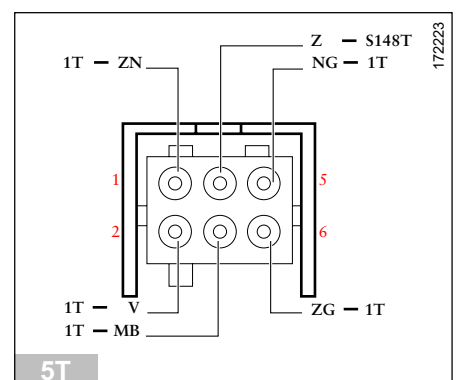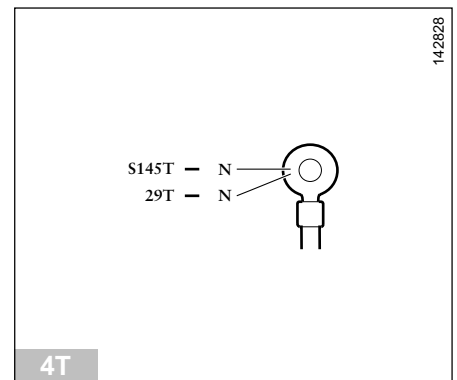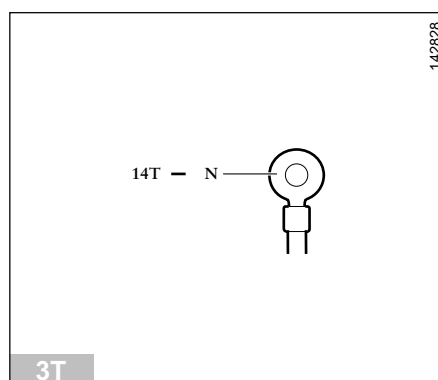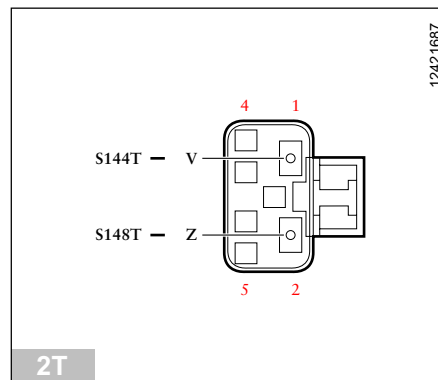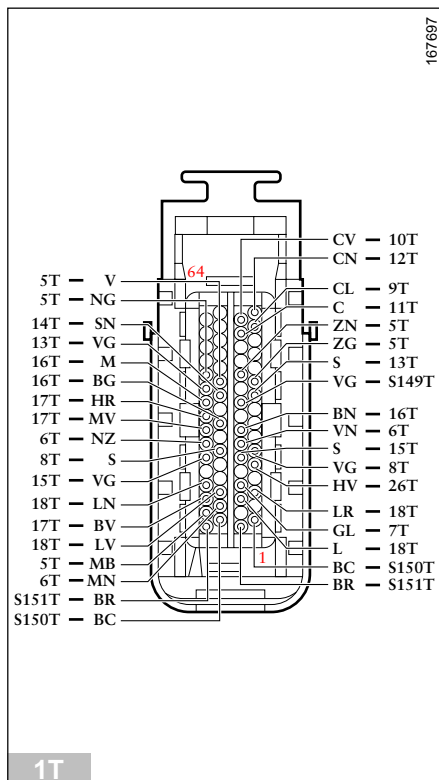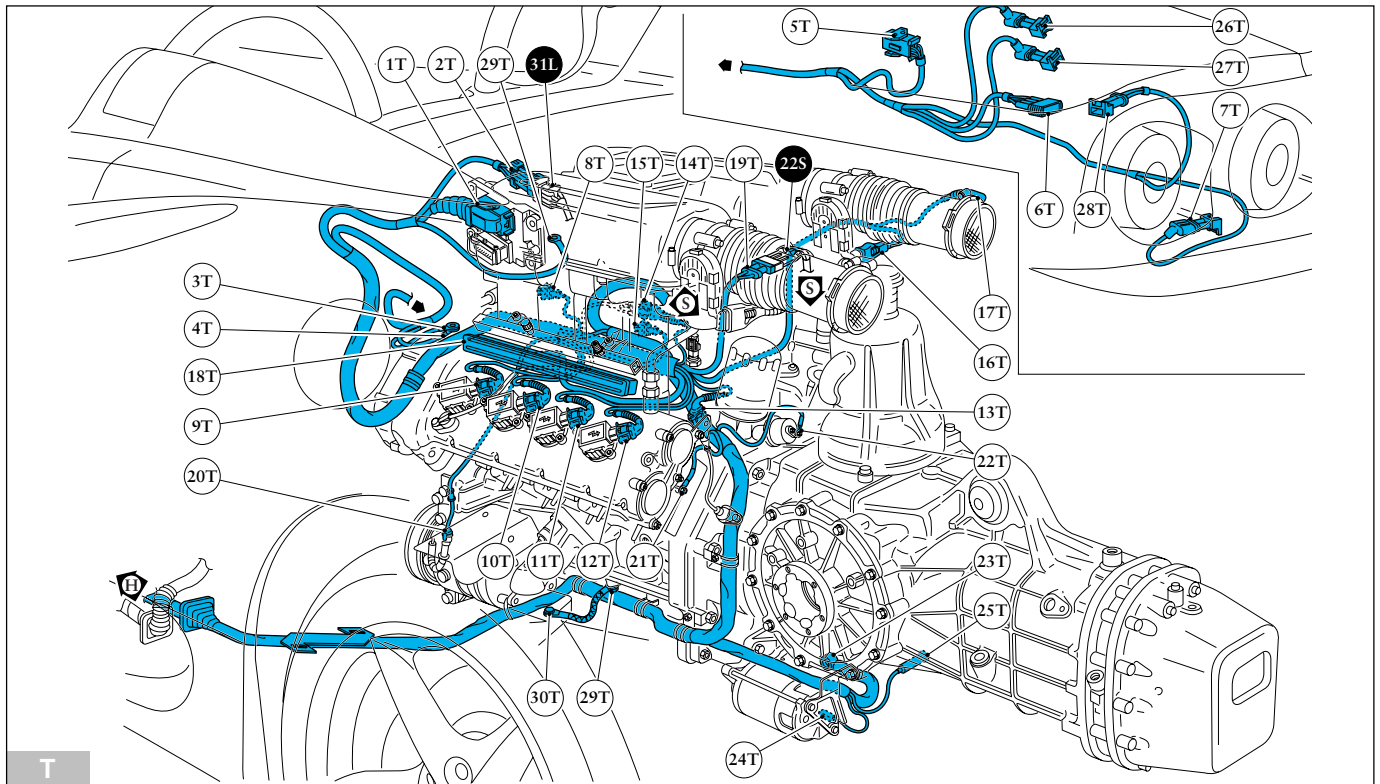

6T - OXYGEN sensor and heater
for LH rear bank
7T - LH exhaust manifold
balancing valve
8T - Detonation sensor 4
9T - Cylinder 8 coil
10T - Cylinder 7 coil
11T - Cylinder 6 coil
12T - Cylinder 5 coil
13T - LH revolution sensor
14T - LH timing sensor

15T - Detonation sensor 3
16T - LH motor-driven throttle
17T - Hot-film air flow meter, LH
bank

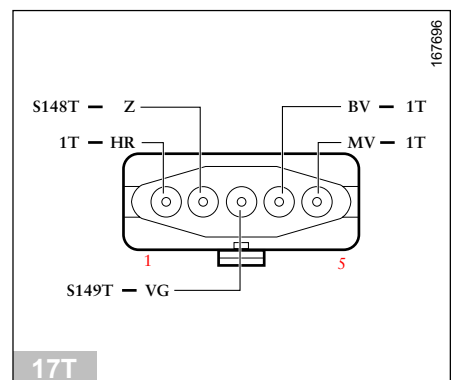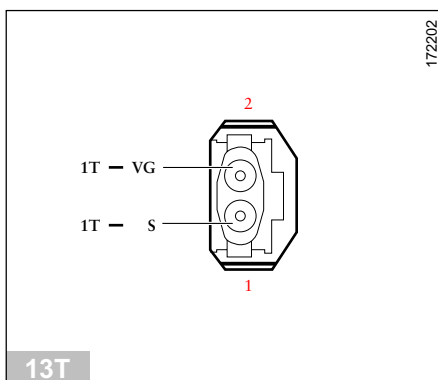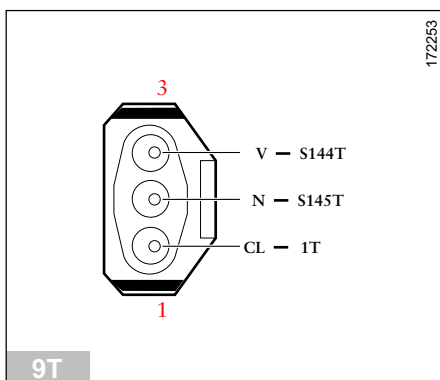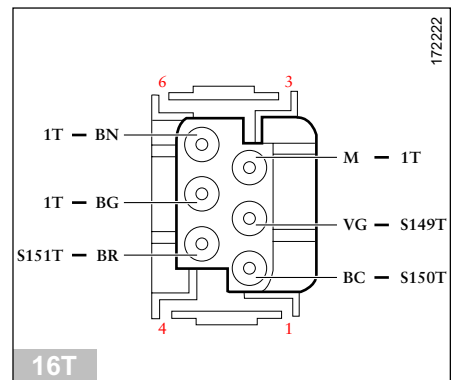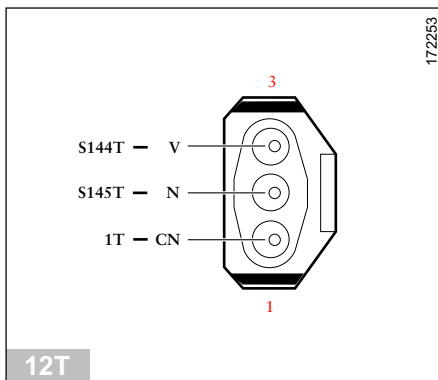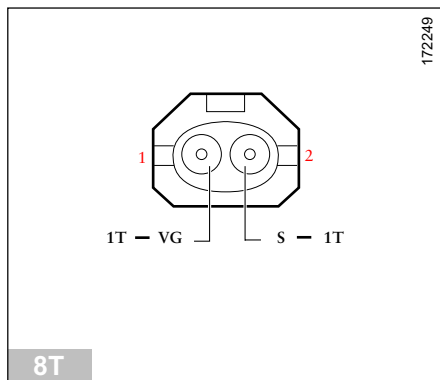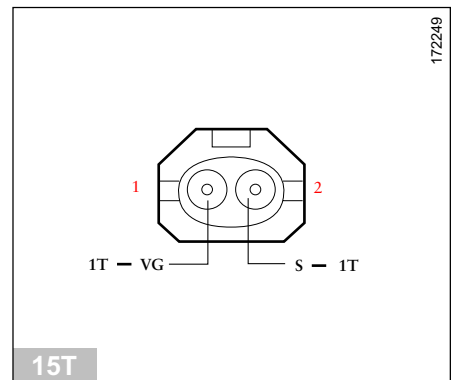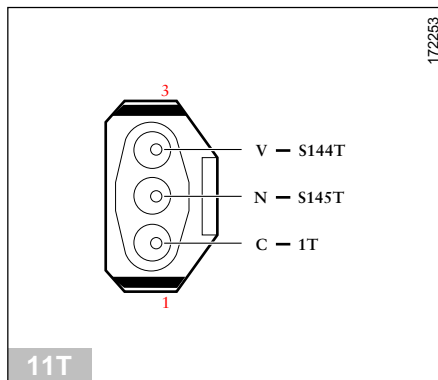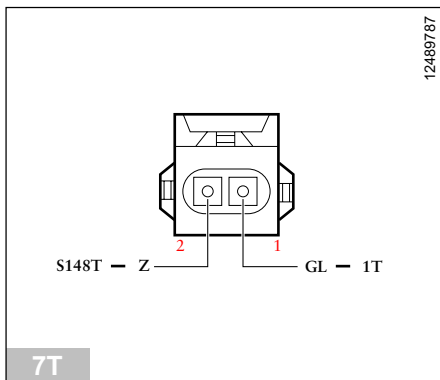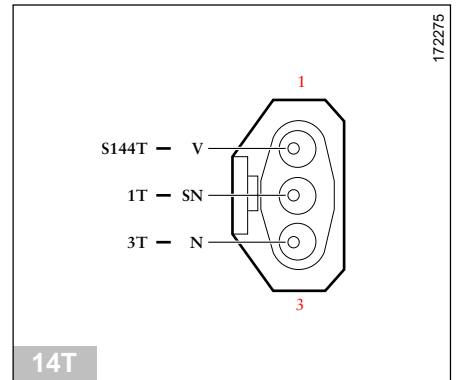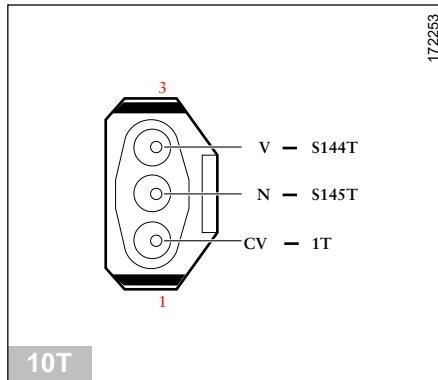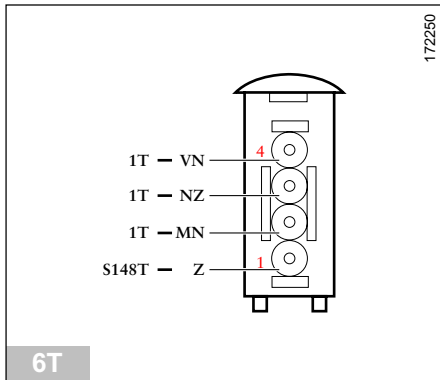

18T - Cable trough for injectors
5/6/7/8

19T - LH injection cable to RH
injection cable joint

**188108 - Engine services
connection wiring loom**

20T - Air conditioner compressor

21T - Electronic earth

22T - Oil pressure sender


23T - Starter motor

24T - Starter motor


25T - Oil temperature sender

**179168 - LH, bank connection
cables**


26T - LH bank anti-evaporation
solenoid valve

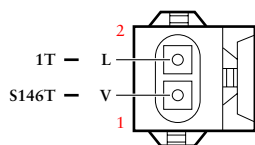


A 135345

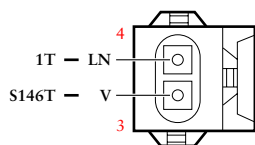

B 135345

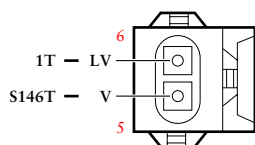


C 135345

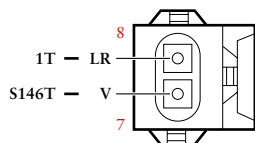

D 135345

18T

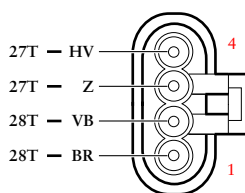


12322197

19T




12321597

 20T




12049644

 21T




142835

 22T




23T

 


12340487

 24T



7759136

25T

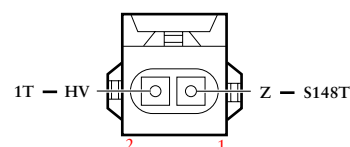

12489782

26T

27T - RH bank anti-evaporation solenoid valve .











28T - On-off solenoid valve

29T - ECU earth

155073 - Stranded earth wire for engine earth to chassis connection

30T - Earth to engine connection

31T - Earth to chassis connection

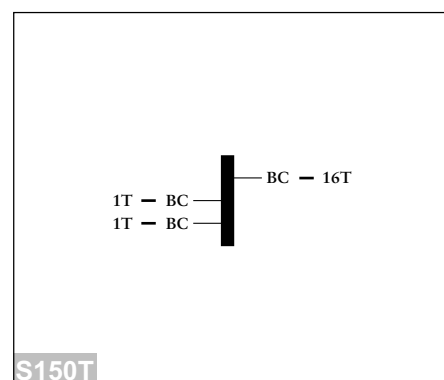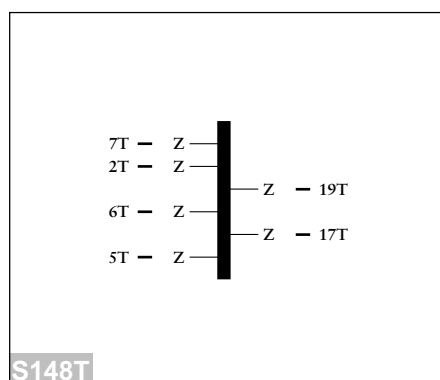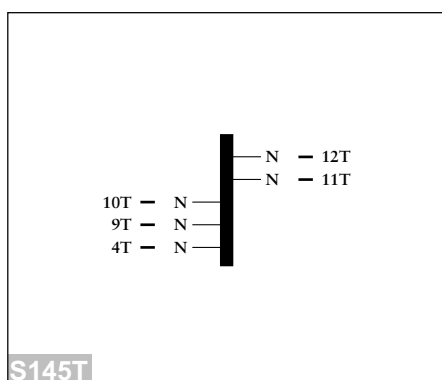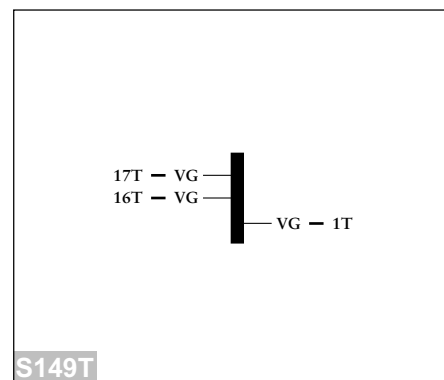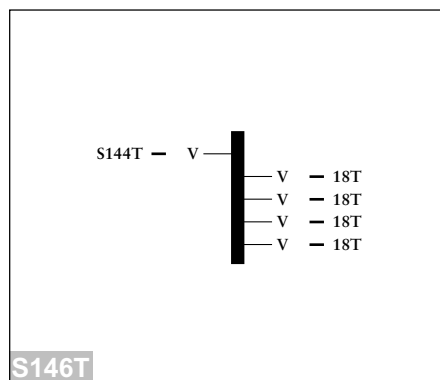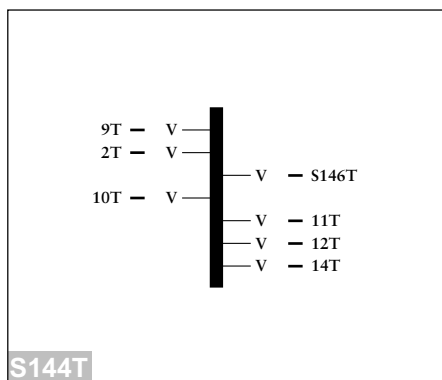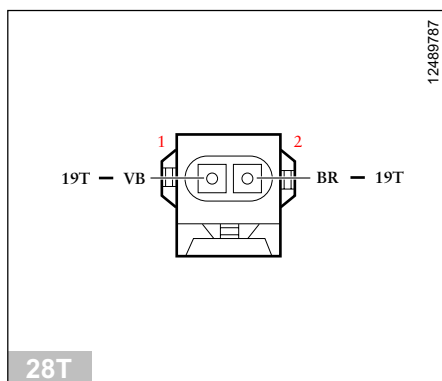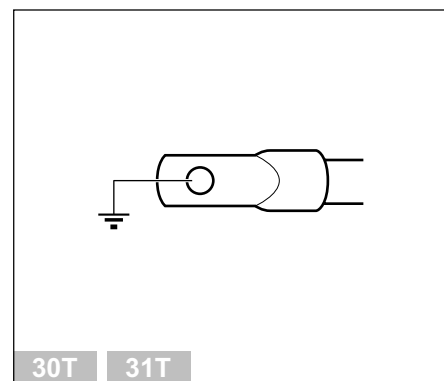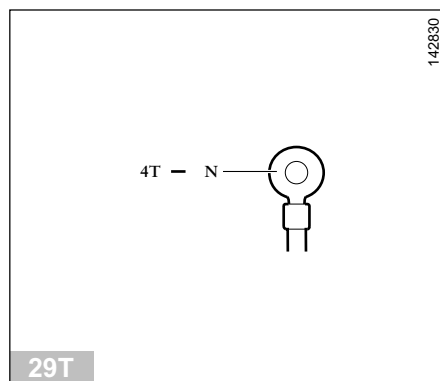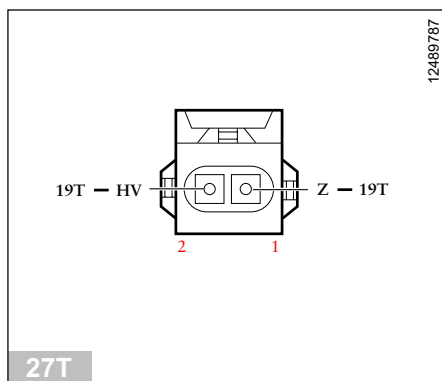

1T — BR —
1T — BR —



BR — 16T

S151T

28S — R —
23T — R —



R — 25H

S199T

L4.18 Table U1 - CAR EARTHS, FRONT SIDE

183347 - Front end connection cables

19A - LH front earth

24A - RH front earth

178310 - ABS/ASR system connection cables

177243 - ABS/ASR system connection cables

4B -Earth

7B -Electronic earth

186522 - Dashboard connection cables

18B - Earth

26B - Power earth

28B - Connection from battery to battery master switch


139607 - Battery master switch

29B - Battery master switch

172982 - Battery master switch - earth connection cable

30B - Connection from battery master switch to earth

31B - Connection from earth to battery master switch

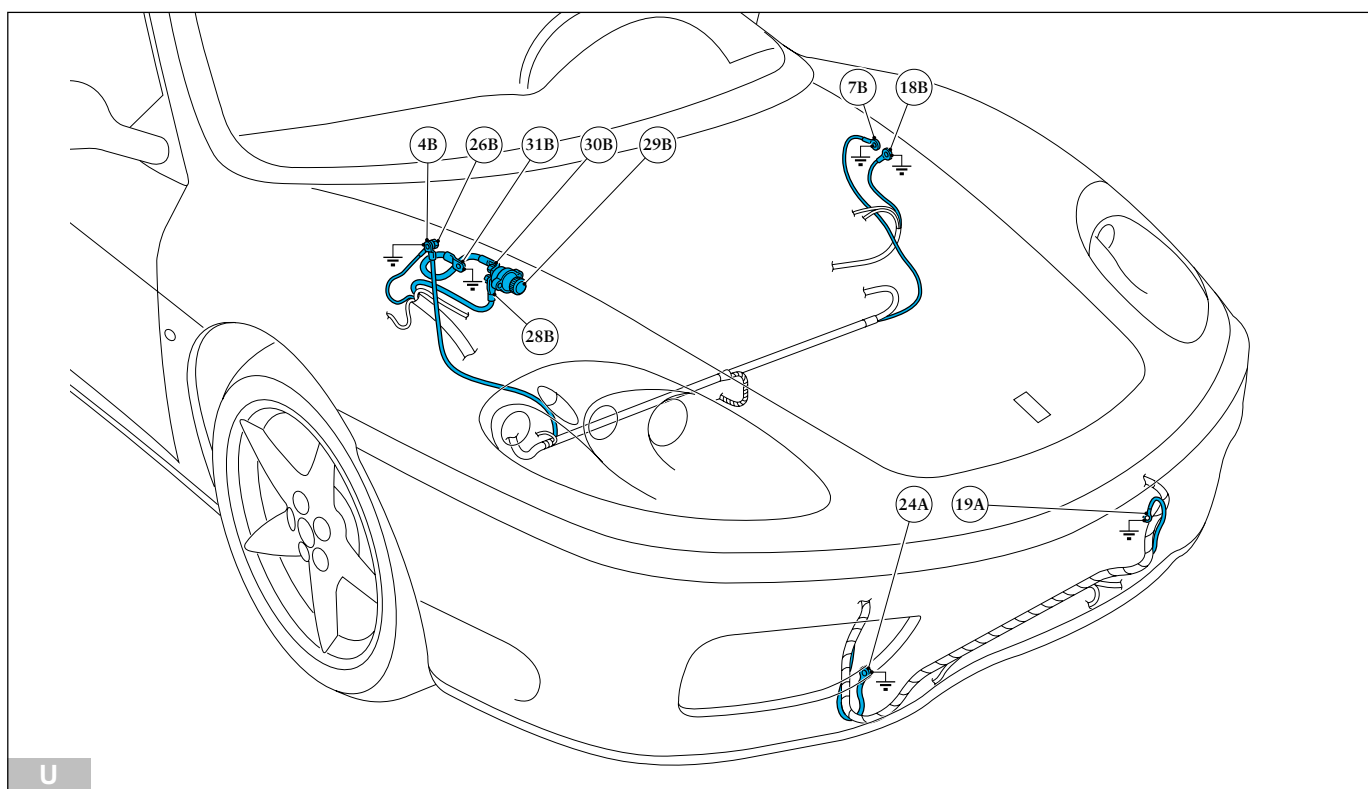

L4.19 Table U2 - CAR EARTHS, DASHBOARD – TUNNEL AREA

179194 - Dashboard connection cables

186522 - Dashboard connection cables

13C - Electronic earth

14C - Earth

5D - Battery 12V (terminal -)

9F - Earth


10F - Earth

164825 - Connection cable for AIRBAG system

30D - Electronic earth

160855 - Stranded earth wire

31D - Stranded earth wire for ECU AIRBAG

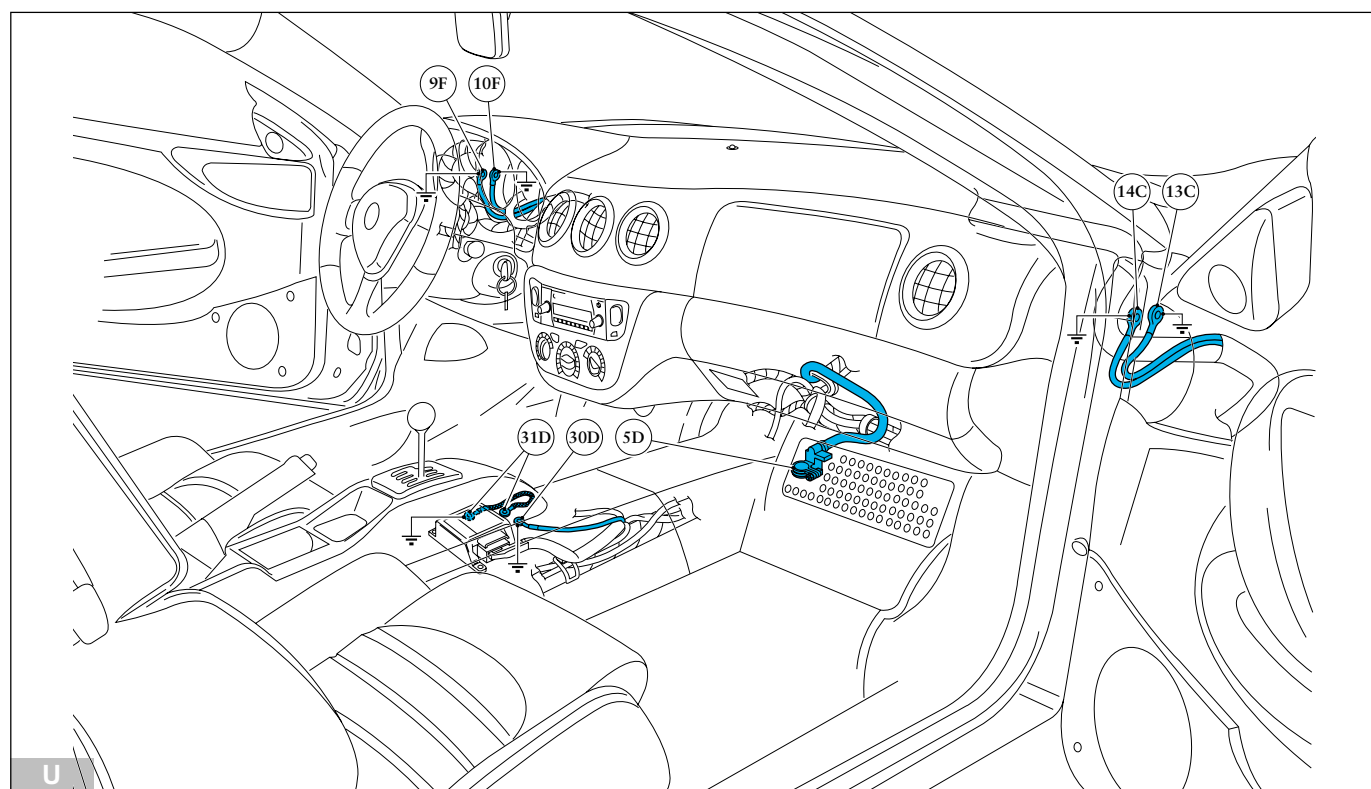

L4.20 Table U3 - CAR EARTHS, REAR SIDE PASSENGER – ENGINE COMPARTMENT

177913 - RH, rear tunnel connection cables

182200 - RH, rear tunnel connection cables, USA M.Y. 2000

4G - Earth

5G - Earth

179173 - LH, rear tunnel connection cables

3H - Power earth

4H - Earth

184954 - RH, engine compartment connection cables

179169 - RH, engine compartment connection cables, USA M.Y. 2000

11L - Earth

168843 - Stop-lamp connection cables

17L - Earth

184955 - LH, engine compartment connection cables

179170 - LH, engine compartment connection cables, USA M.Y. 2000

28L - Earth

34L - Earth

181343 - Electronically-controlled gearbox connection cables

3P - Earth (A)

4P - Earth (B)

13P - Earth (E)

26P - Earth (C)

27P - Earth (D)

179167 - RH, bank connection cables

3S - Earth

4S - Earth

5S - Earth

179168 - LH, bank connection cables

3T - Earth

4T - Earth

29T - ECU earth


179833 - Engine services connection wiring loom

21T - Electronic earth

155073 - Stranded earth wire for engine earth to chassis connection

30T - Earth to engine connection

31T - Earth to chassis connection

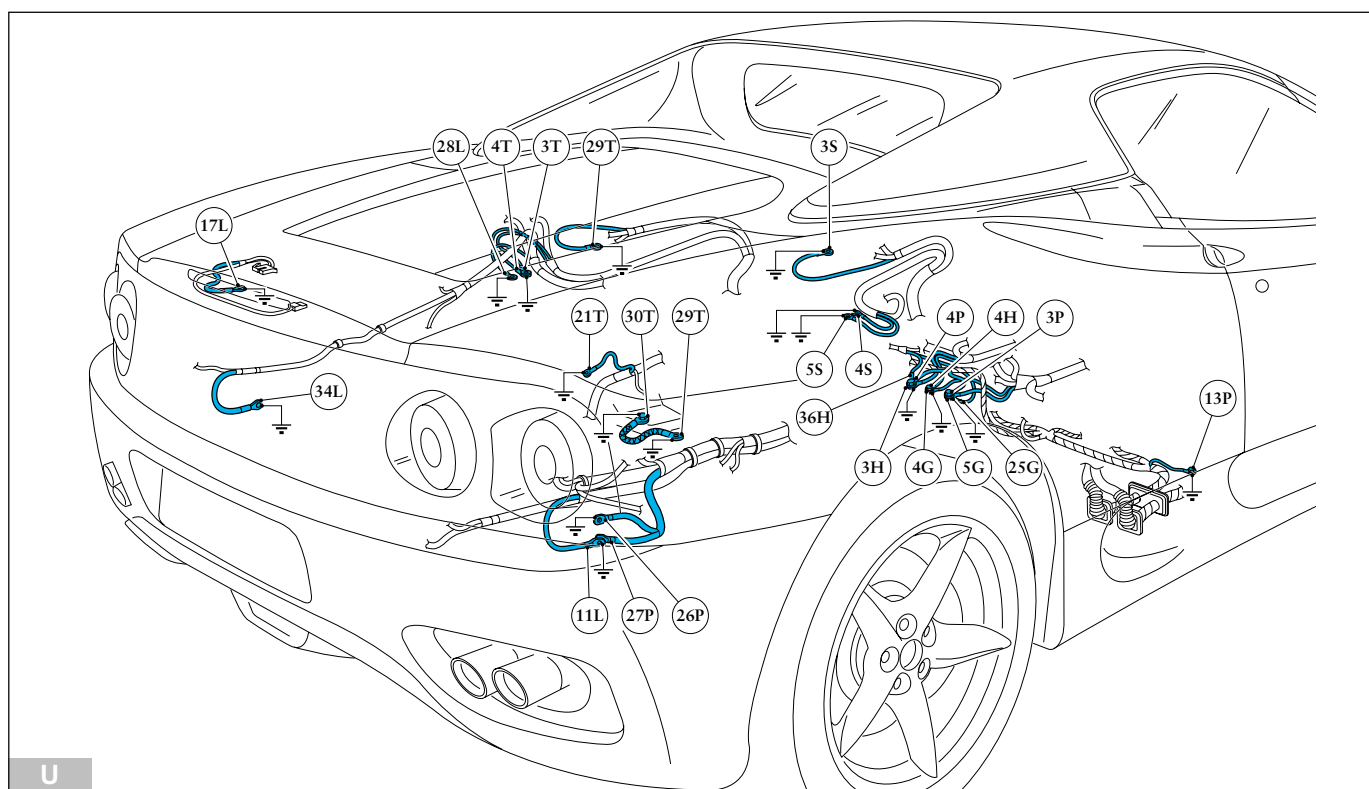

Cable validity table

Description	Table	Code	Validity
FRONT END CONNECTION CABLES	A	190047	Valid from Ass. No. 43232
		183347	Valid up to Ass. No. 43231
RH ELECTRIC FAN WIRING	A	179010	
ABS/ASR SYSTEM CONNECTION CABLES	B - L	178310	Not for RHD
		177243	For RHD
DASHBOARD CONNECTION CABLES	B - C - D E - F - G	188897	Not for RHD - Valid from Ass. No. 41814
		179194	Not for RHD - Valid up to Ass. No. 41332
		189234	For RHD - Valid from Ass. No. 41710
		186522	For RHD - Valid up to Ass. No. 41396
BATTERY MASTER SWITCH	B	139607	
BATTERY MASTER SWITCH-EARTH CONNECTION CABLE	B	172982	
STEREO SYSTEM/CD LOADER CONNECTION CABLE	B - D	181321	
CONNECTION CABLE FOR AIRBAG SYSTEM	C - D - E G - H	164825	
PREAMPLIFIER FOR RADIO AERIAL	C	176238	
AERIAL WIRE TO WINDSCREEN	C	176239	
RADIO AERIAL CABLE	C	176237	

Description	Table	Code	Validity
CONNECTION CABLES FOR PEDAL BOARD DEVICES	D	183686	Not for RHD - Valid for USA M.Y. 2000 and CDN M.Y. 2000 - Not for USA and CDN from Ass. No. 38396, Not for F1, and from Ass. No. 36995, for F1
		172887	Not for RHD - Not for USA M.Y. 2000 and CDN M.Y. 2000 - Valid up to Ass. No. 38395, Not for F1, and up to Ass. No. 36994, for F1
RH, REAR TUNNEL CONNECTION CABLES	D - G - H	177913	Not for USA M.Y. 2000 and CDN M.Y. 2000
		182200	Valid for USA M.Y. 2000 and CDN M.Y. 2000
LH, REAR TUNNEL CONNECTION CABLES	D - H	188898	Valid from Ass. No. 31223
		179173	Valid up to Ass. No. 31222
STRANDED EARTH WIRE	D	160855	
TUNNEL - CONSOLE CONNECTION CABLES	D	181284	
RH, ENGINE COMPARTMENT CONNECTION CABLES	G - L	184954	Not for EU. 3 USA M.Y. 2000 and CDN M.Y. 2000
		179169	Valid for EU. 3 USA M.Y. 2000 and CDN M.Y. 2000
LH, ENGINE COMPARTMENT CONNECTION CABLES	G - H - L	184955	Not for USA M.Y. 2000 and CDN M.Y. 2000
		179170	Valid for USA M.Y. 2000 and CDN M.Y. 2000
CABLES TO ALARM SYSTEM ECU	H	166420	Valid for USA M.Y. 2000 and CDN M.Y. 2000
ENGINE SERVICES CONNECTION WIRING LOOM	H - T -S	188108	
JUMPER FOR MECHANICAL GEARBOX START-UP	H	178411	

Description	Table	Code	Validity
STOP-LAMP CONNECTION CABLES	L	168843	
NUMBER PLATE LIGHT CABLES	L	182985	
REAR LIGHTS CONNECTION CABLES	L	173429	Not for USA M.Y. 2000 and CDN M.Y. 2000
		182208	Valid for USA M.Y. 2000 and CDN M.Y. 2000
DOOR CONNECTION CABLES	M - N	183327	
ELECTRONICALLY-CONTROLLED GEARBOX CONNECTION CABLES	P	181343	Valid for F1
TOP SYSTEM WIRING	Q	66455200	
HYDRAULIC PUMP	Q	6637600	
TOP CONNECTION CABLE BUNDLE	Q	179949	
RH, BANK CONNECTION CABLES	S	179167	
LH, BANK CONNECTION CABLES	T	179168	
STRANDED EARTH WIRE FOR ENGINE EARTH TO CHASSIS CONNECTION	T	155073	