

Vehicle make:

VW

Engine type:

2000 DIGIFANT before middle 1996.

Cautions:

Don't confuse with post 1996 motors. These engines have air flow meters.

ECU location:

On left side under plastic wiper mechanism cover.

Special Notes:


Vehicles have knock sensors. See note under general. Use and map only with leaded fuel!

Unichip version:

Q

Starting Map:

01a

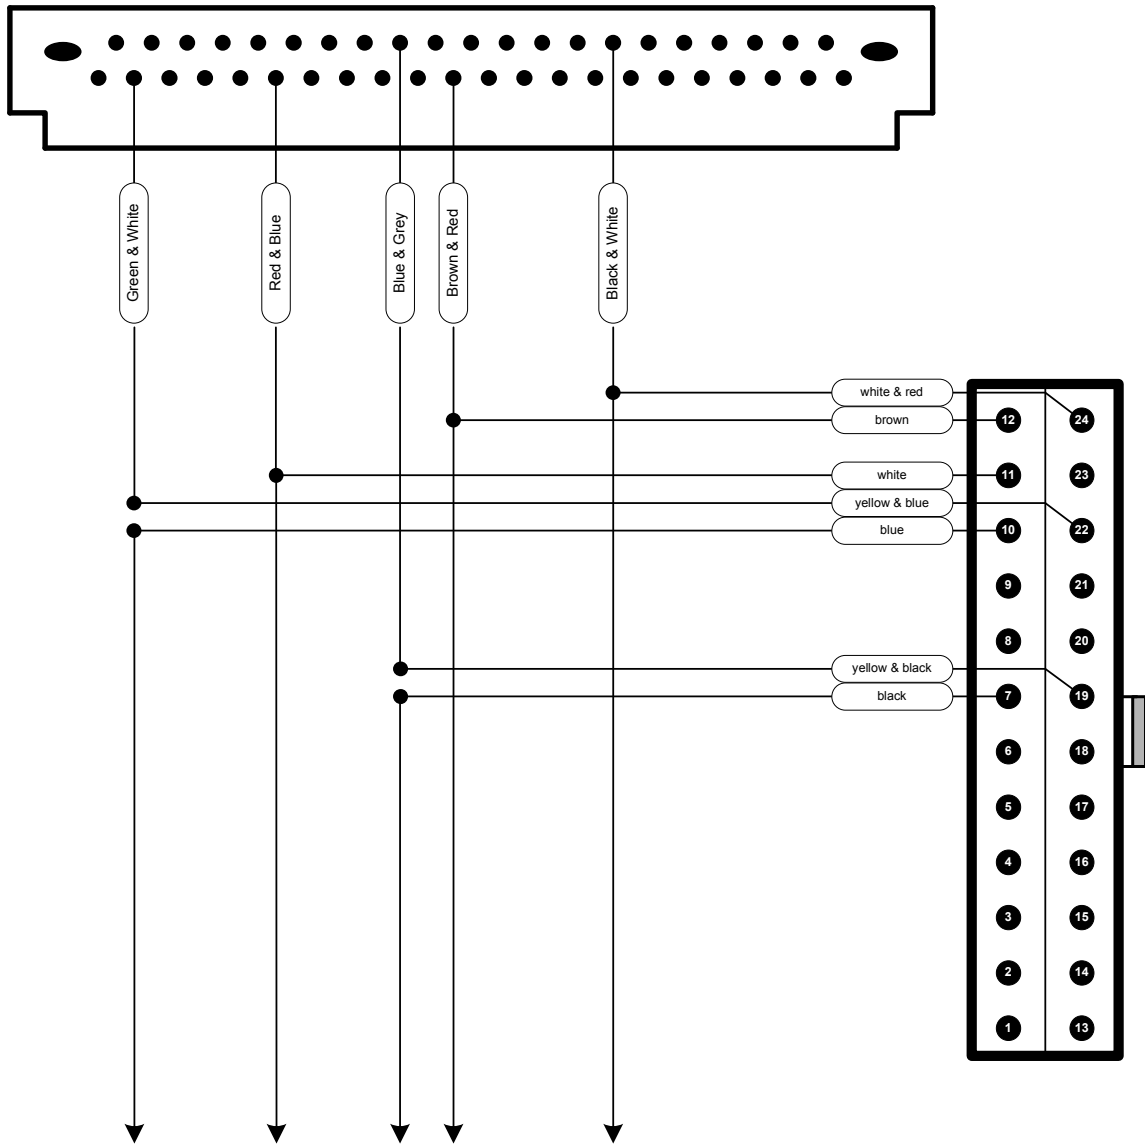

**DASTEK**

Piggyback computers  
copyright © 2007