



PEUGEOT 806 and EXPERT

ENGINE TYPE: DHX (XUD9BTF)

BOSCH AS3 VP20 INJECTION

WIRING DIAGRAMS DIESEL INJECTION :

1 - NAMING OF PARTS:

BB00								battery.
BF00		passenger		compartment		fuse		box.
BF01		engine		compartment		fuse		box.
BMF1			maxi			fuse		unit.
PSF1	junction	box	-	fuse	box	in	engine	compartment.
C001				diagnostic				connector.
C1030	test	connector		-	engine		running	information.
C1300		injection-ignition				test		connector.
CA00				ignition				switch.
V1000		load				warning		lamp.
V1150		pre-heat				warning		lamp.
V1300		engine		diagnosis		warning		lamp.
V4020	engine	coolant		maximum	temperature		warning	lamp.
V4050	water	in		diesel	fuel		warning	lamp.
V4110	engine	oil		low	pressure		warning	lamp.
0004				instrument				panel.
1010								starter.
1020								alternator.
1030		engine-on				information		relay.
1086		alarm		starter		cut-off		relay.
1150		pre-heat				control		unit.
1160				glow				plugs.
1203				inertia				switch.
1204		impact				safety		relay.
1208	diesel	injection	pump	(advance	corrector,	fuel	cut-off	solenoid).
1220		engine		coolant		temperature		sensor.
1232		idle		maintaining		solenoid		valve.
1249		load			lever			potentiometer.
1253	all	or		nothing	solenoid		valve	(EGR).
1255		fuel		cut-off		solenoid		valve.
1256		advance				solenoid		valve.
1260		injector		needle		lift		sensor.

1304	engine	management	multi-function	double	relay.
1313		engine	speed		sensor.
1320	engine	management	control		unit.
1620		vehicle	speed		sensor.
4050	water	in	fuel		sensor.
4110	oil		pressure		switch.
4210					tachometer.
4630		vehicle	speed		sensor.
6235	central	locking	control		unit.
6235B	central	locking	control		unit.
8015	compressor	cut-off relay	controlled by coolant temperature		unit.
8016	compressor	cut off relay	controlled by the injection		ECU.
8020		air	conditioning		compressor.
8080		air	conditioning		ECU.
8200		coded	anti-start		keypad.
8208	coded anti-start ECU.				

2 - HARNESSES:


10	AV:	front	harness.
20	MOT:	engine	harness.
50 P/B: fascia harness.			

3 - COLOUR CODES:





BA:	white.
BE:	blue.
BG:	beige.
GR:	gray.
JN:	yellow.
MR:	brown.
NR:	black.
RG:	red.
RS:	pink.
VE:	green.
VI: mauve.	

4 - SCHEMATIC DIAGRAM :

806 CODED ANTI-START AIR CONDITIONING :

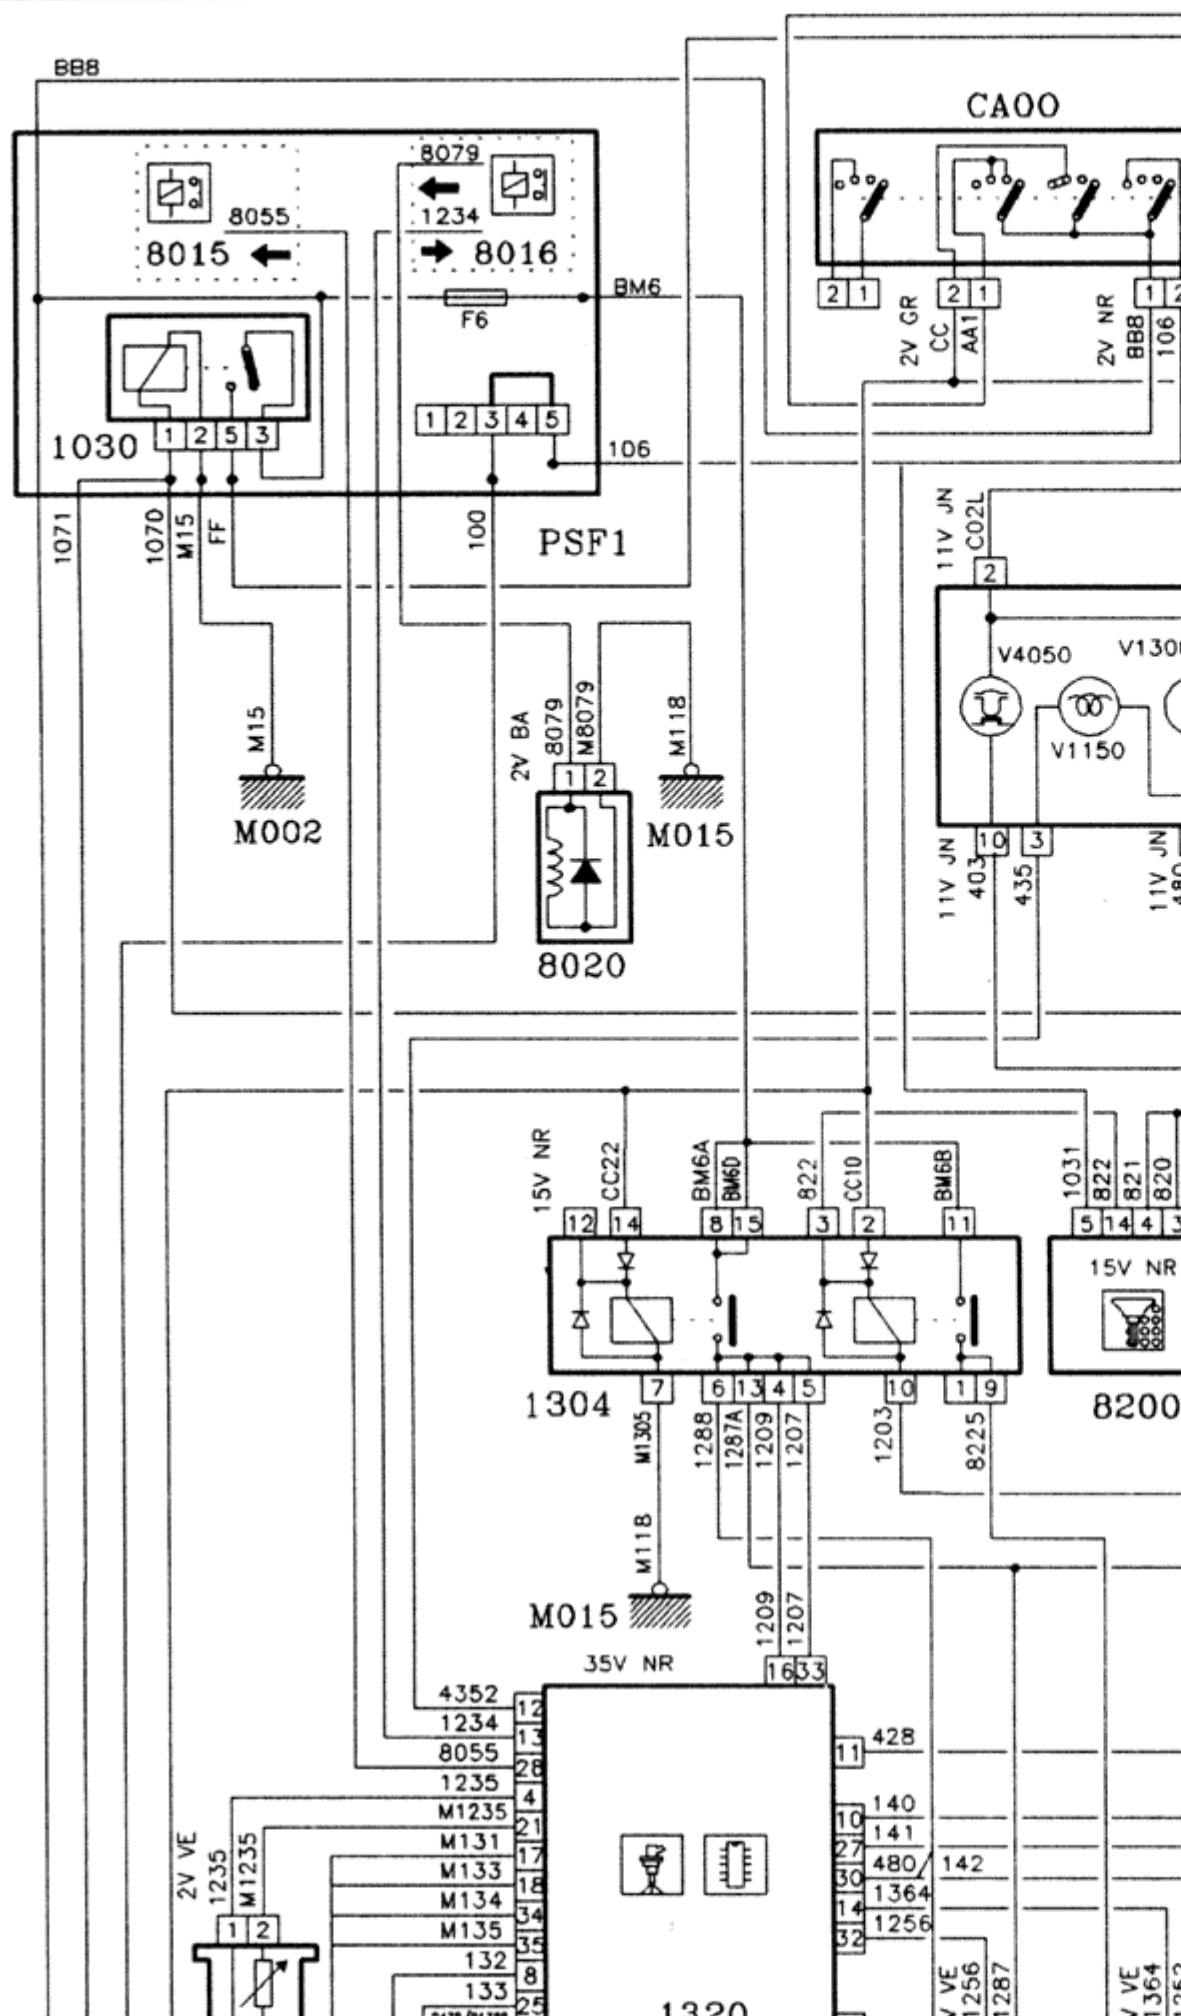


EXPERT AIR CONDITIONING CODED ANTI-START ANTI-LOCK BRAKES :

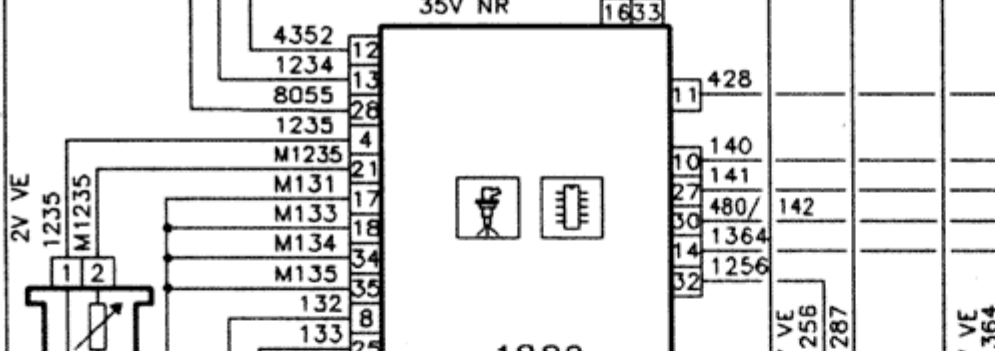
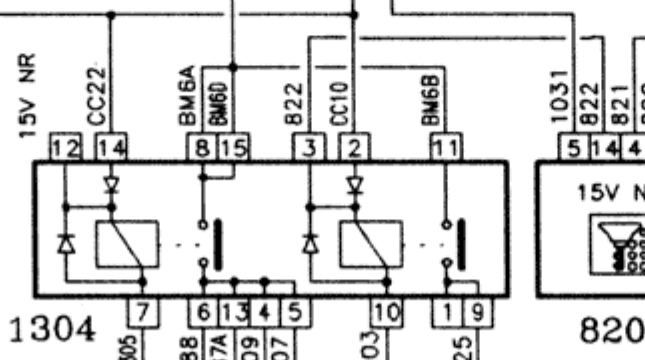
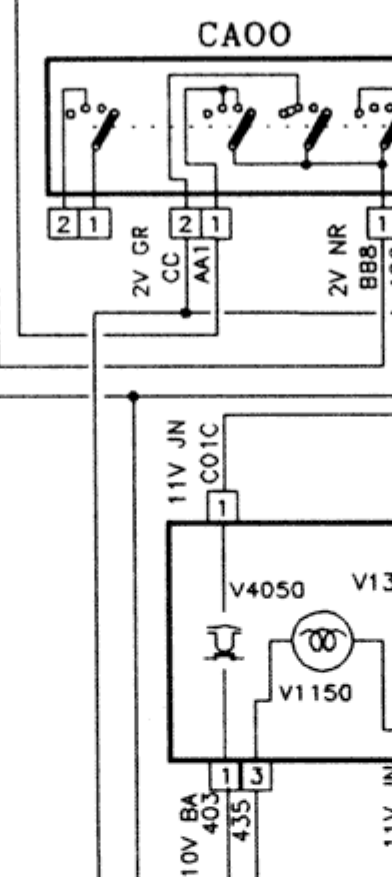
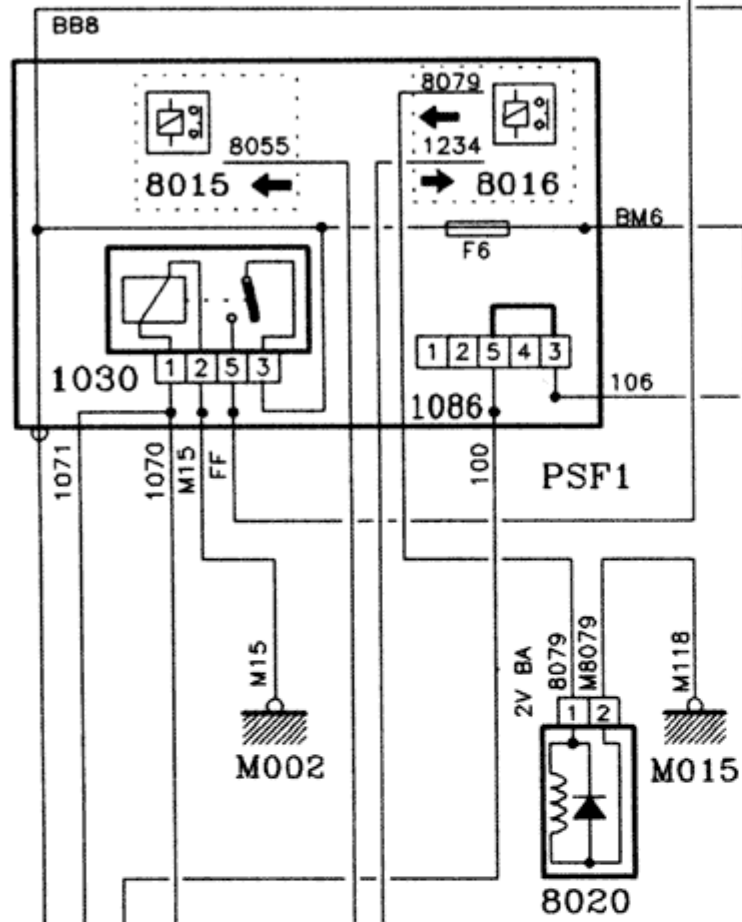


5 - INSTALLATION DIAGRAM :

806 CODED ANTI-START AIR CONDITIONING :

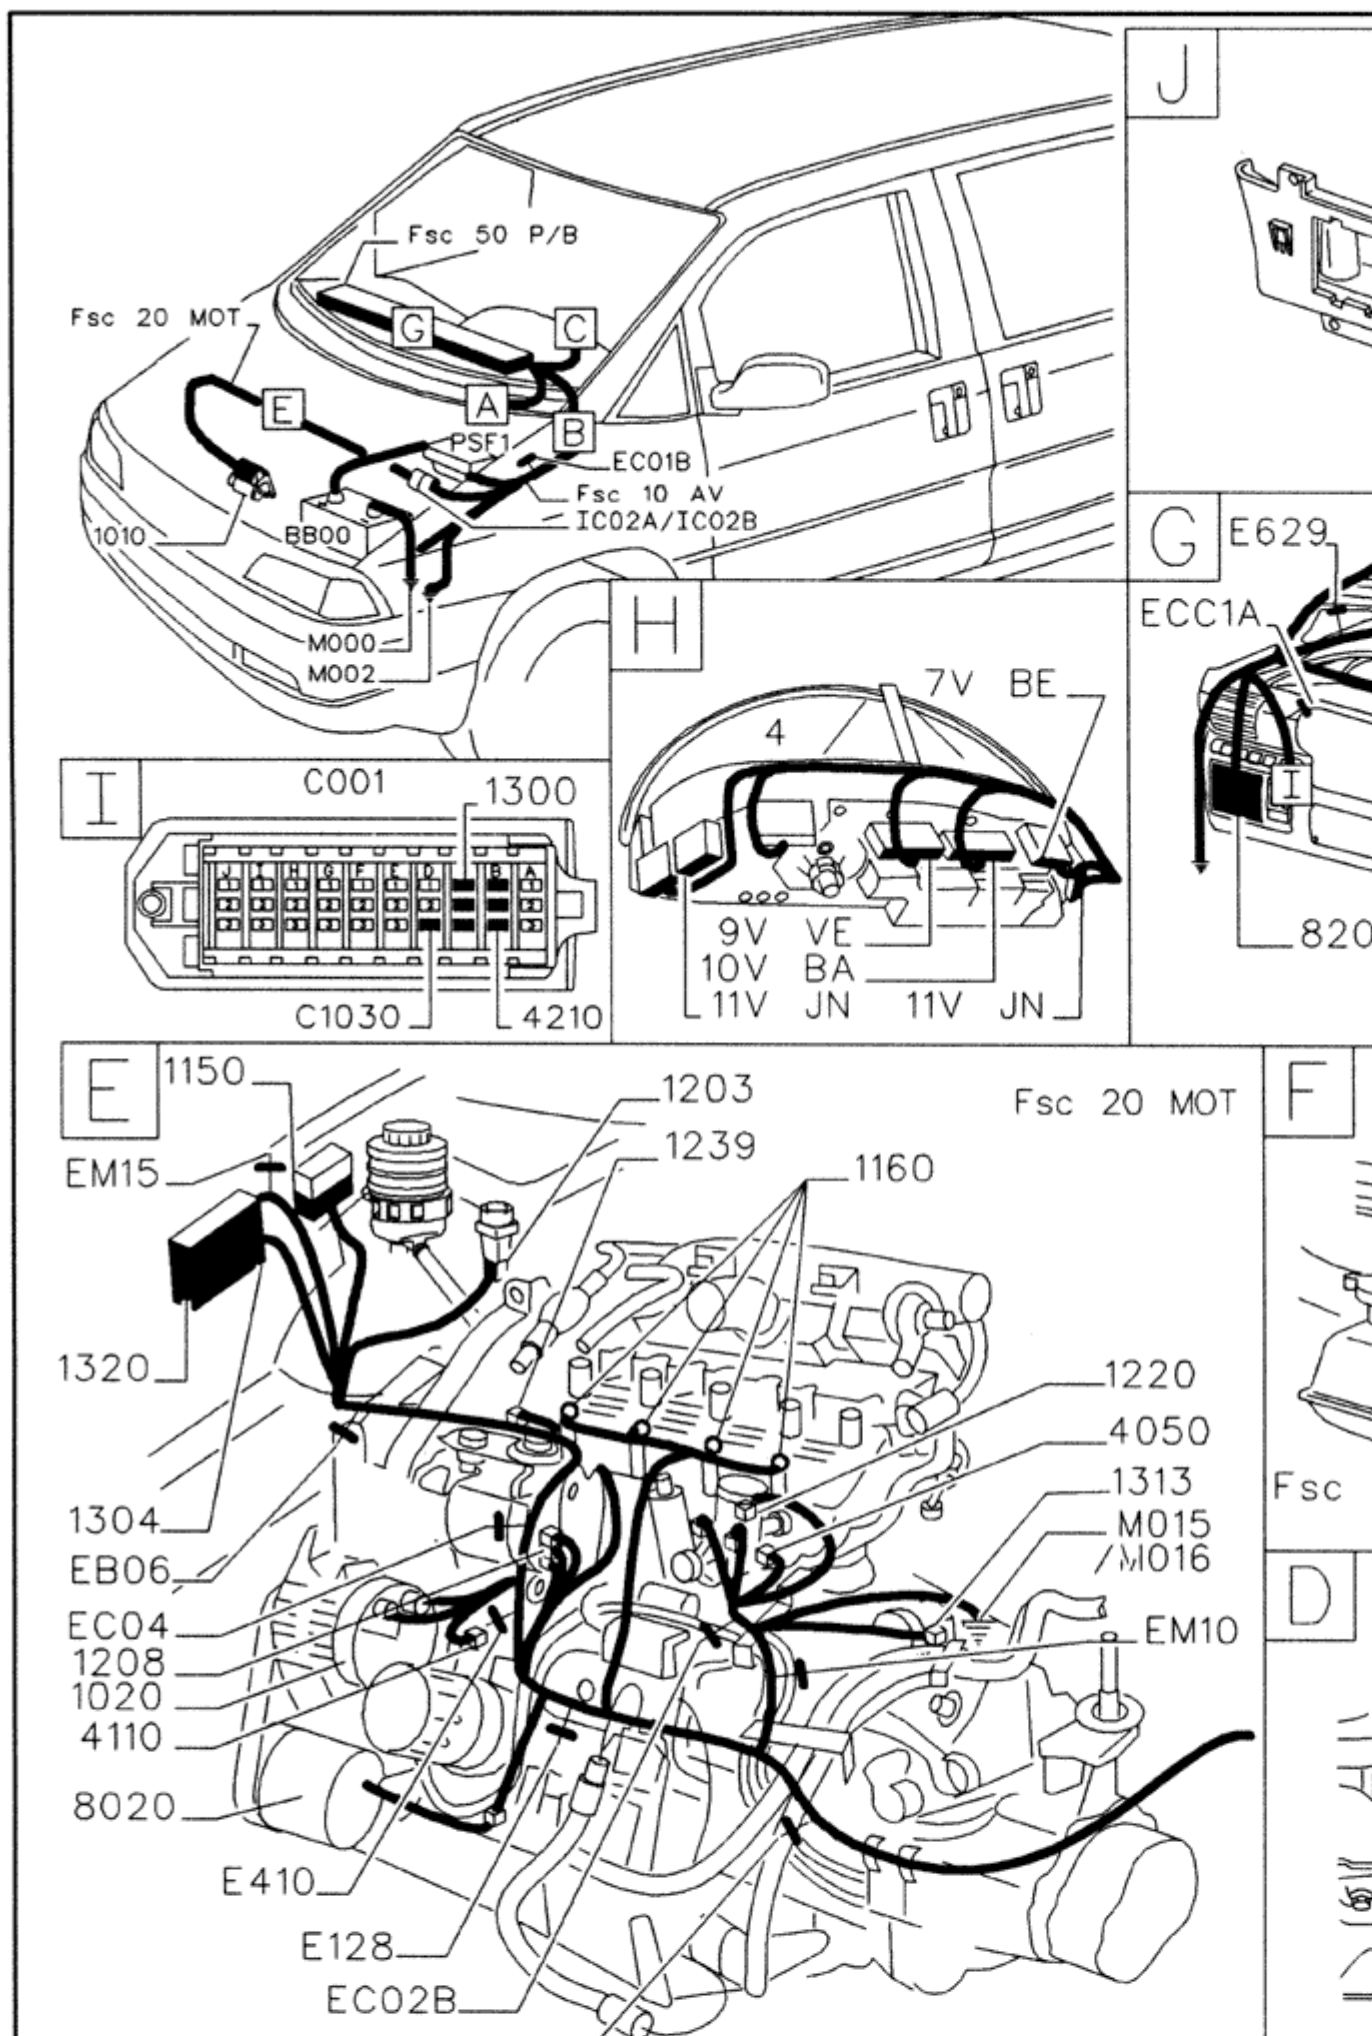


EXPERT AIR CONDITIONING CODED ANTI-START ANTI-LOCK BRAKES :

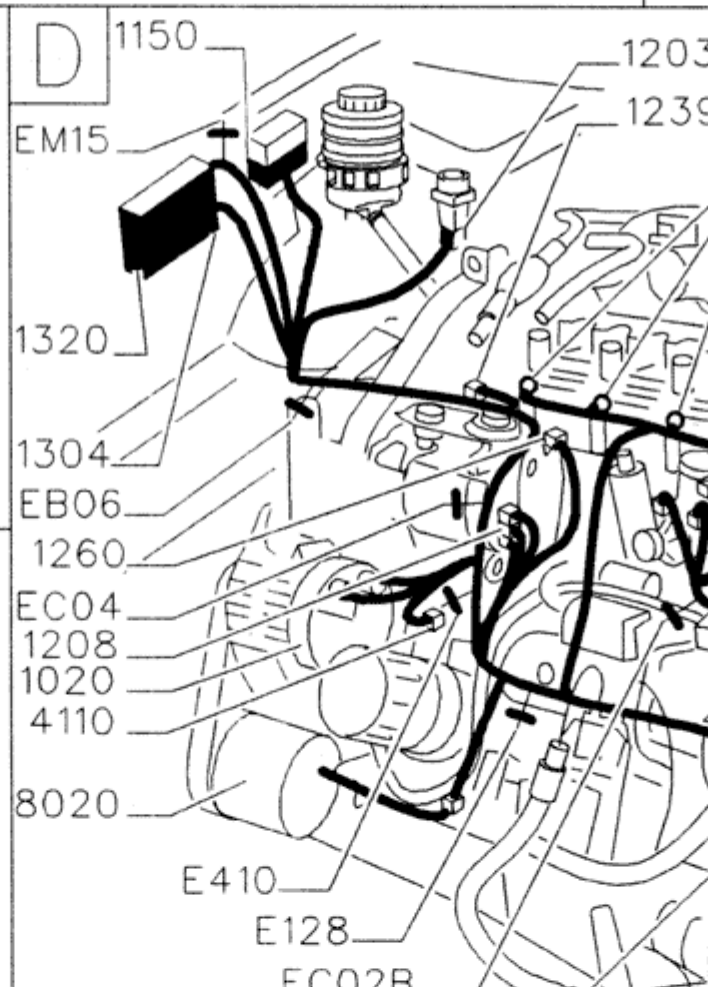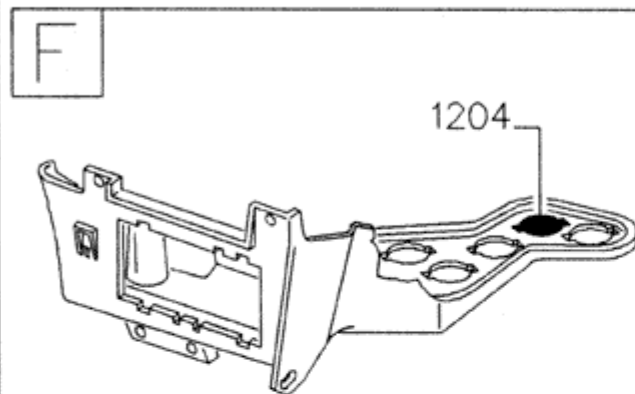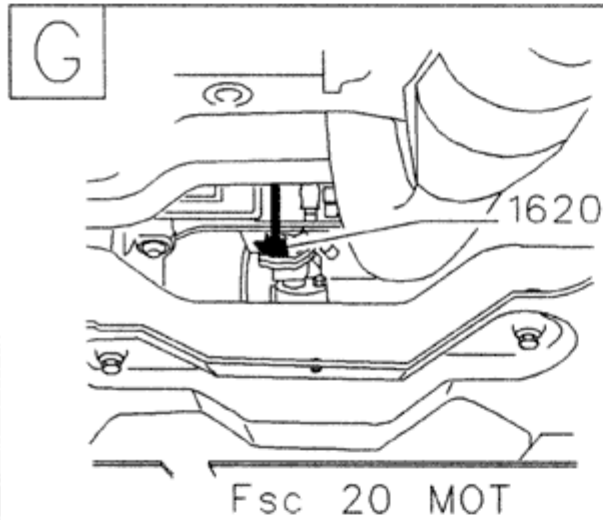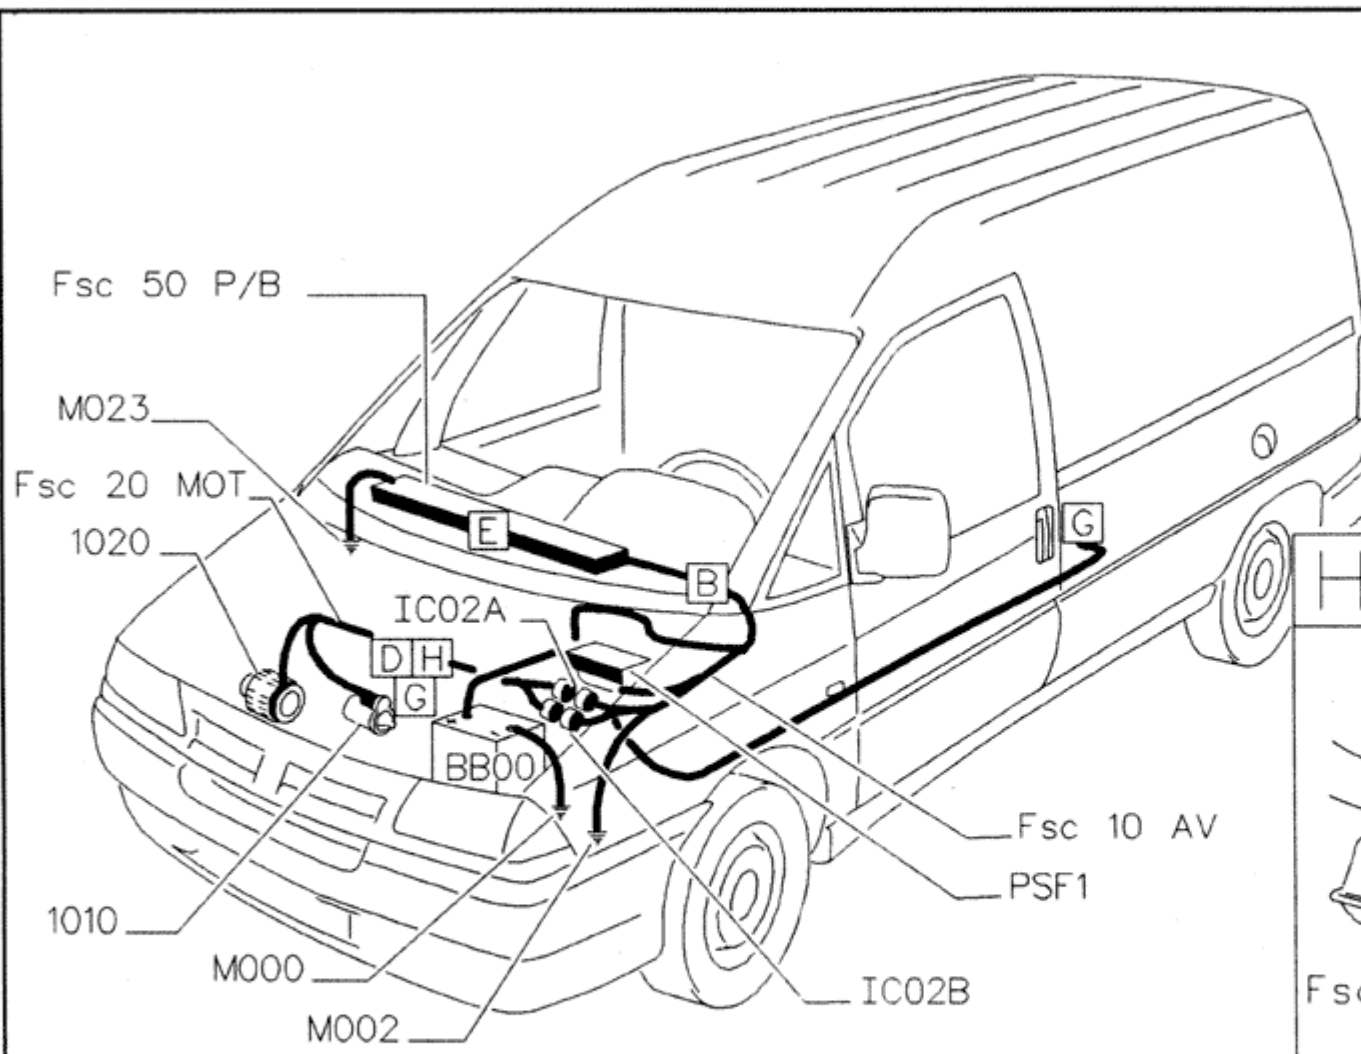


6 - WIRING DIAGRAM :



806 CODED ANTI-START AIR CONDITIONING :

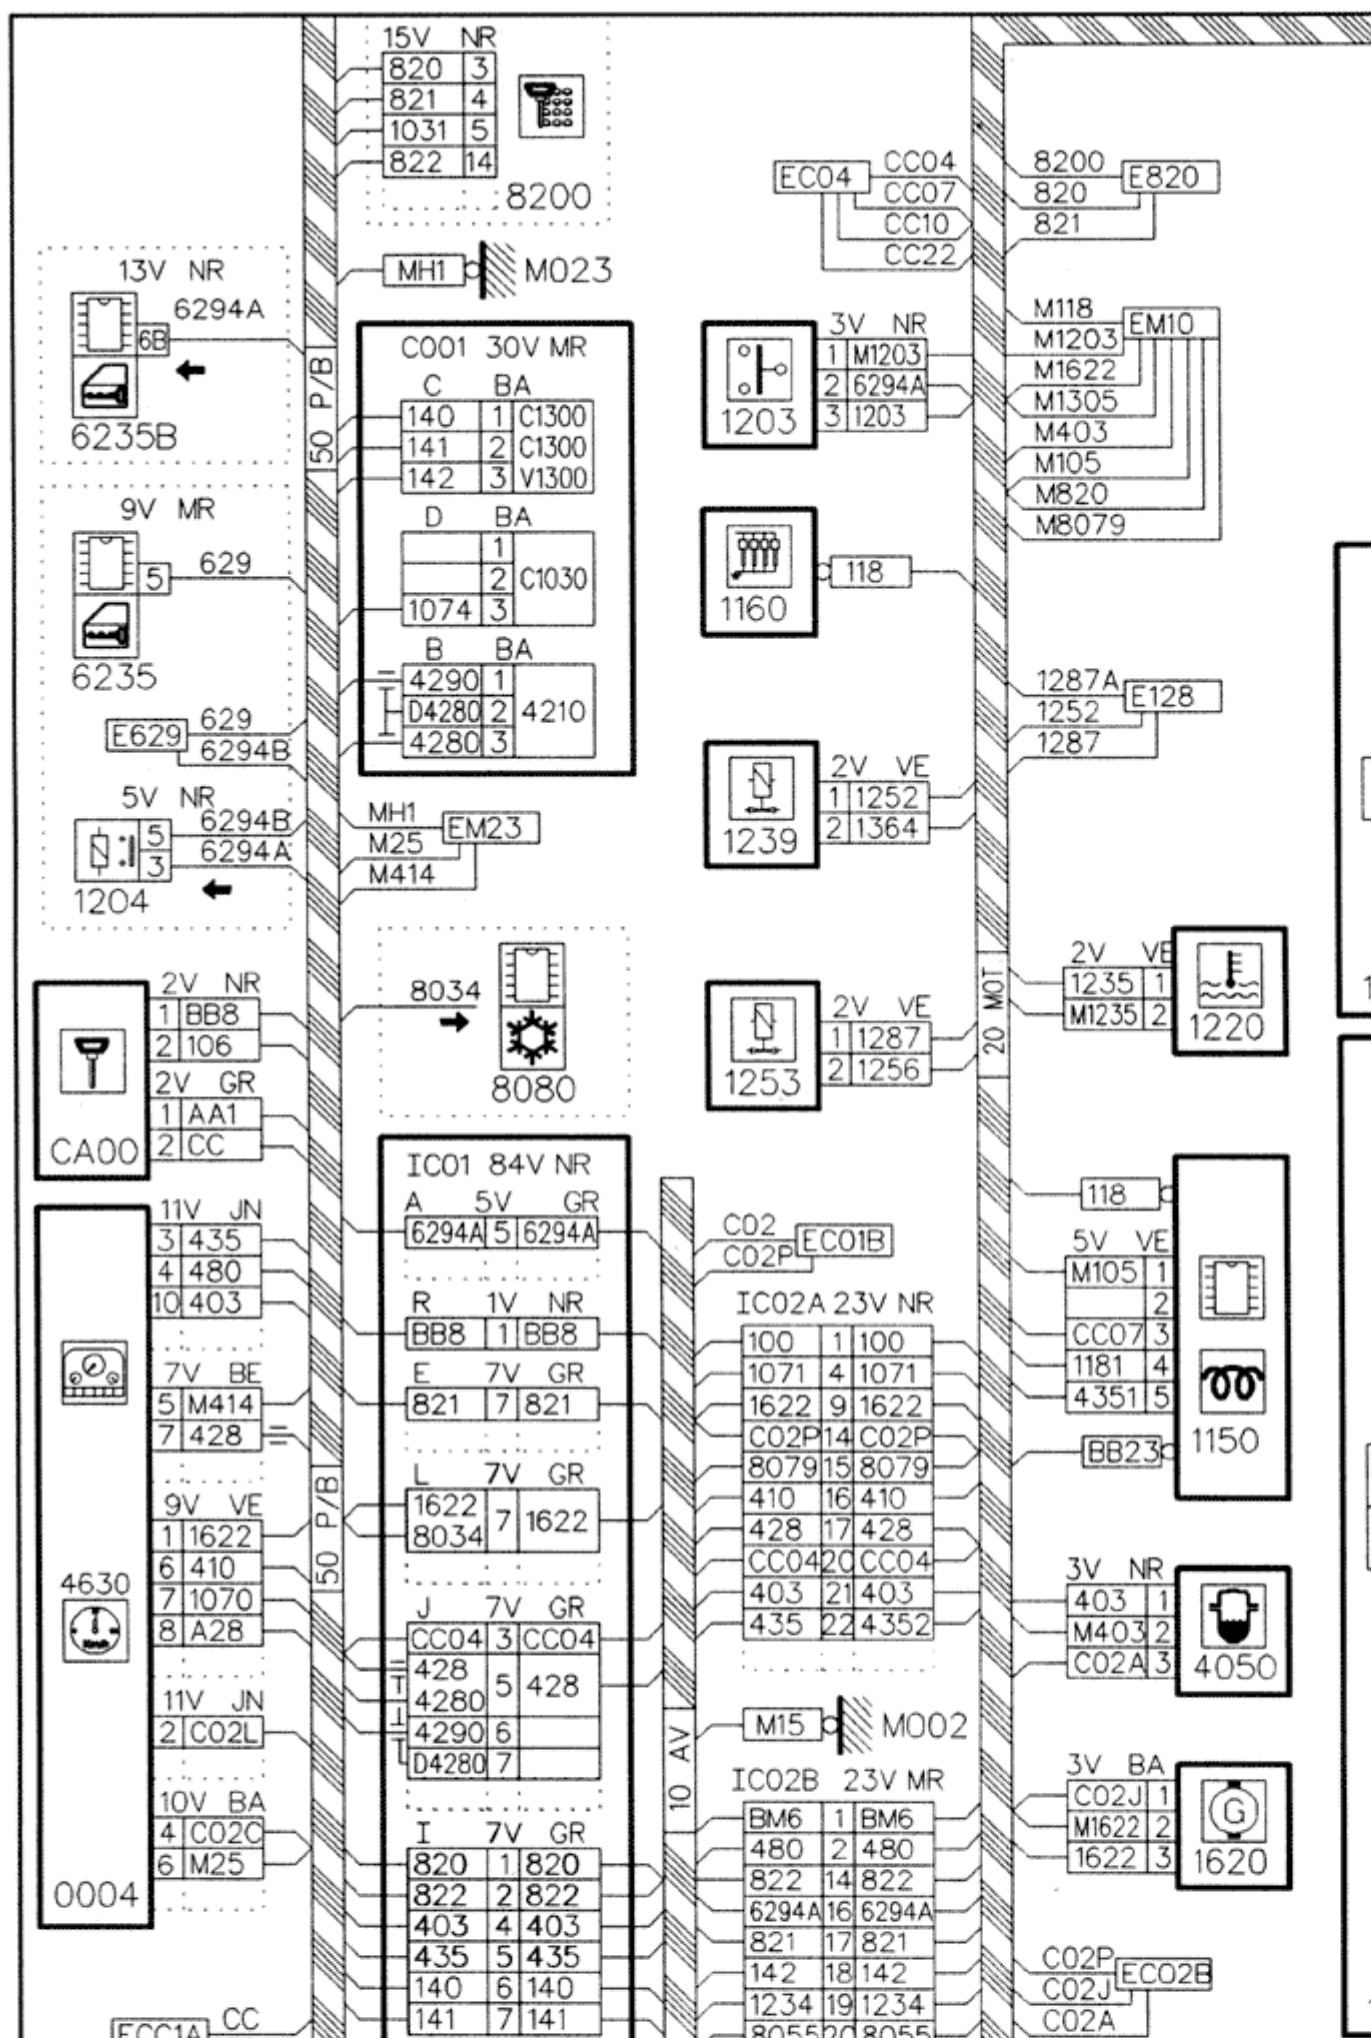

EXPERT AIR CONDITIONING CODED ANTI-START ANTI-LOCK BRAKES :

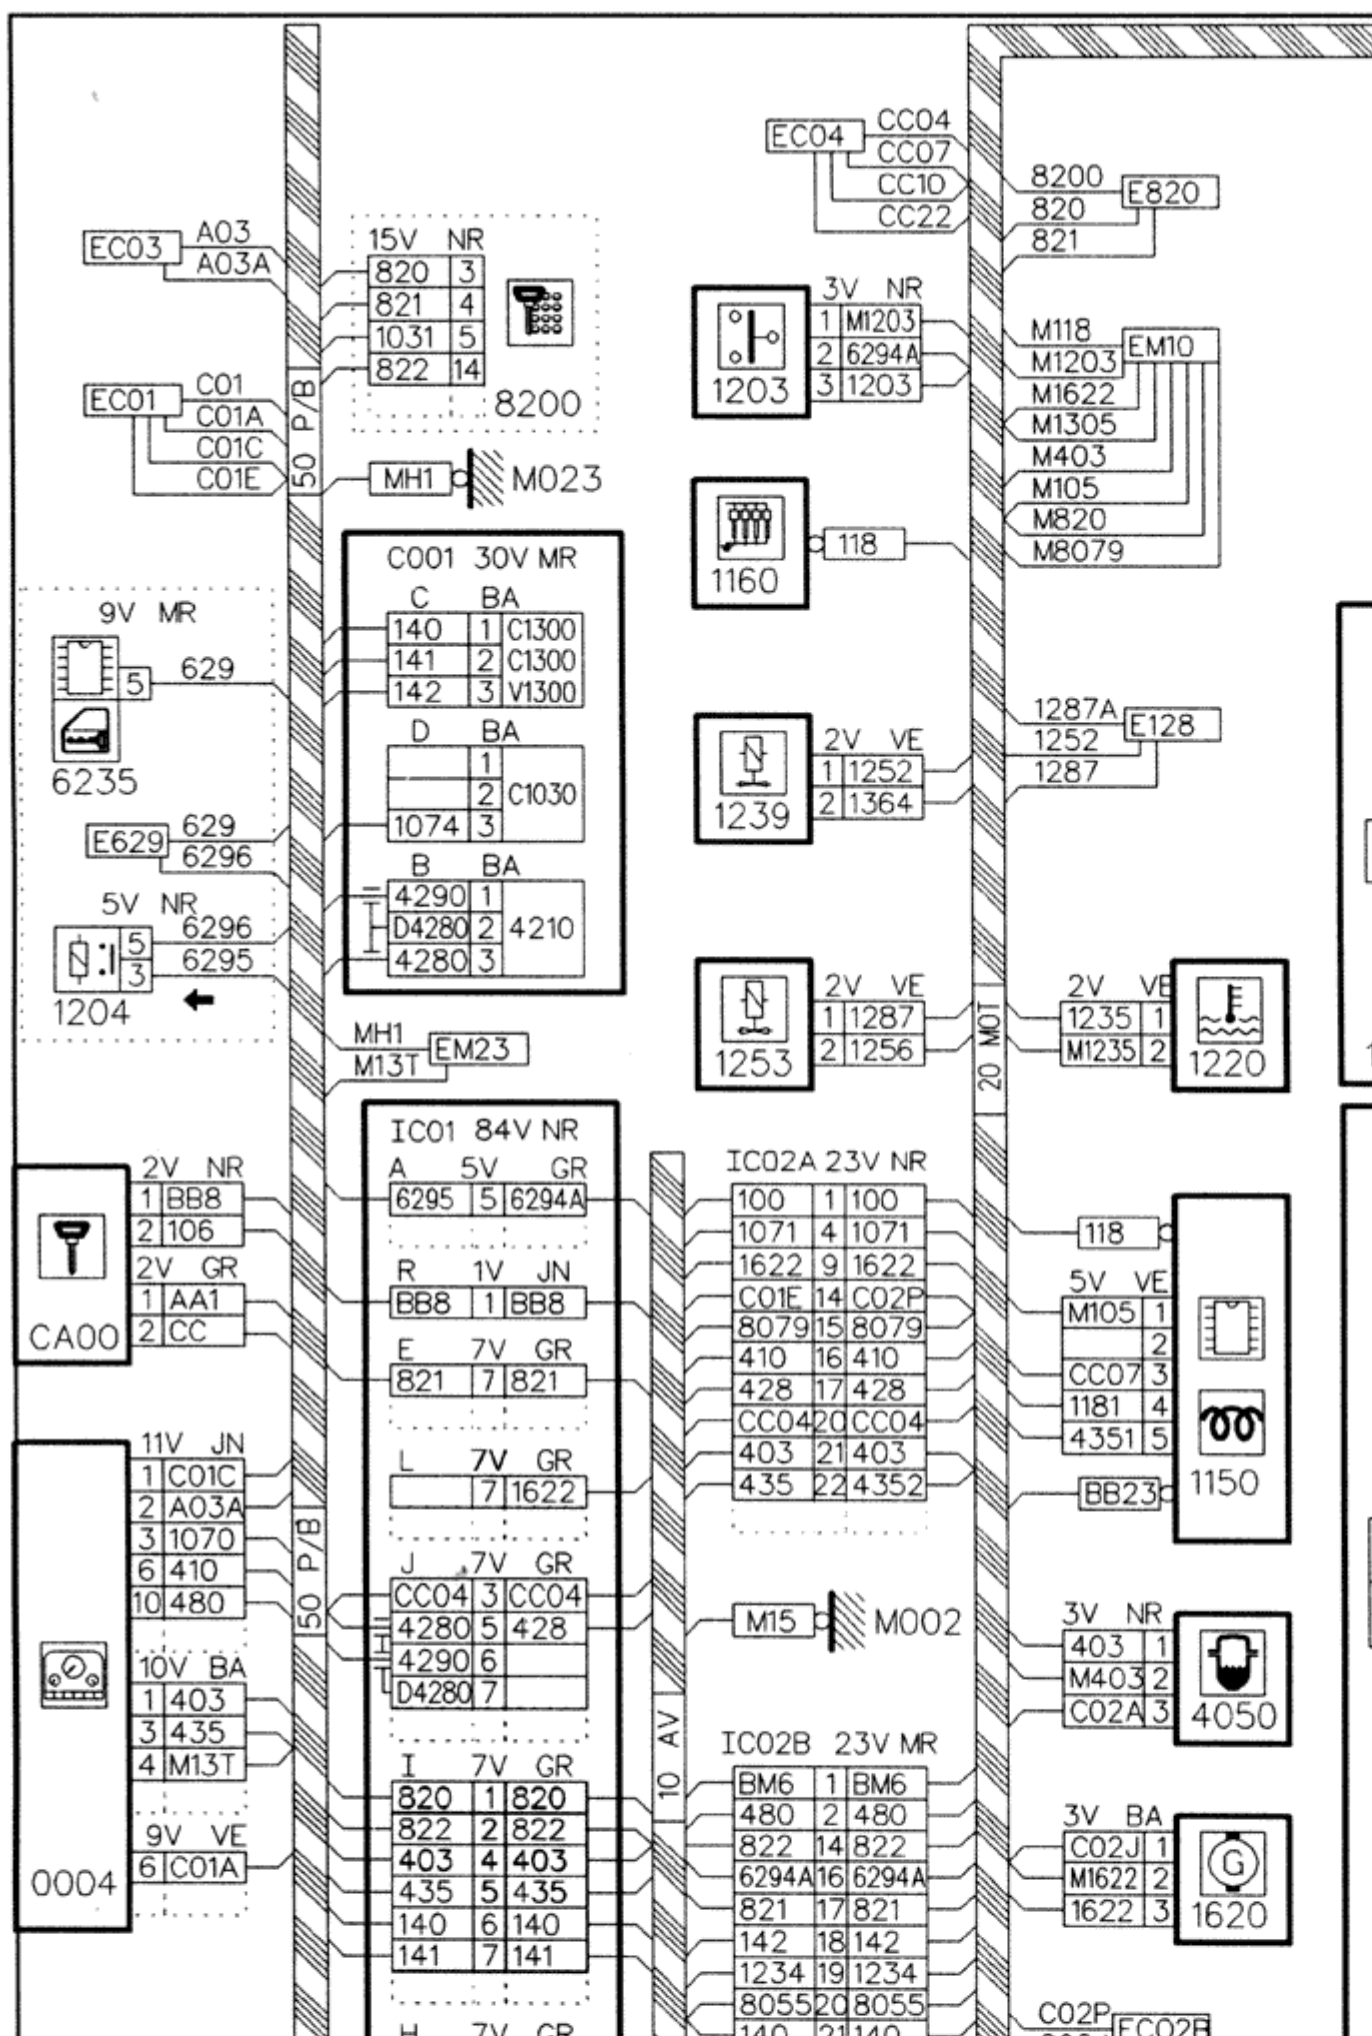

2.04.2000



[пологиРейтинг сайтов Авто / Мото](#)

