




Ford 1932 Passenger Head Lamp Assembly

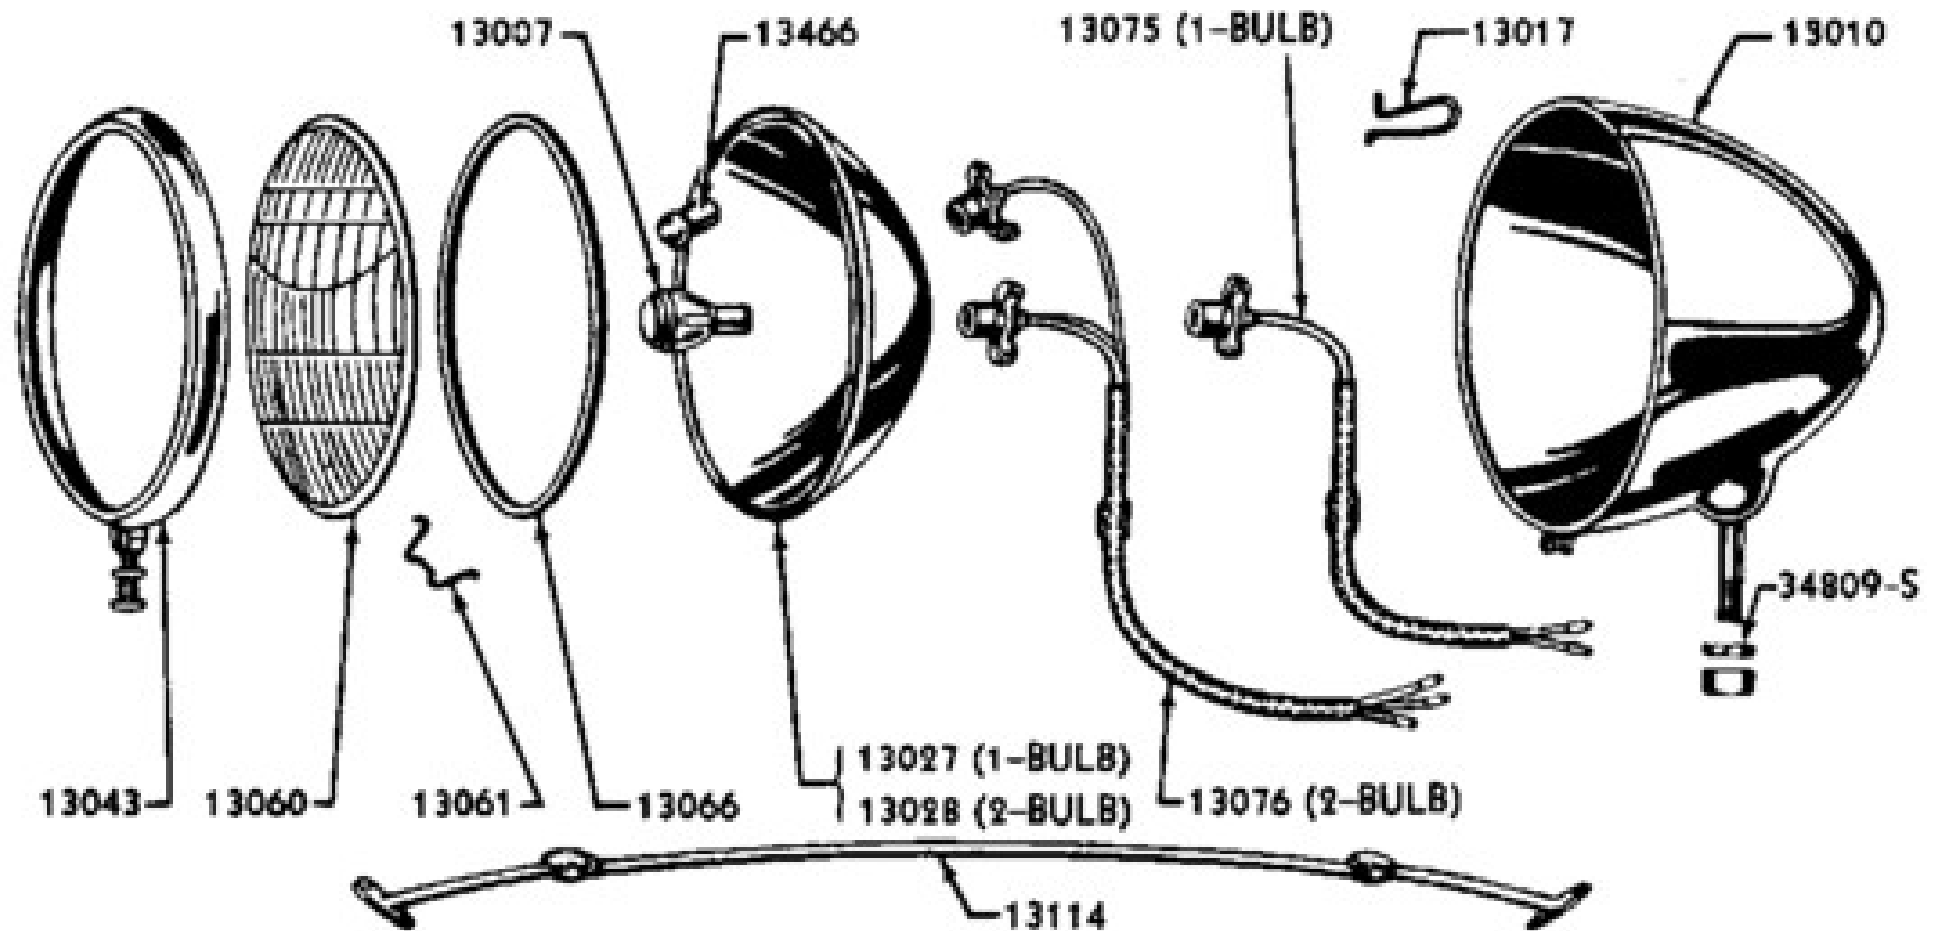

Ford 1940 Passenger and Commercial Head Lamp Assembly

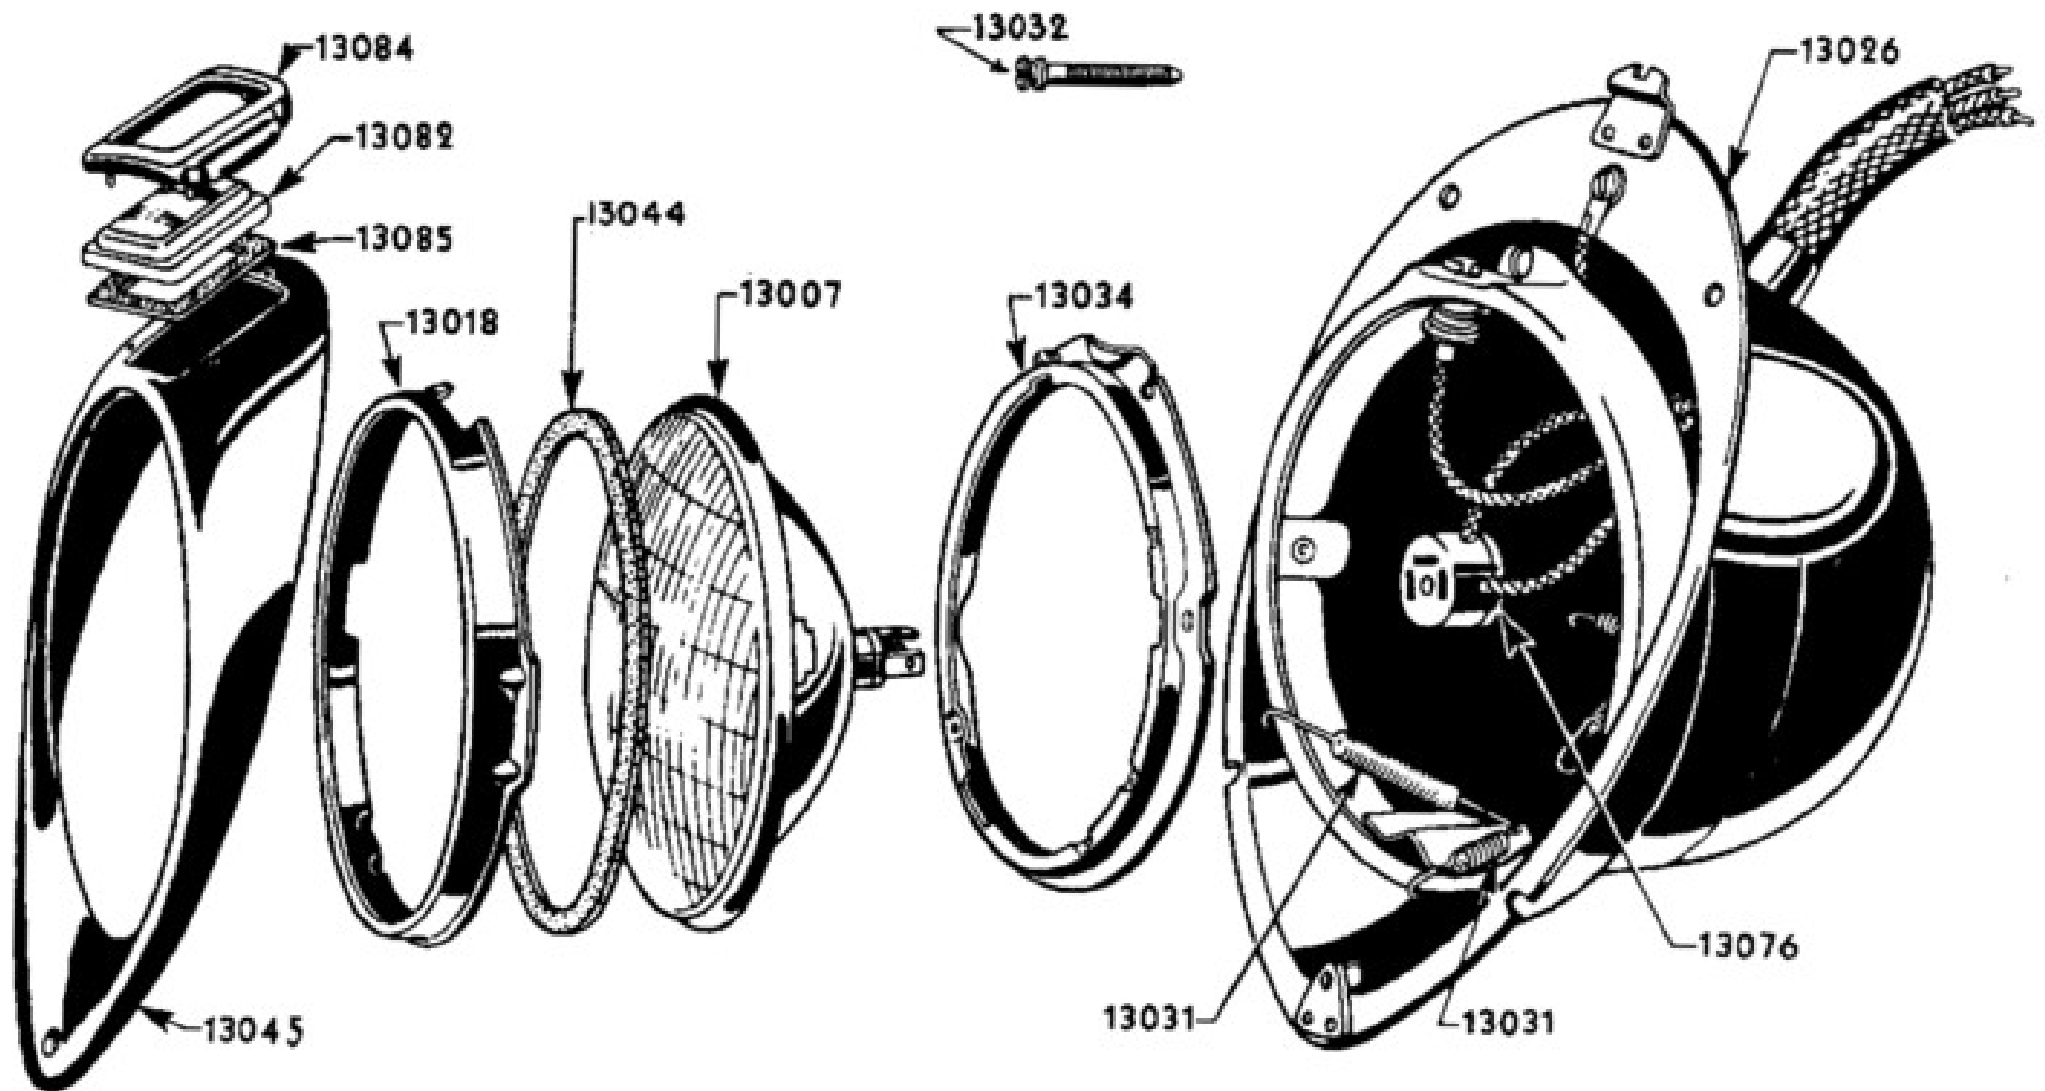


Ford Head Lamp Assembly For
1941 Truck
1941-47 COE Truck

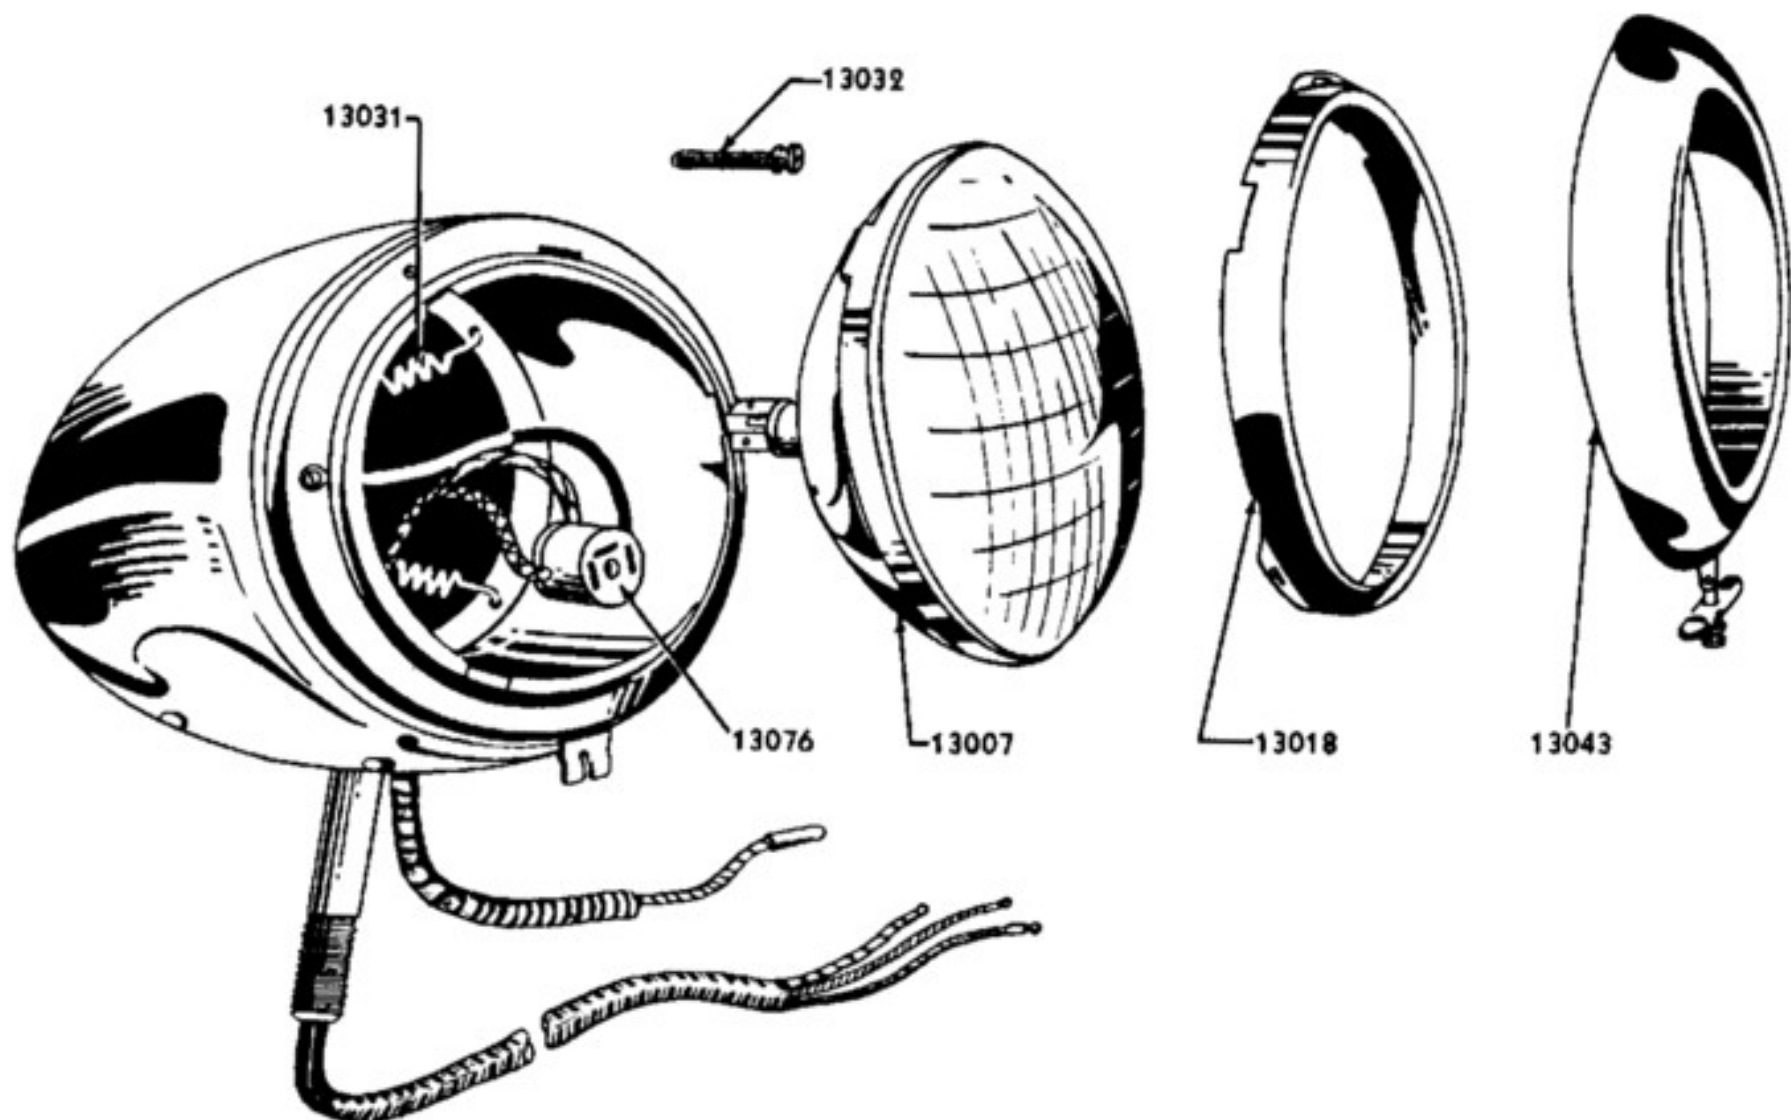


Ford 1937 Passenger Rear Lamp


(Assembly 78-13403)

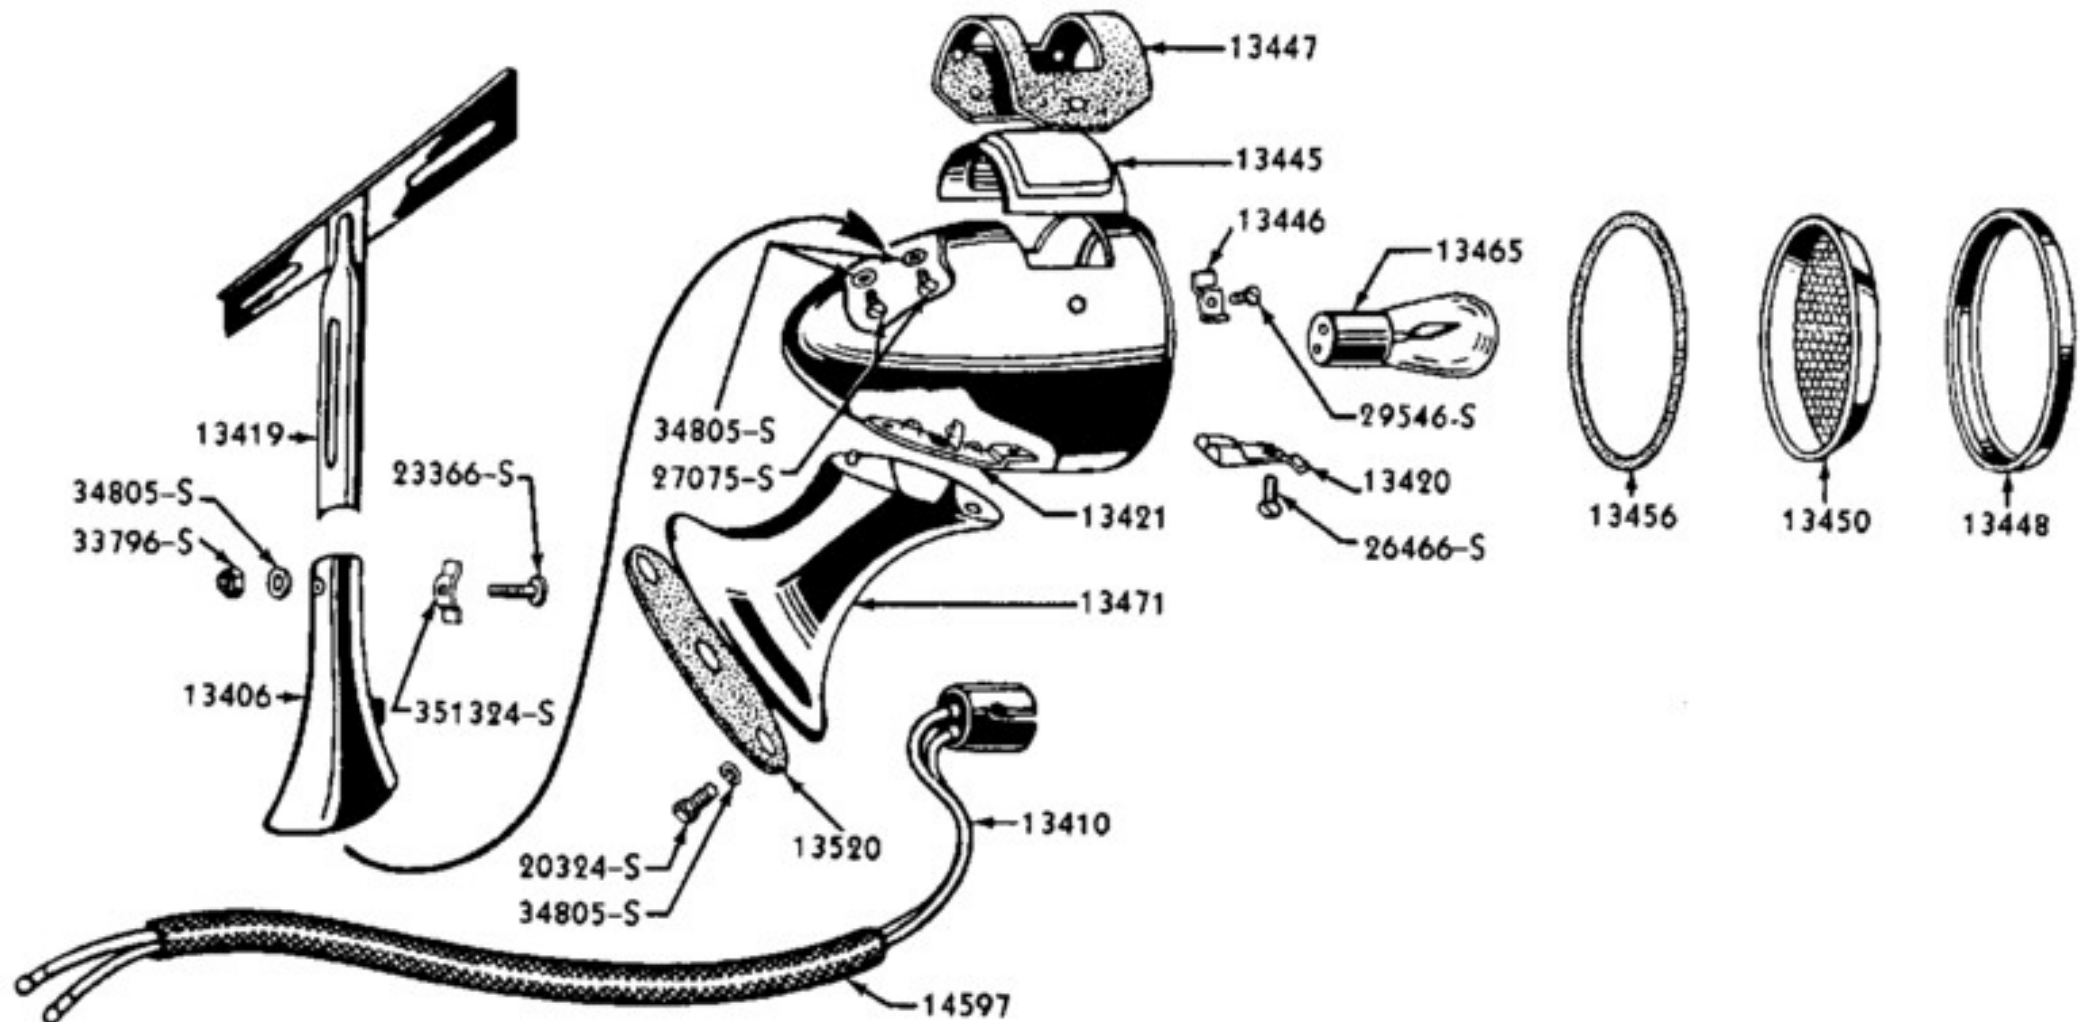


Ford 1938-39 Passenger Rear Lamp
(Assembly 81A-13405)

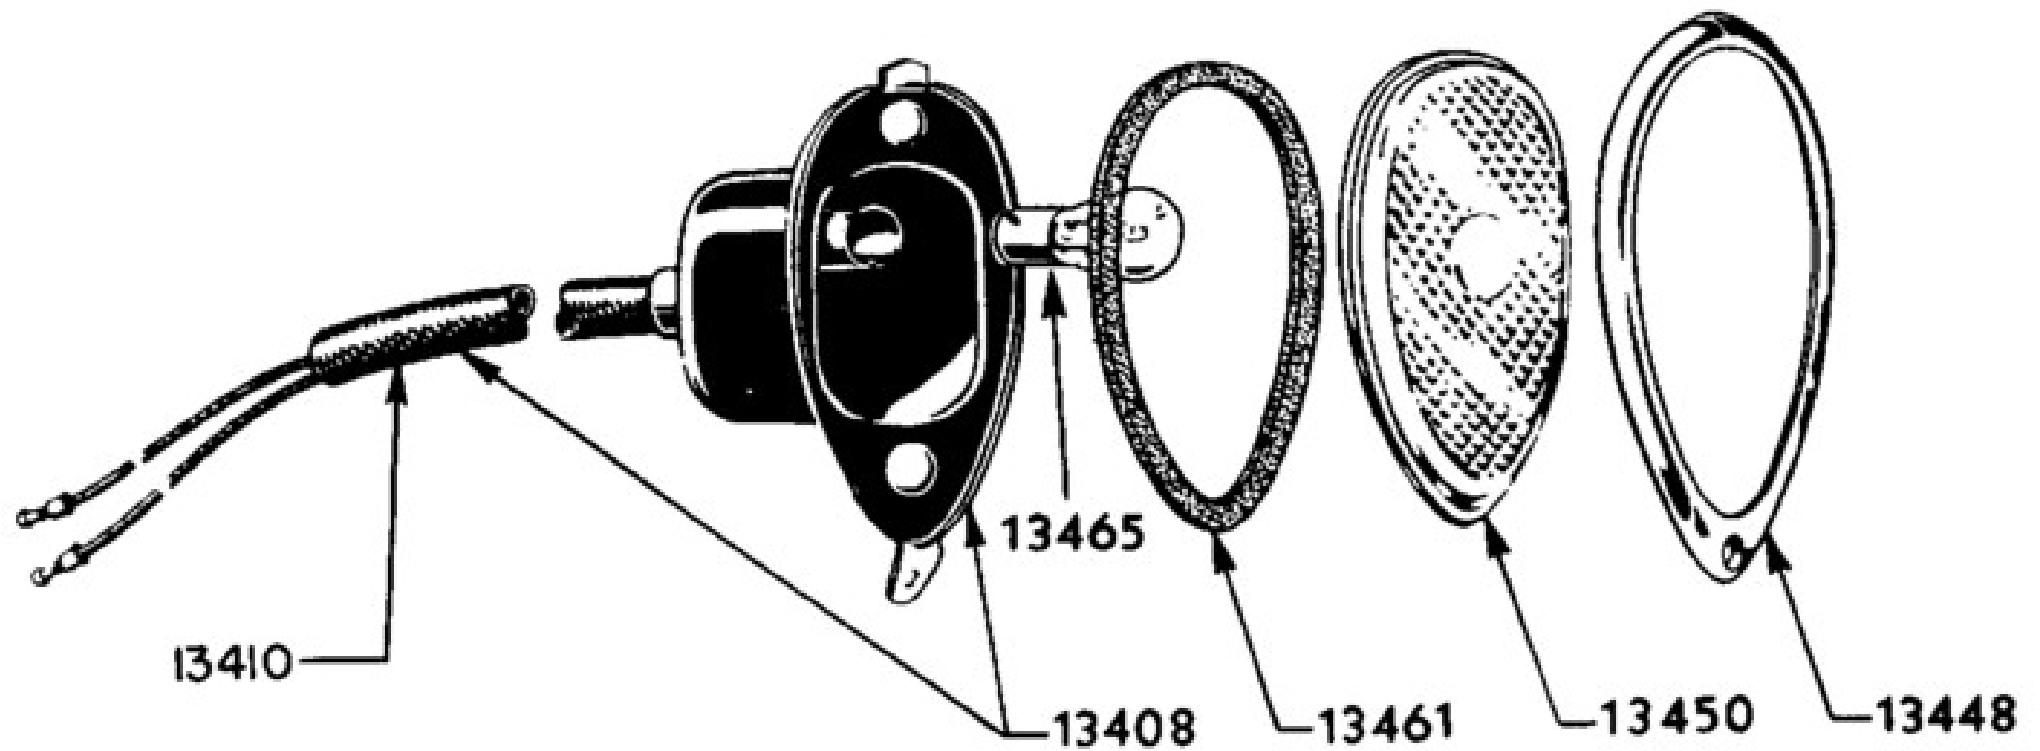


Ford 1940 Passenger Rear Lamp
(Assembly 01A-13405)

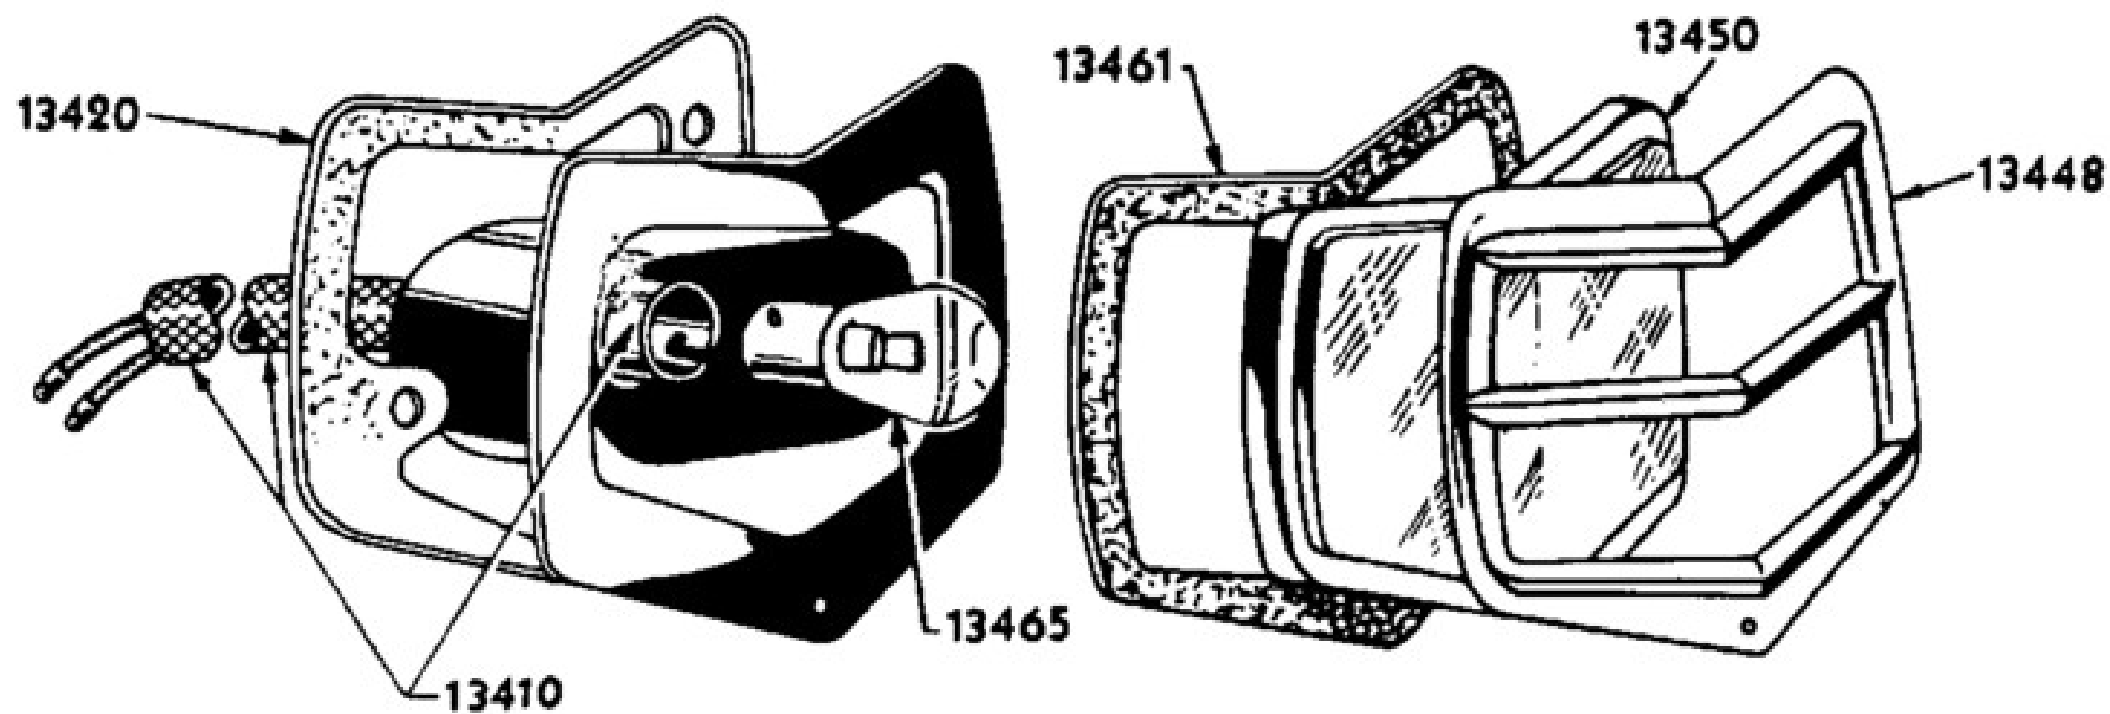


Wiring Diagram for 1933 - 34 Ford Passenger Car

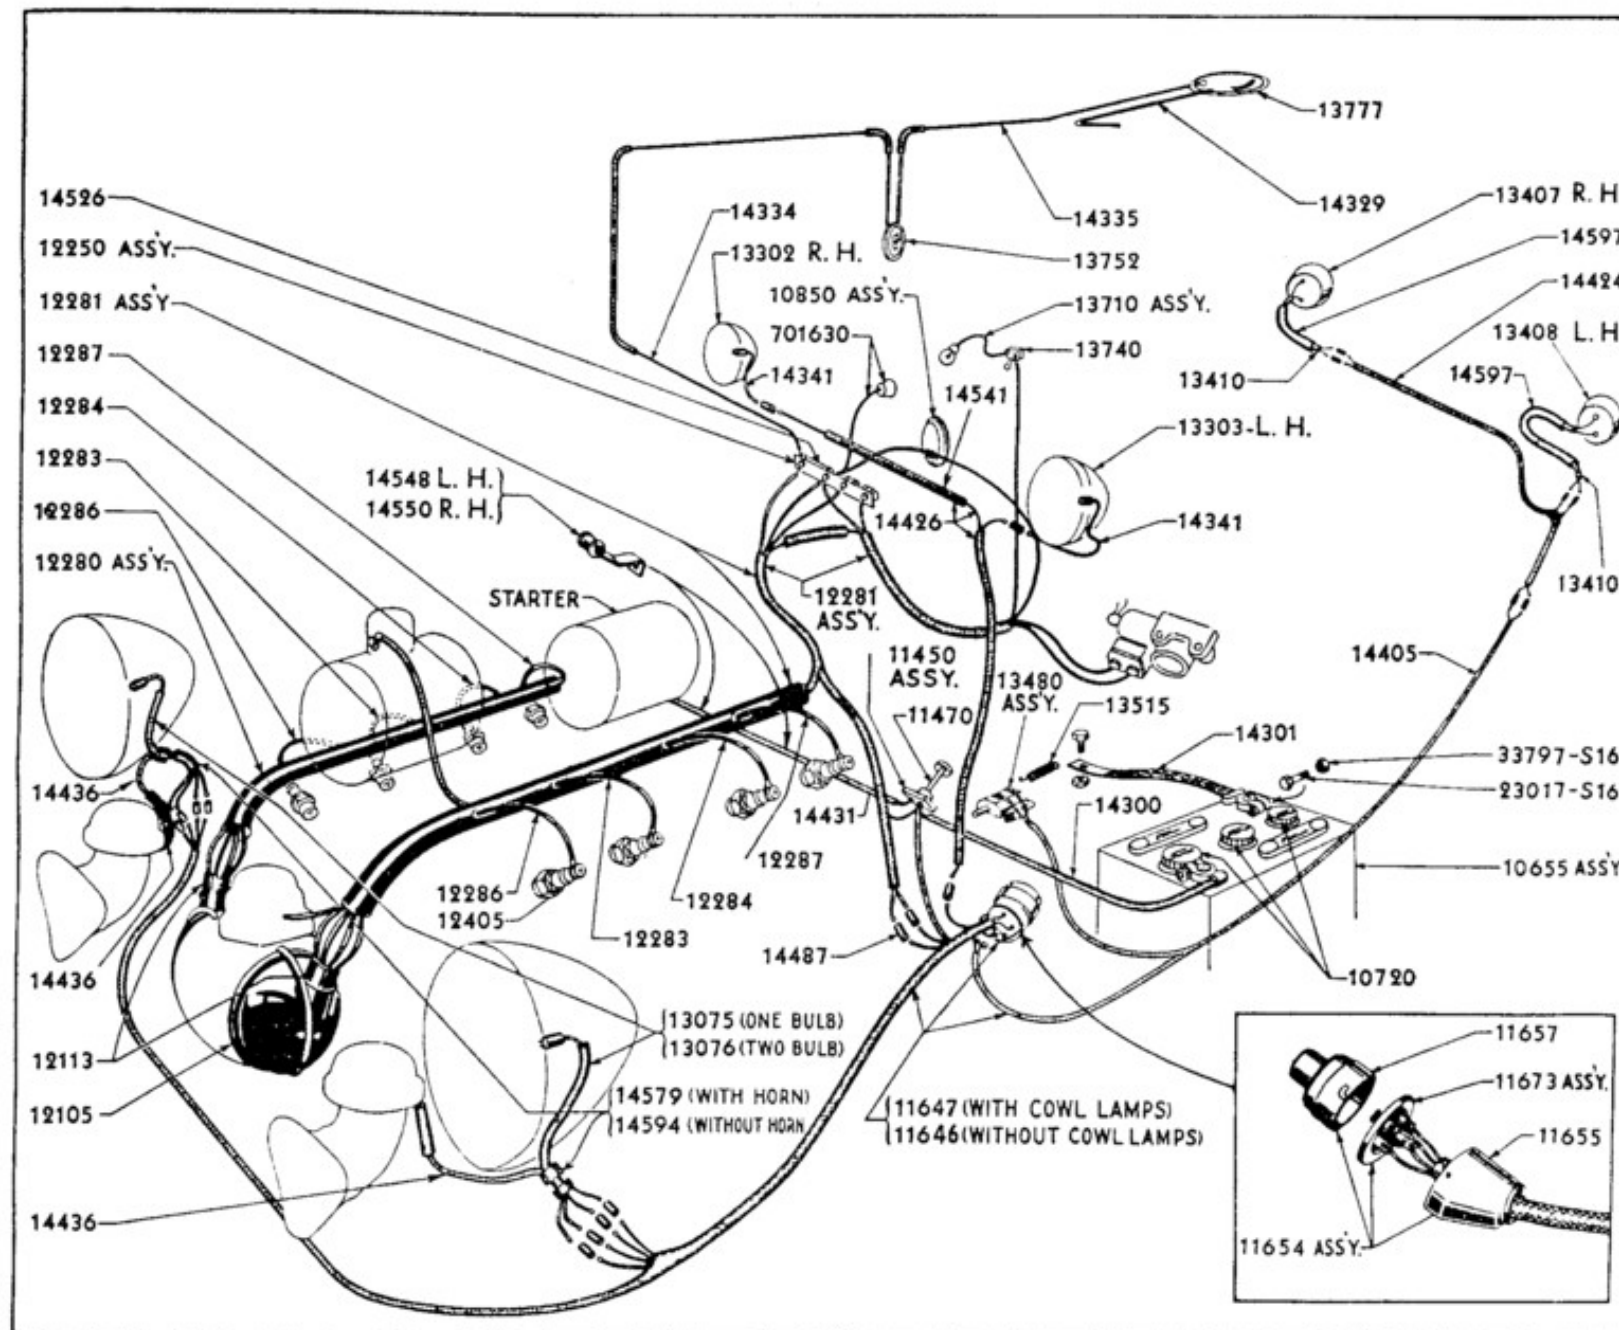


Wiring Diagram for 1936 Ford Passenger Car

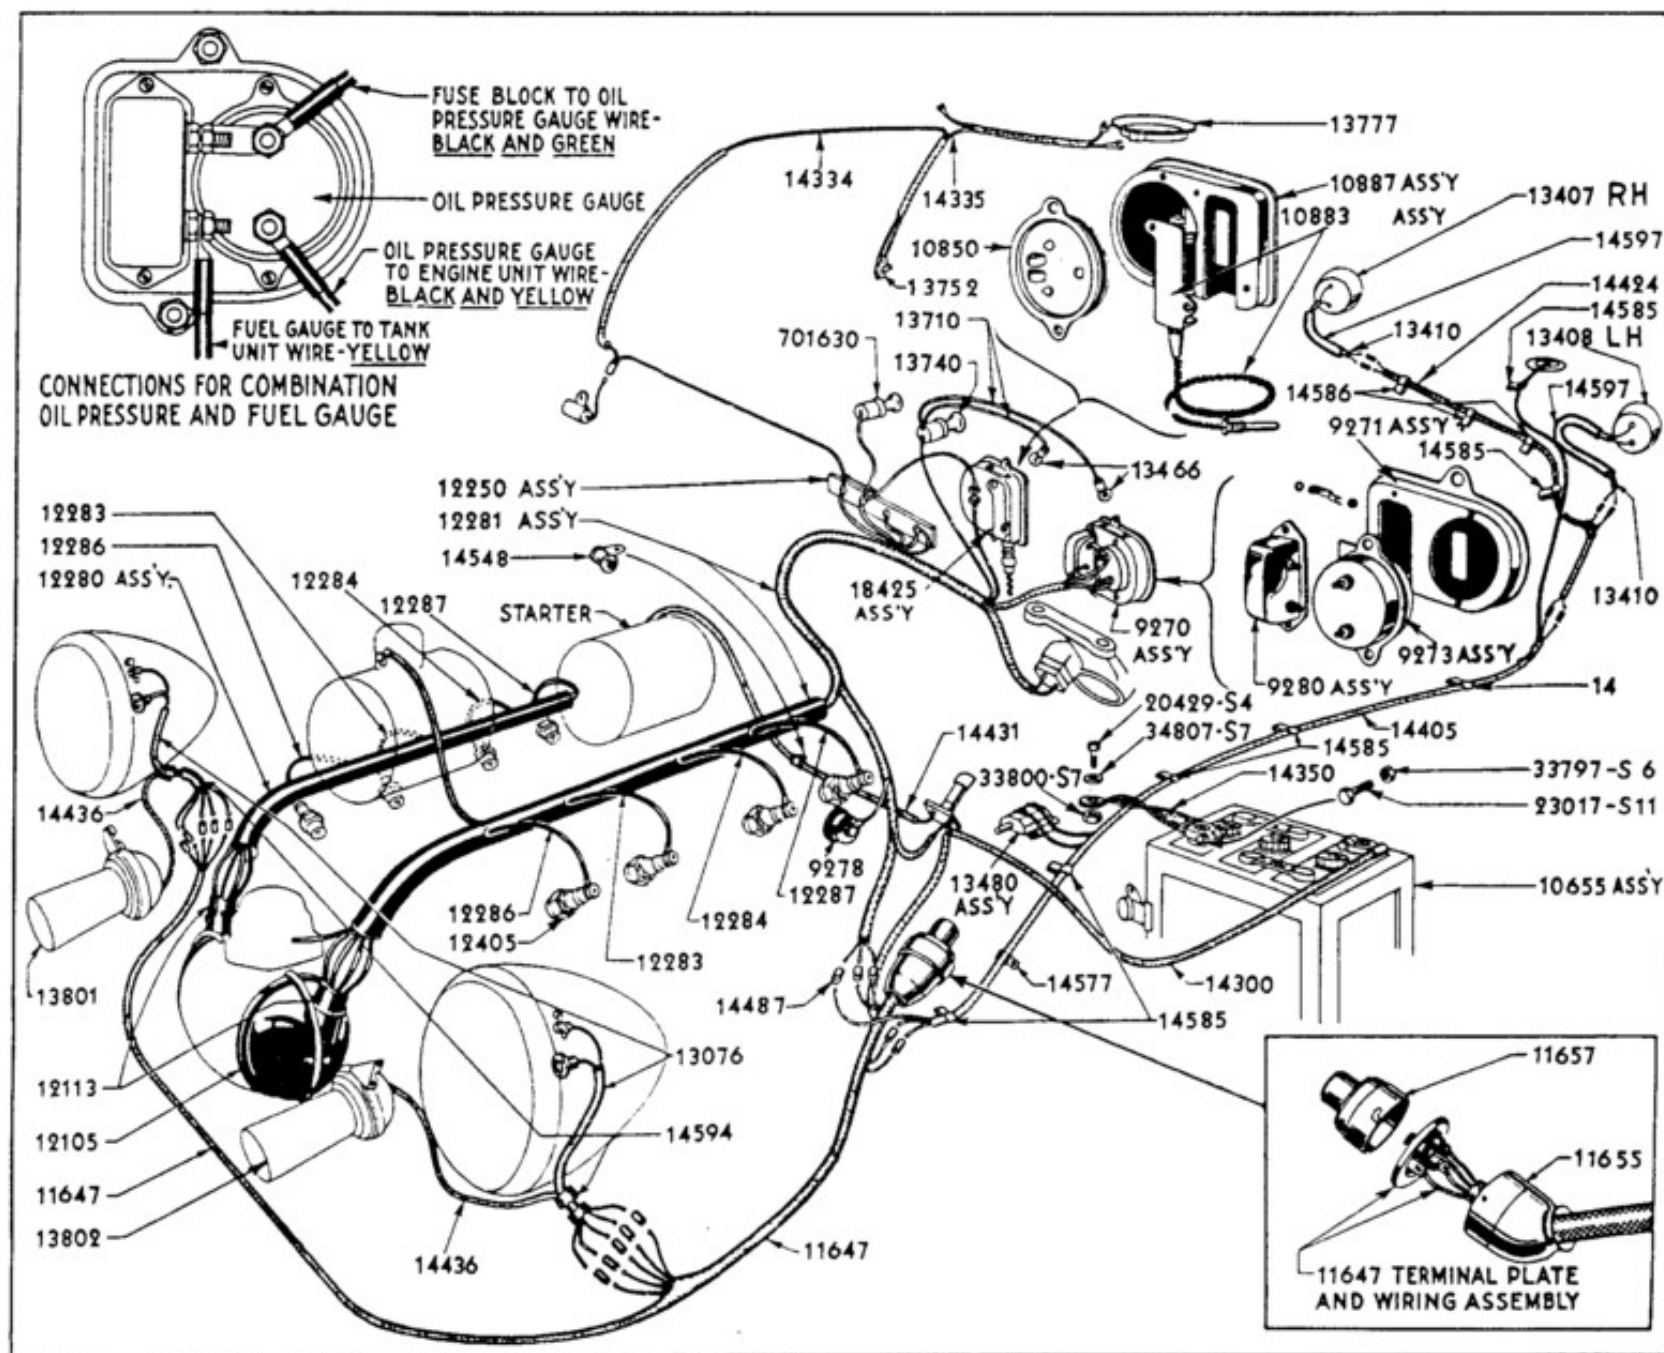


Wiring Diagram for 1937 Ford Passenger Car

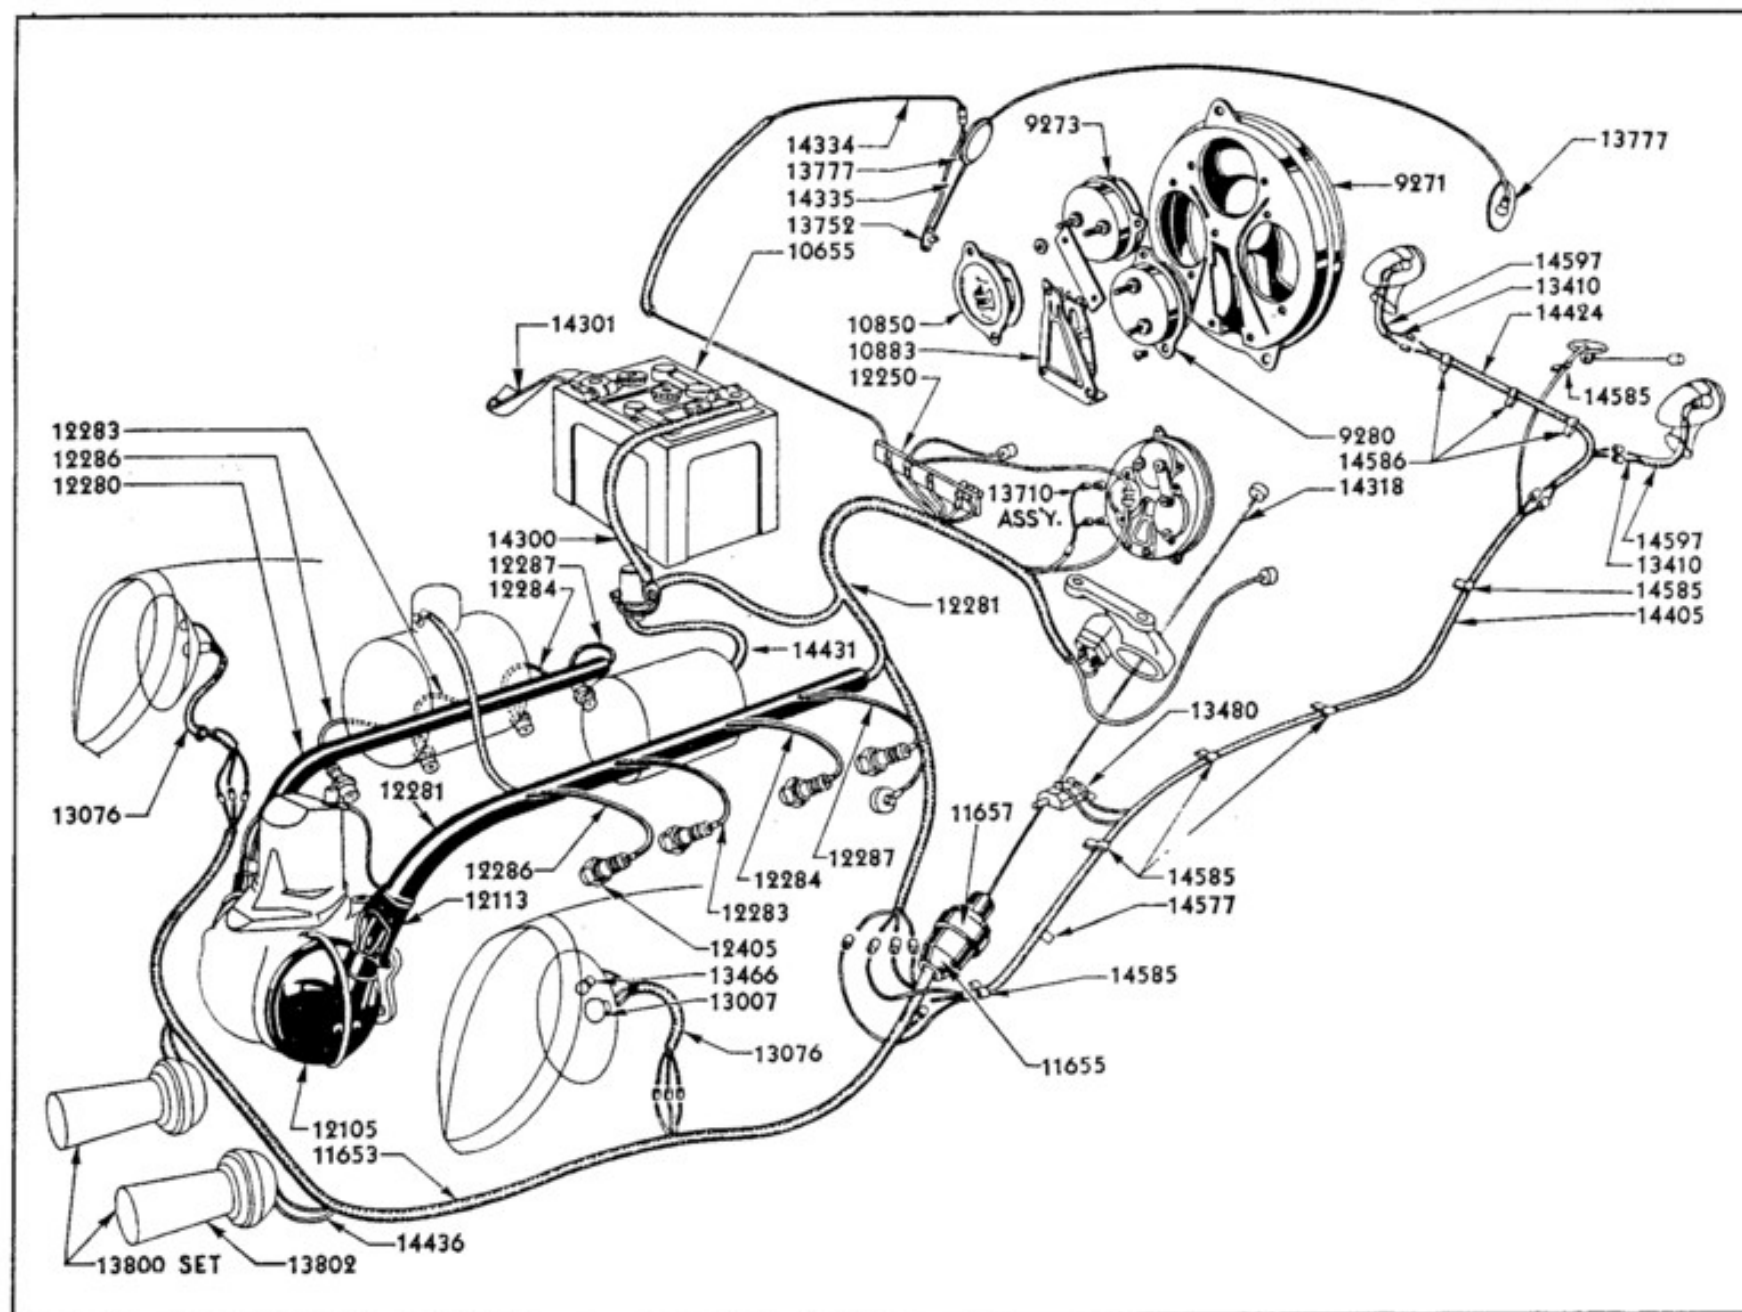


Wiring Diagram for 1940 Ford Passenger Car

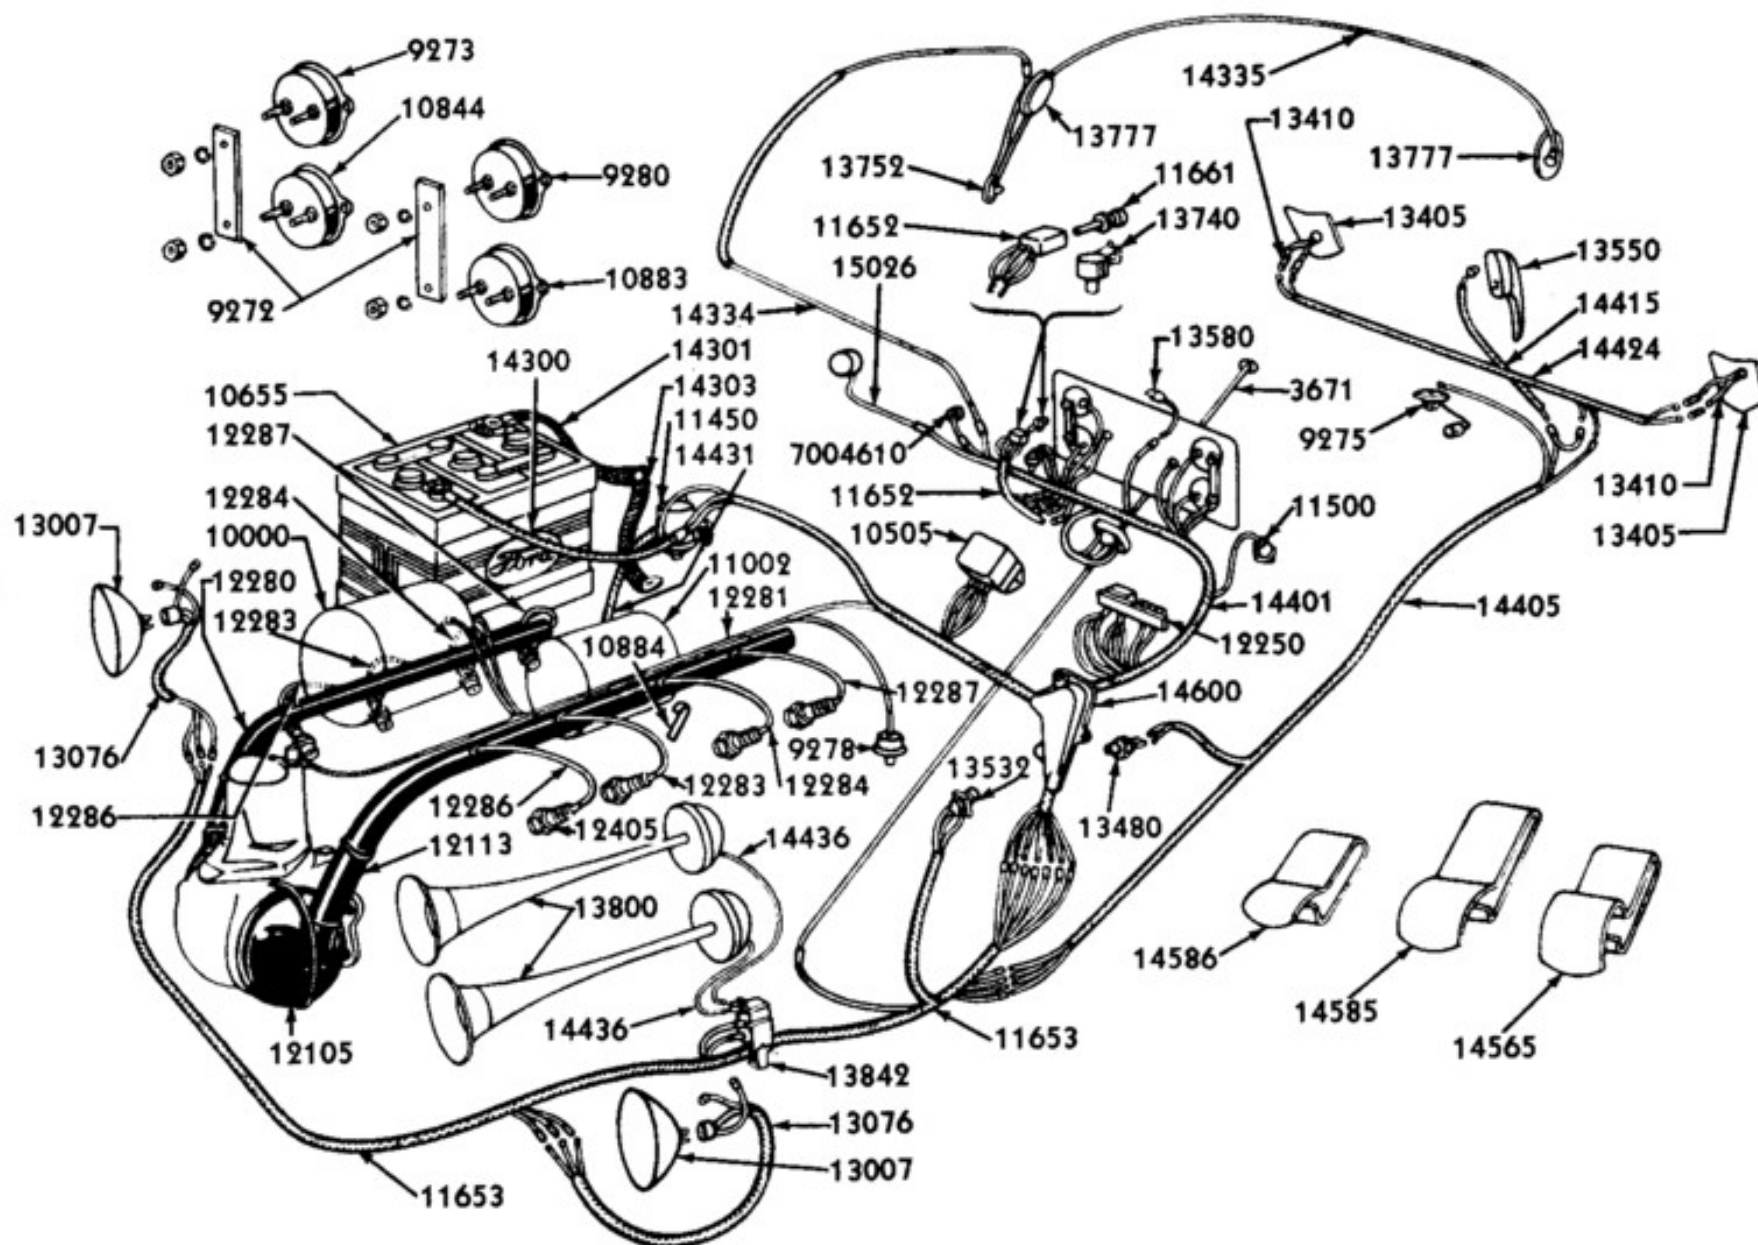


Wiring Diagram for 1941 Ford Passenger Car

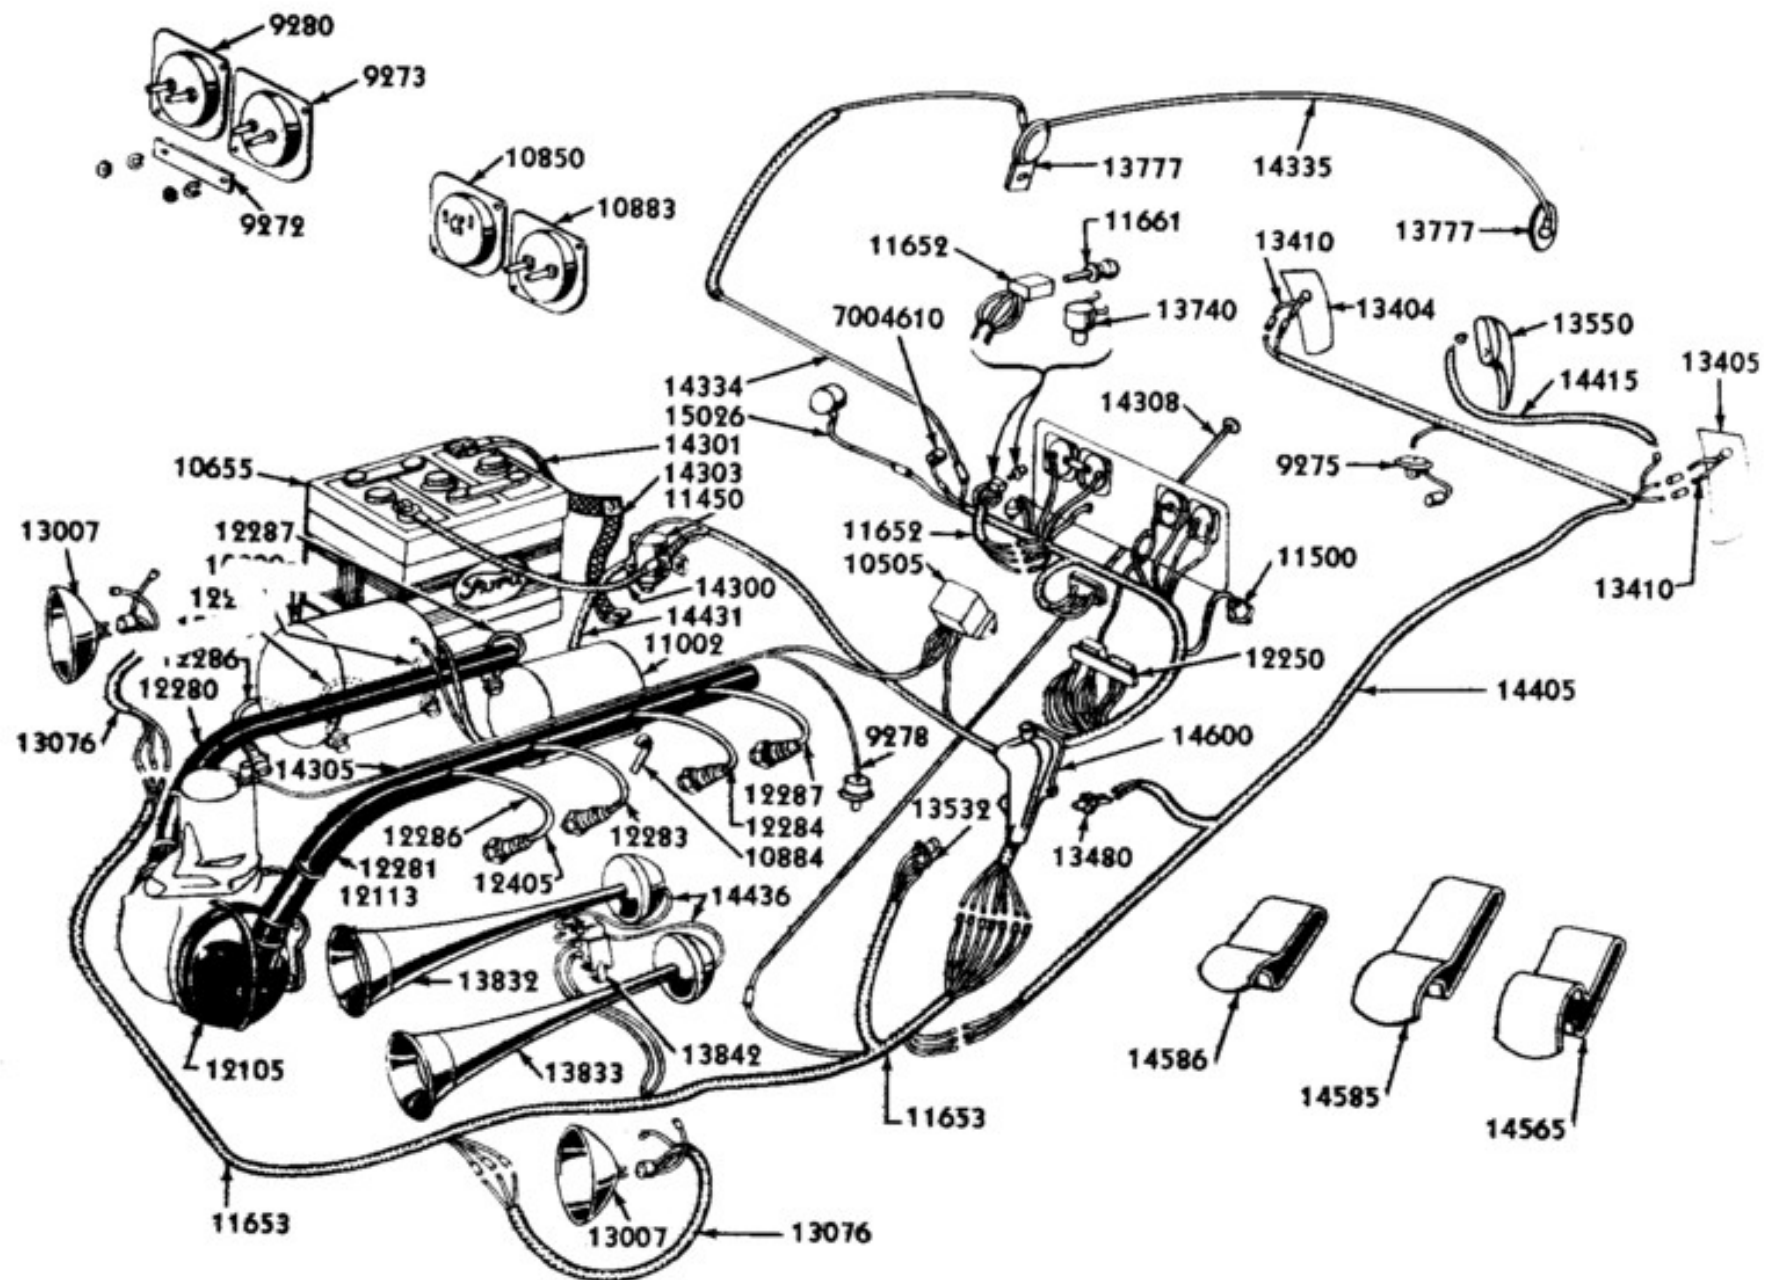

Wiring Diagram for 1942 Ford Passenger Car

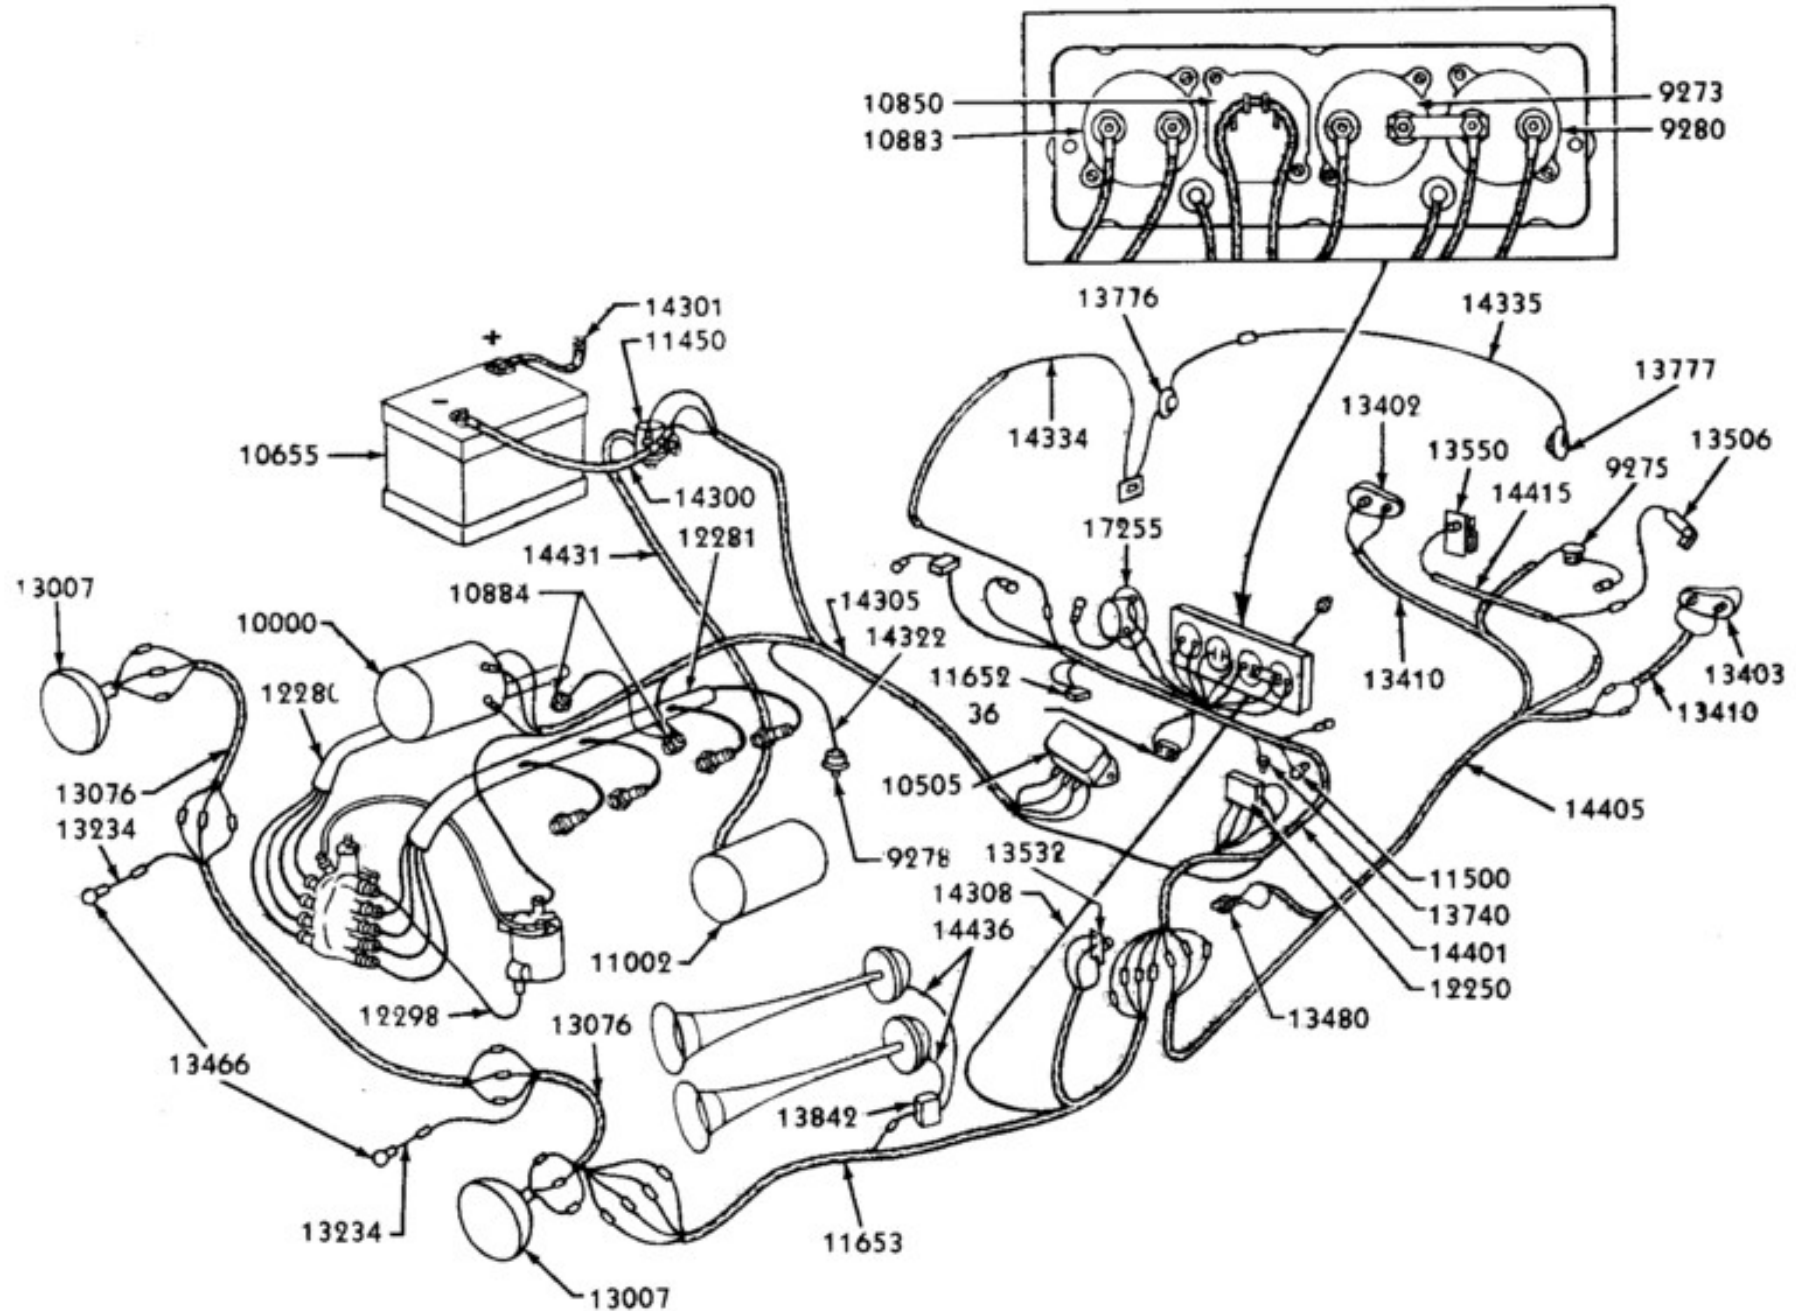


Ford 1946-48 Passenger Car V8 Wiring Diagram

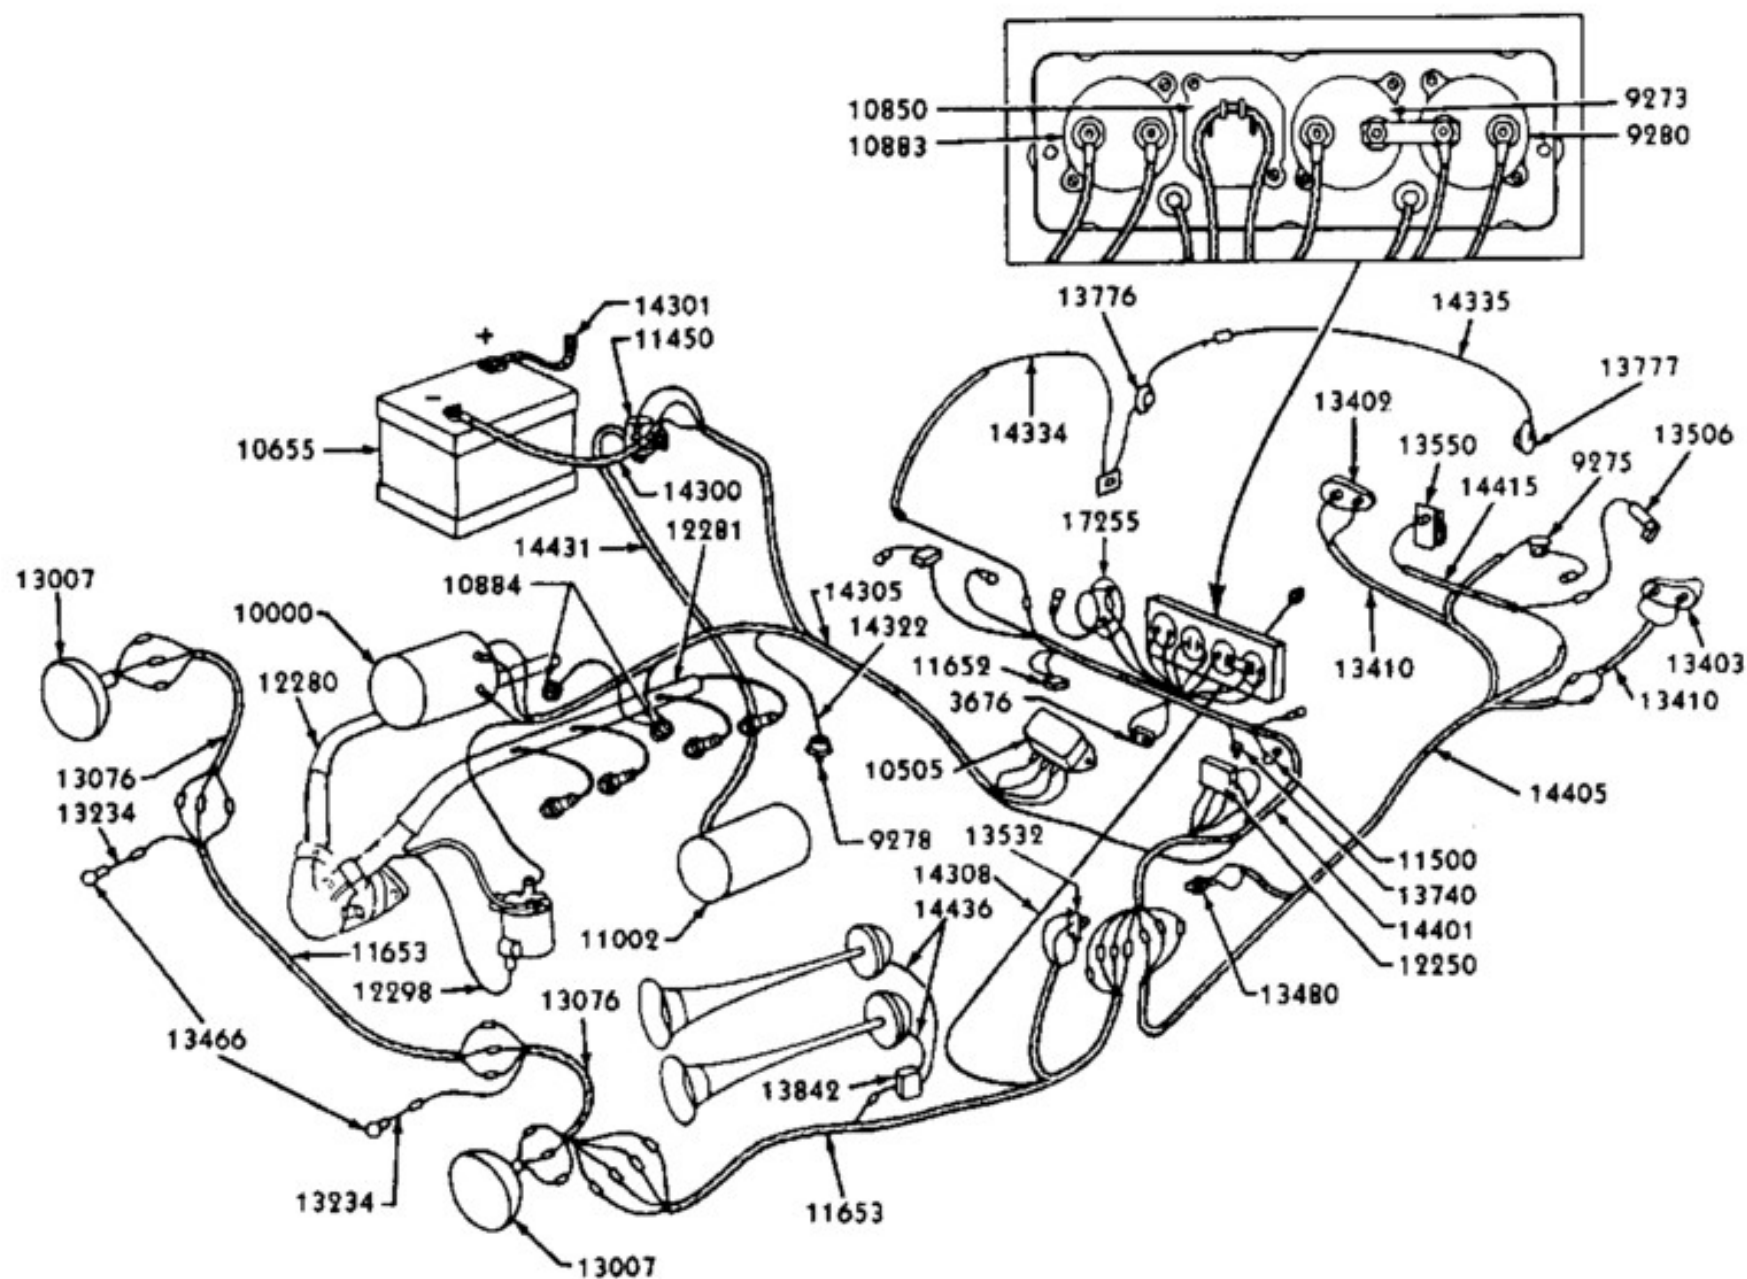


Ford Conventional Truck Wiring Diagram for 1948-50 V8

(Six cylinder is same except for inset box)

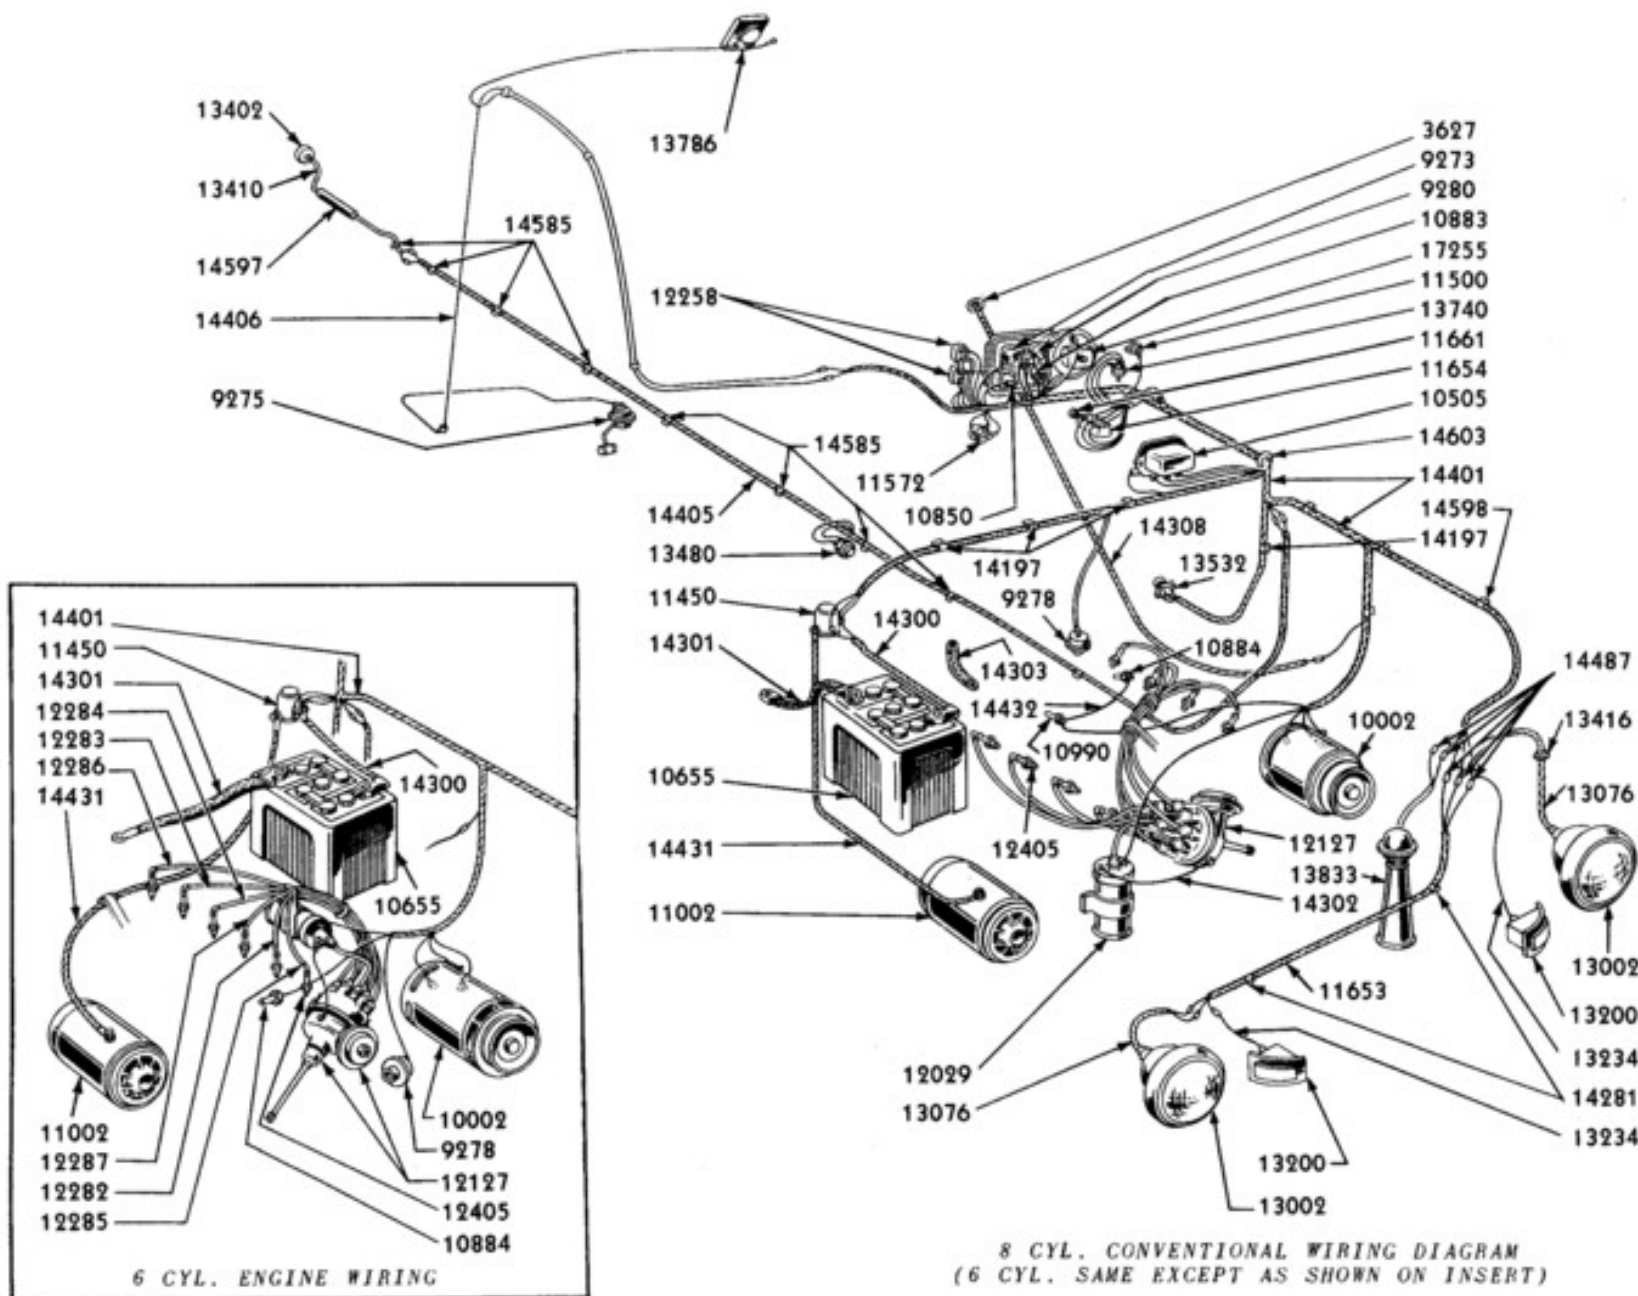

[illegible]

(6 CYL. SAME EXCEPT AS SHOWN ON INSERT)

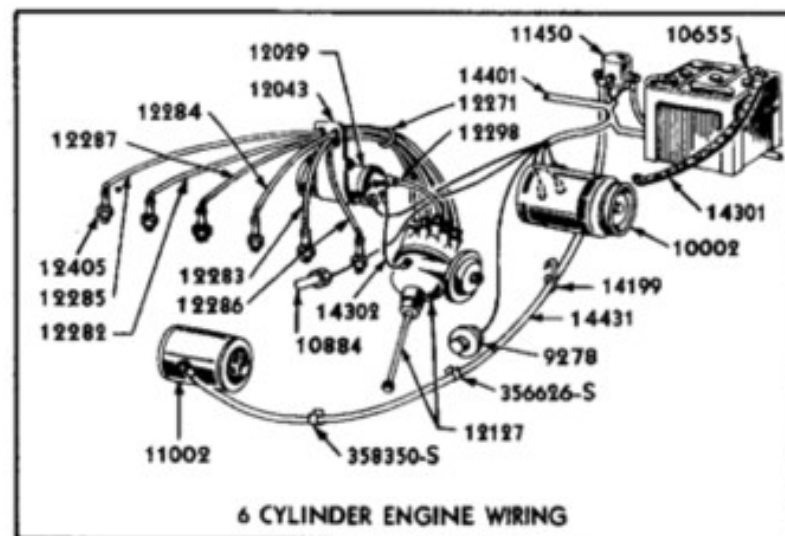

1950 Ford Passenger Car



This diagram illustrates the electrical system of a 1950 Ford Passenger Car. Key components and their part numbers include:

- Battery:** 10655
- Distributor:** 10002
- Headlights:** 13713, 13752, 15000, 15026
- Taillights:** 13234, 13215, 13216, 13002, 13076, 13833, 14615
- Wiring Harnesses:** 356660-S, 356659-S, 356668-S, 356626-S, 358350-S
- Switches and Relays:** 14401, 14308, 14603, 13853, 10884, 10505, 11450, 14300, 14475, 14281, 14281, 9278, 13532, 14441, 13480, 14432, 11002, 14431, 12029, 12298, 14302, 13002, 13234, 13215
- Other Components:** 13550, 13404, 14586, 14197, 13781, 11654, 11661, 9280, 11500, 14401, 14308, 14603, 13853, 10884, 10505, 11450, 14300, 10655, 14615, 13833, 13076, 13002, 14448, 14445, 14199, 14445, 356626-S, 13832, 14448, 14615, 13234, 13215, 12287, 12284, 12043, 12271, 12298, 14401, 11450, 10655, 14301, 10002

(6 CYL. SAME EXCEPT AS SHOWN ON INSERT)



1951 Ford Passenger Car

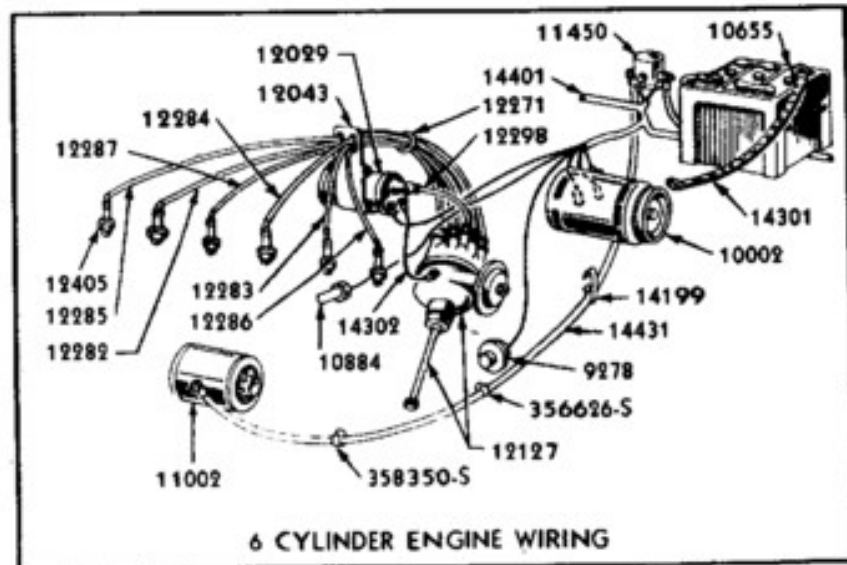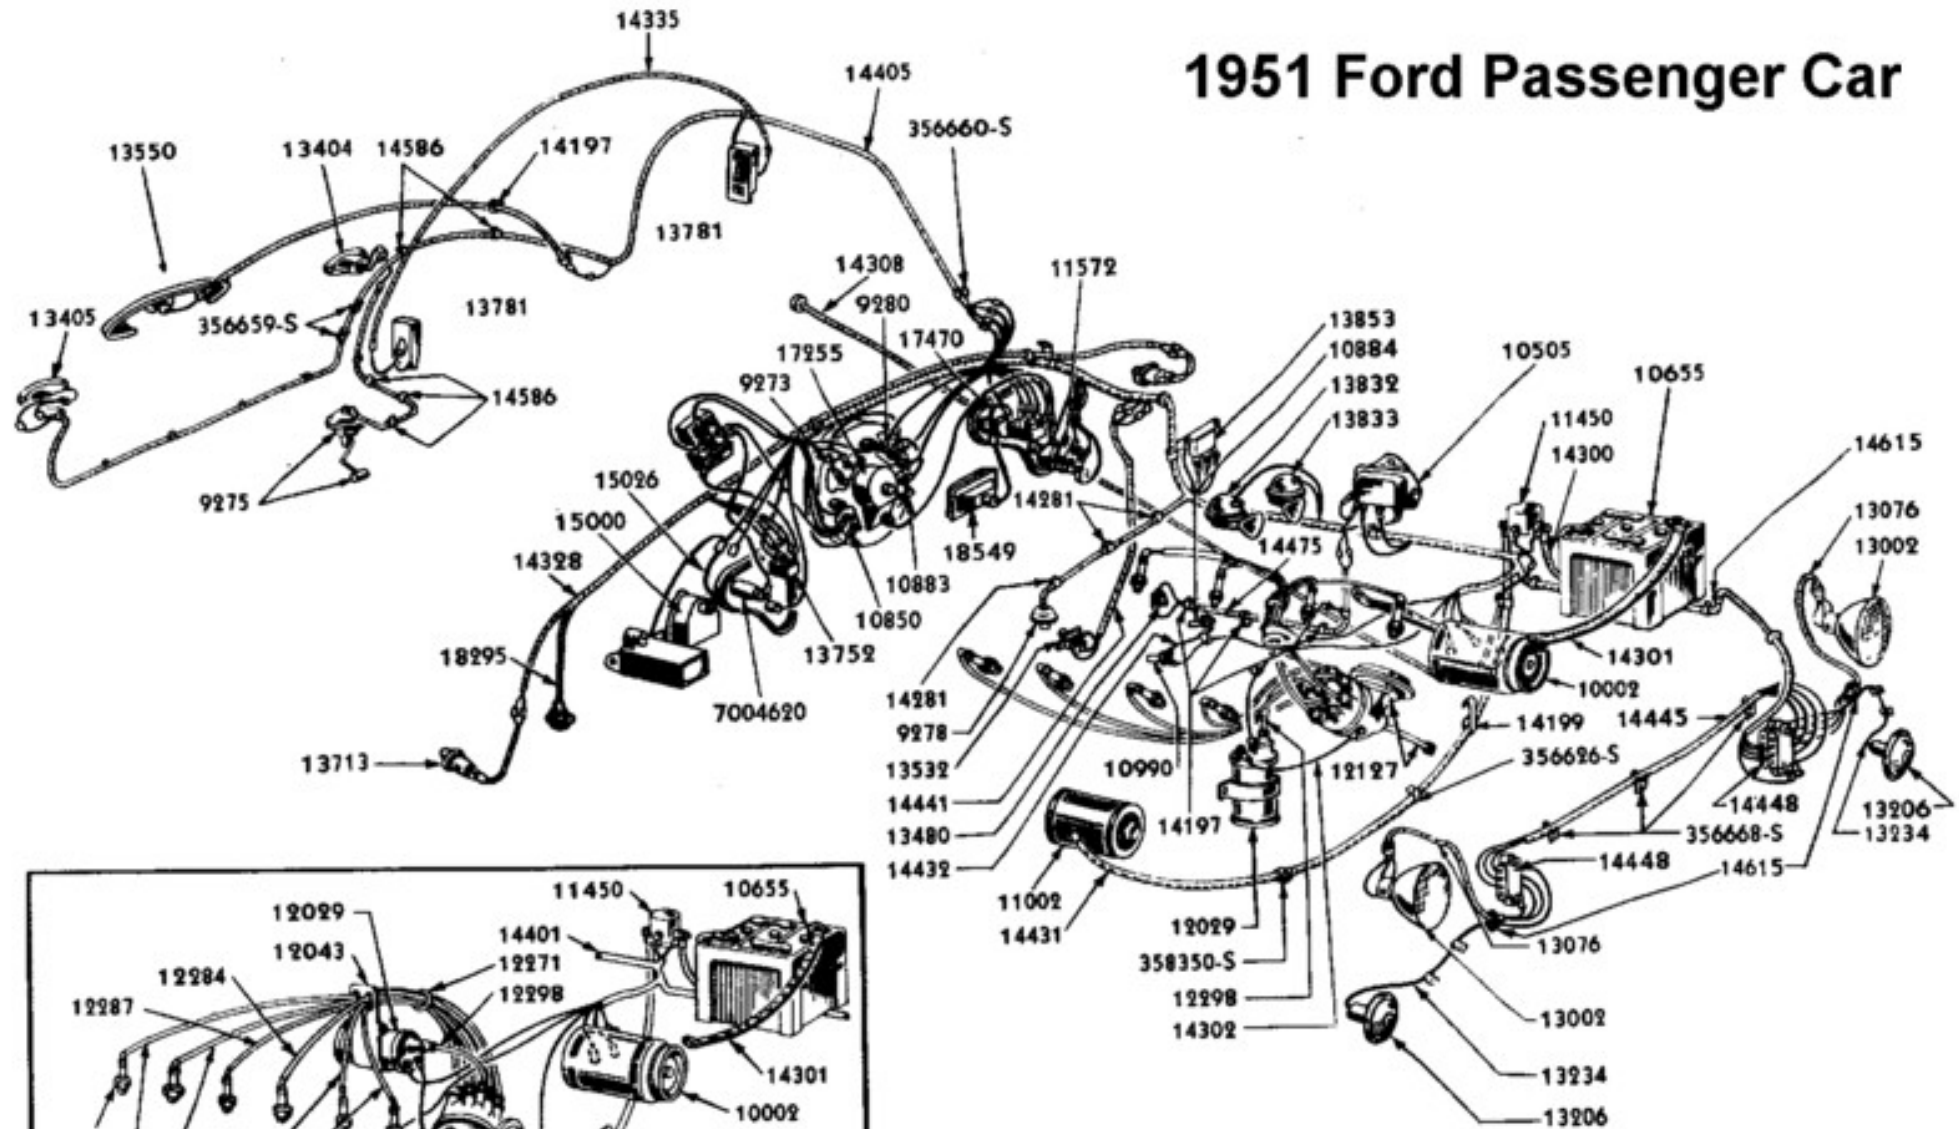


6 CYLINDER ENGINE WIRING

8 CYLINDER WIRING DIAGRAM


(6 CYL. SAME EXCEPT AS SHOWN ON INSERT)

Ford Conventional Truck Wiring for 1951 V8


(Six cylinder is same except for inset box)

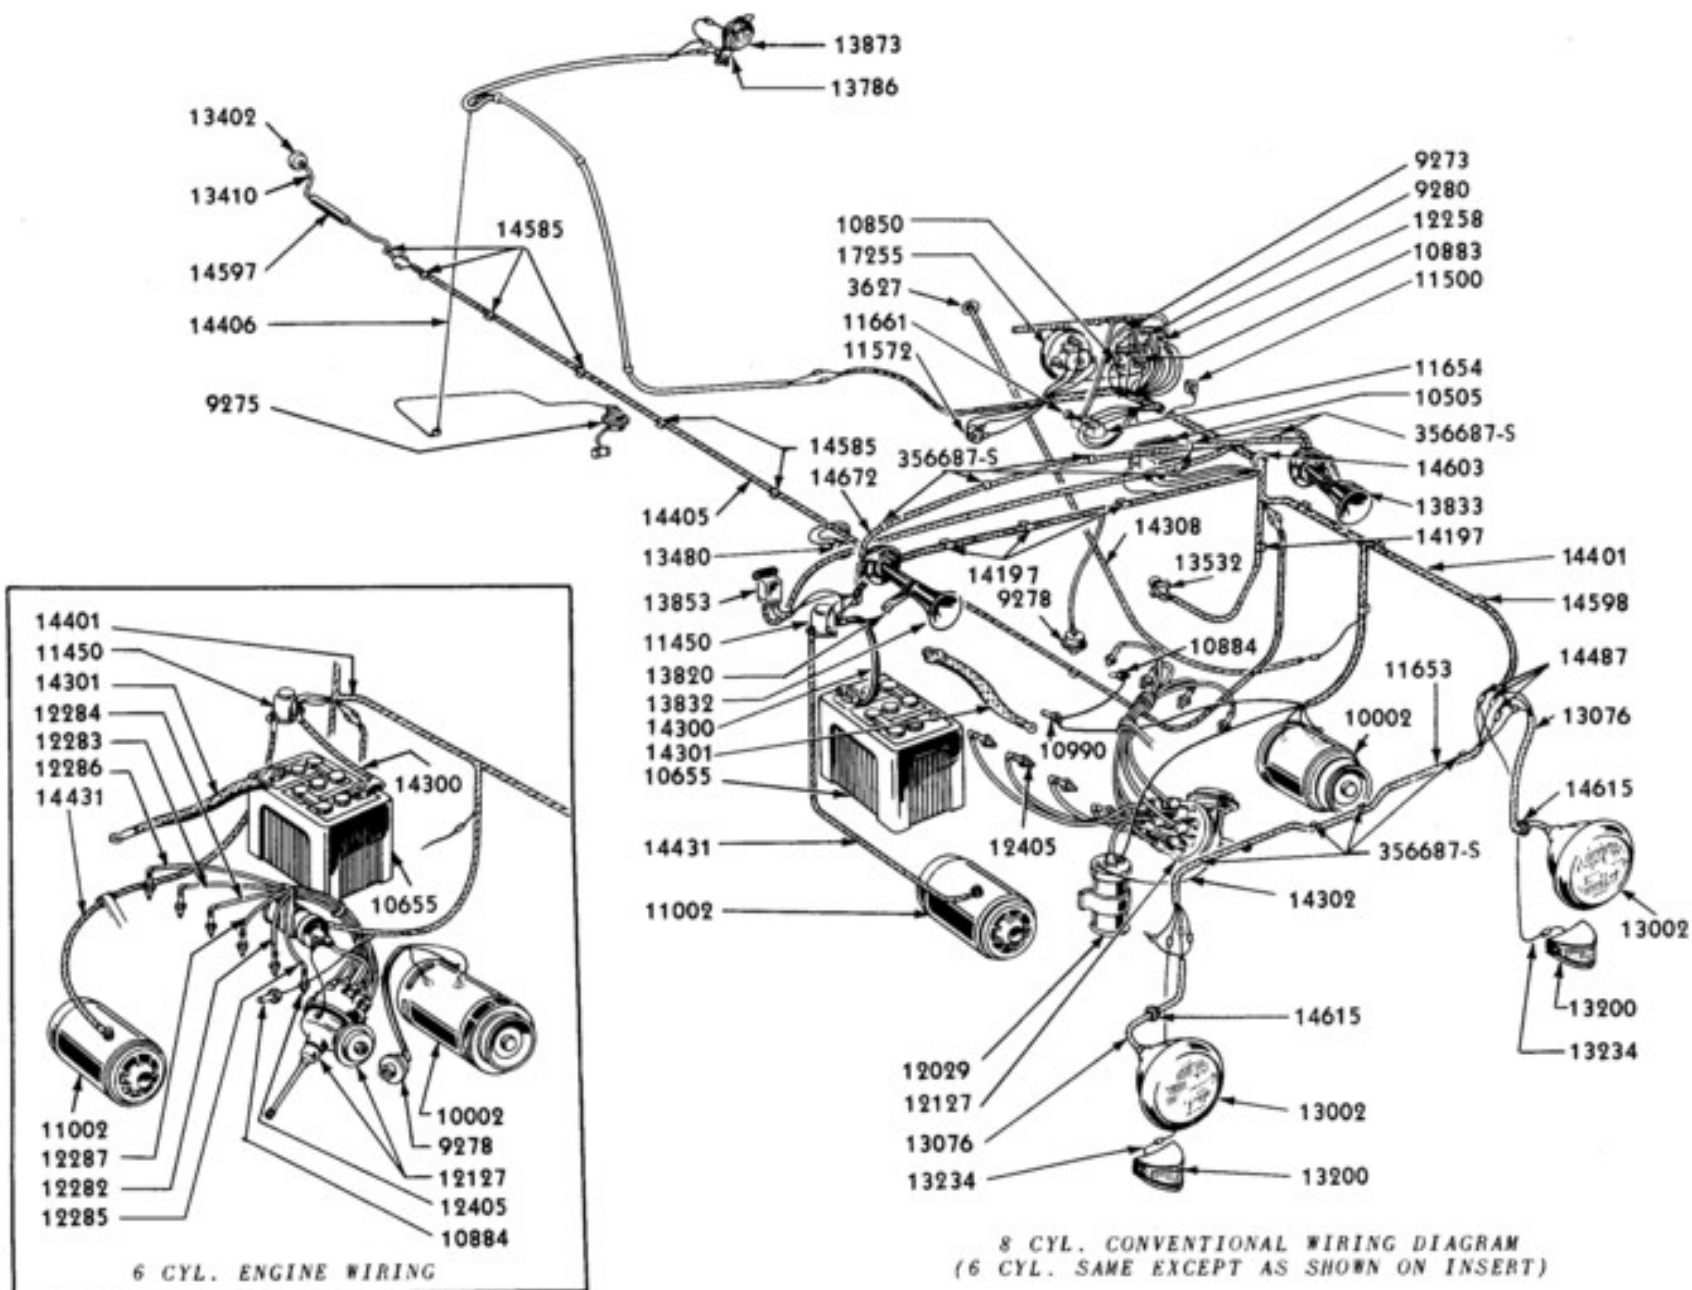

6 Cylinder Wiring Diagram




8 Cylinder Wiring Diagram

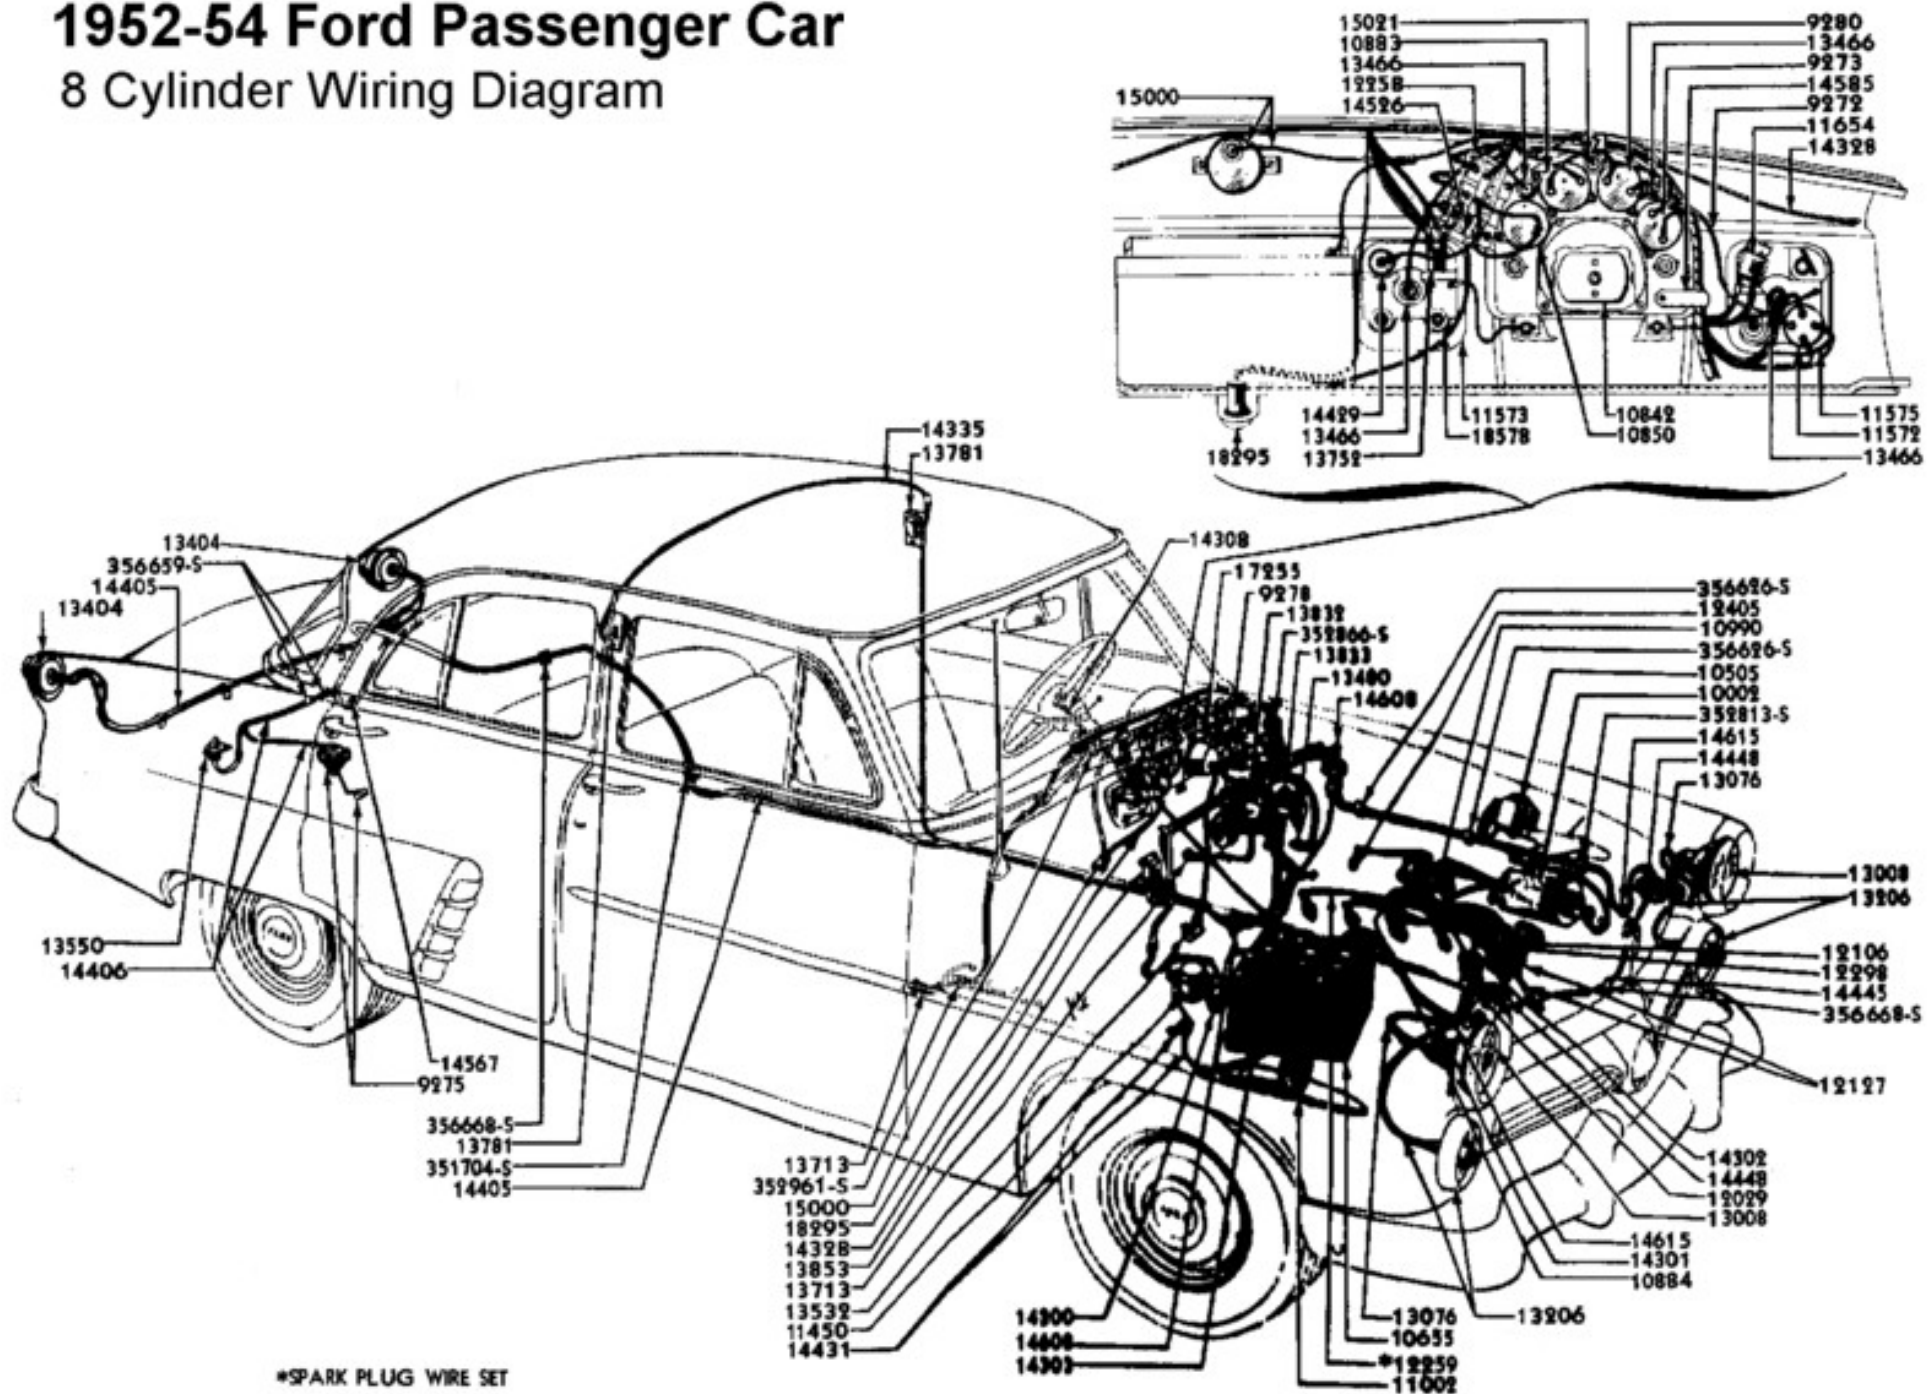


*SPARK PLUG WIRE SET

Ford Truck Wiring Diagram Typical for 1953-55

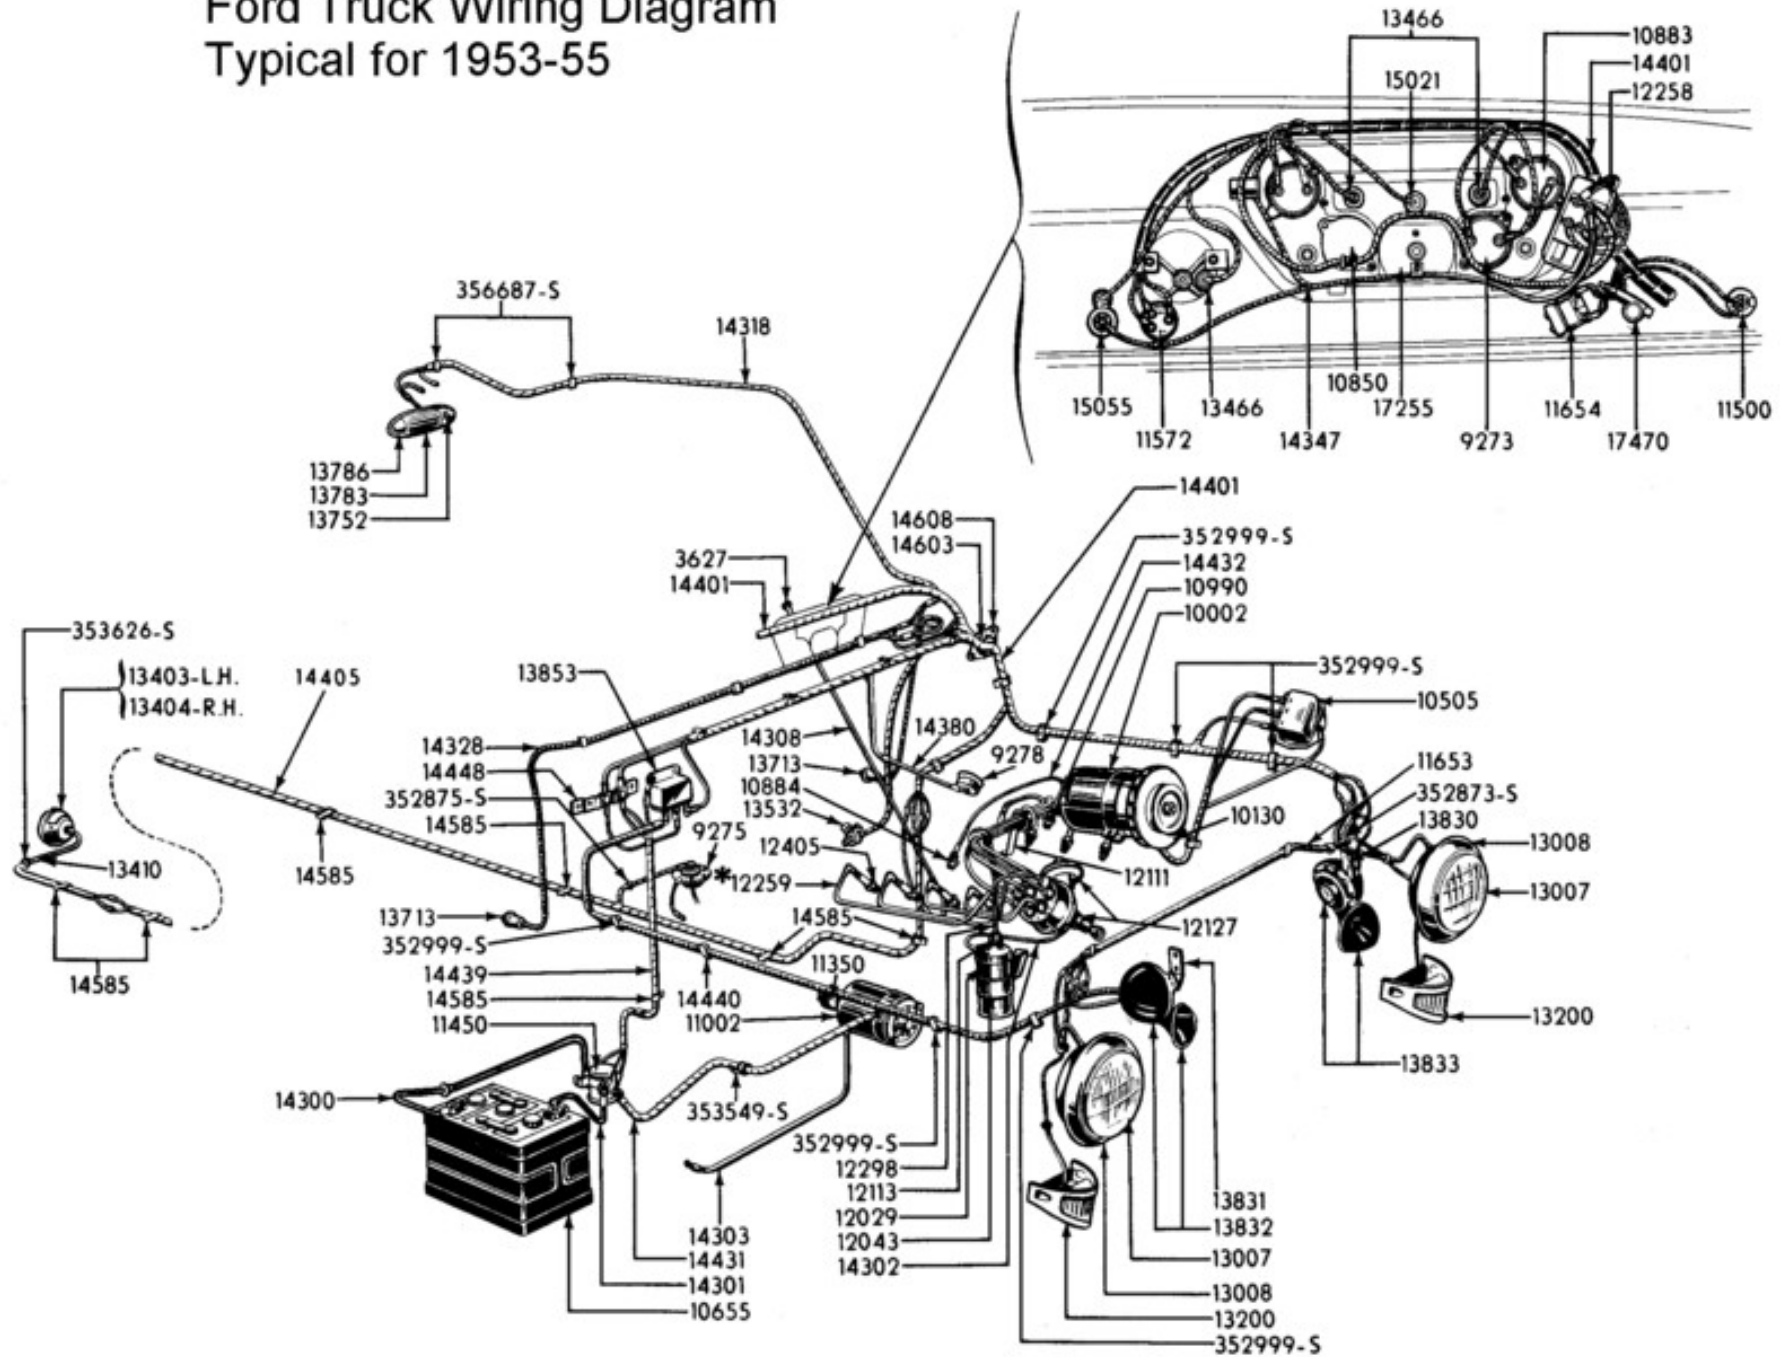

* 12259 SPARK PLUG WIRE SET

Ford 1949-51 Overdrive Transmission Wiring

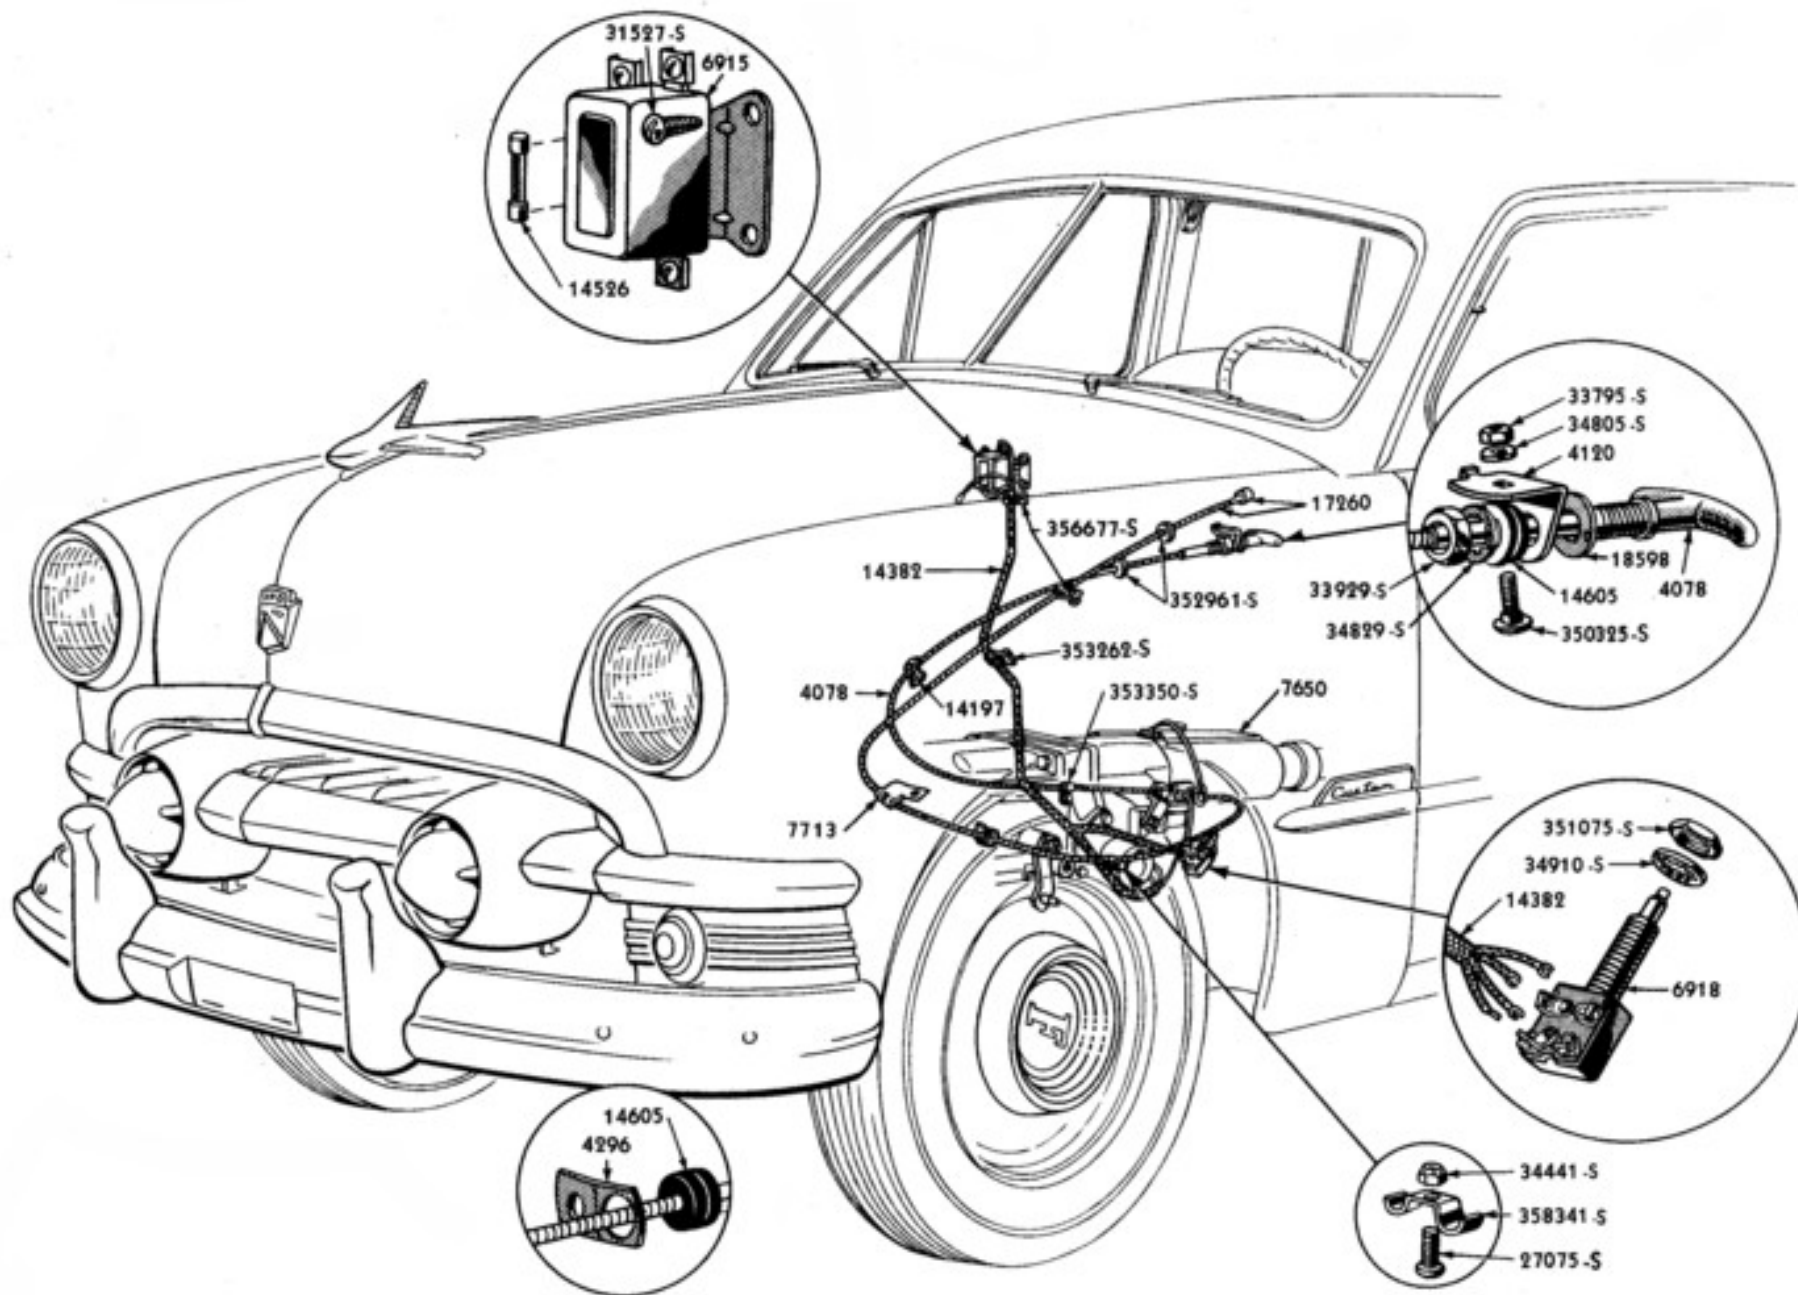

FORD 1949-51 Direction Signals

