

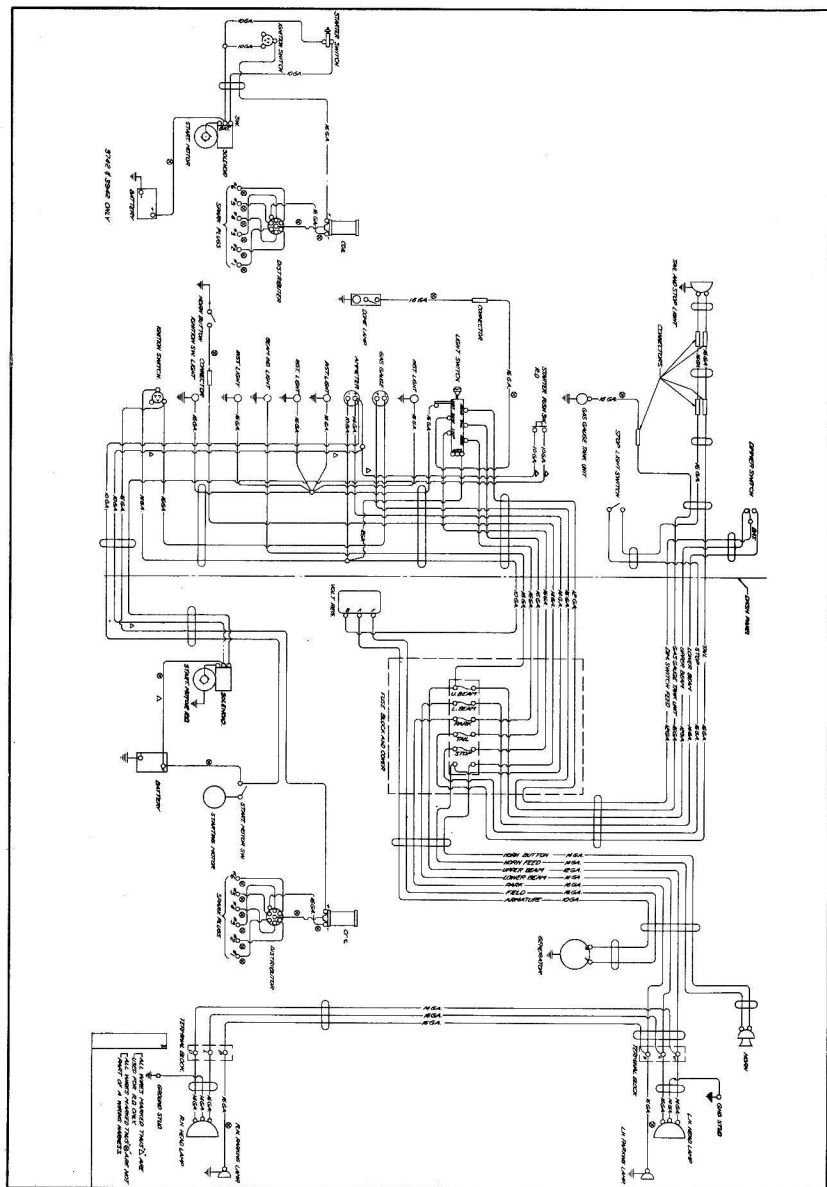


Fig. 1-(1948-49) Wiring Diagram

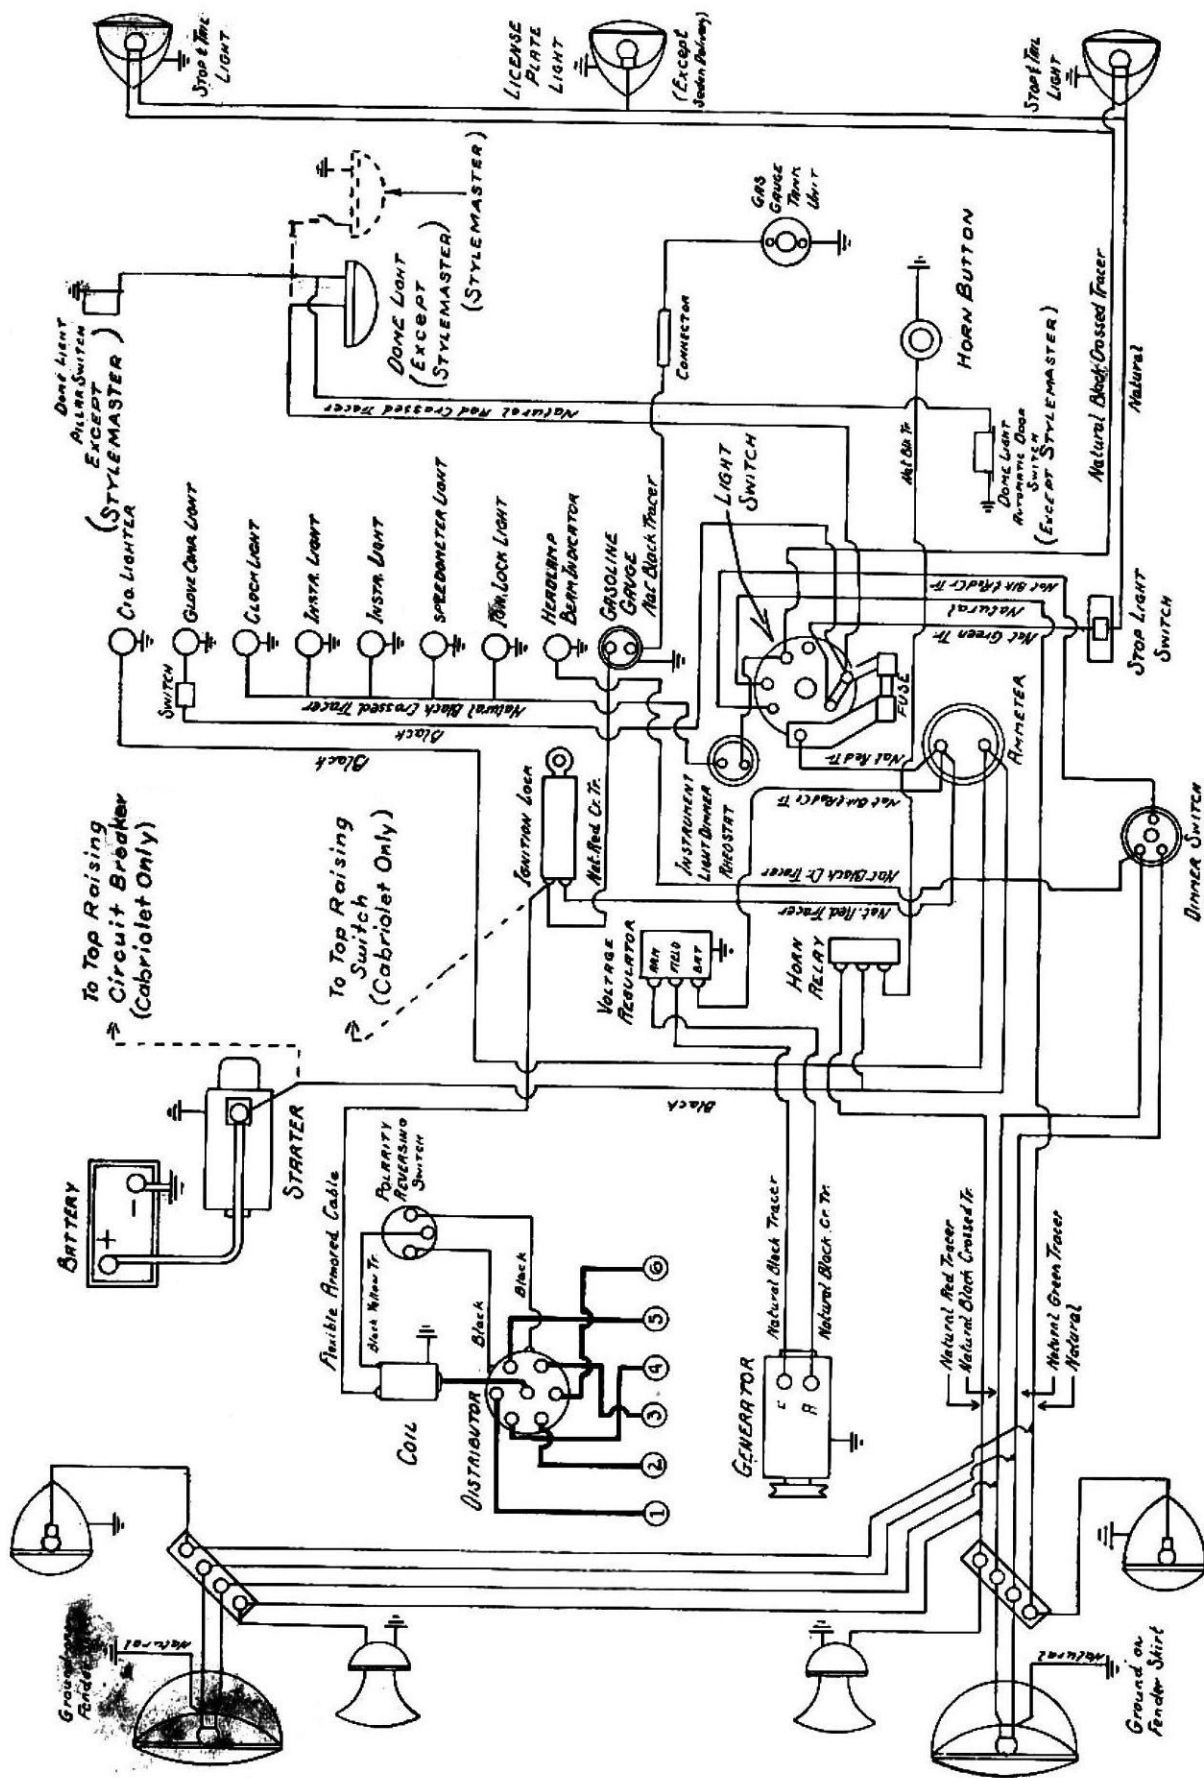


Fig. 65—Passenger Car Wiring Diagram

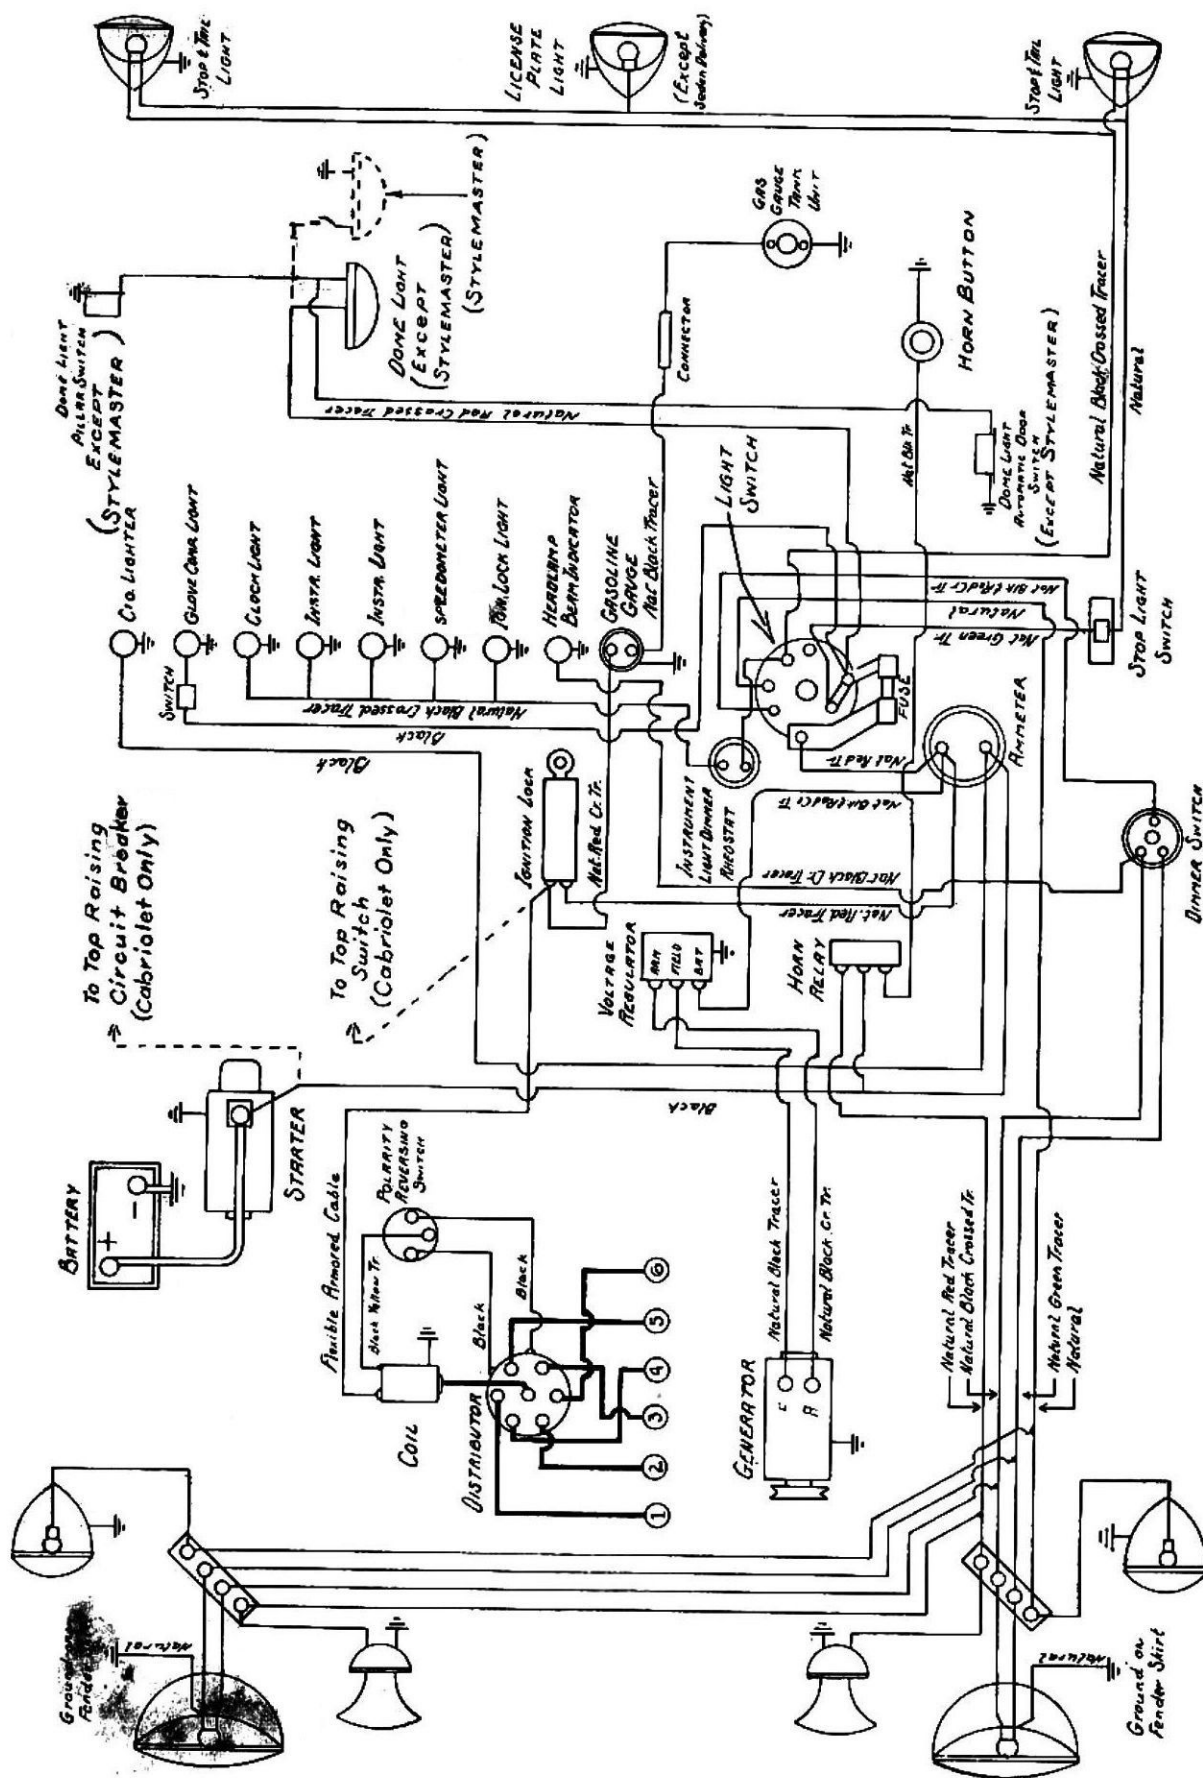


Fig. 65—Passenger Car Wiring Diagram


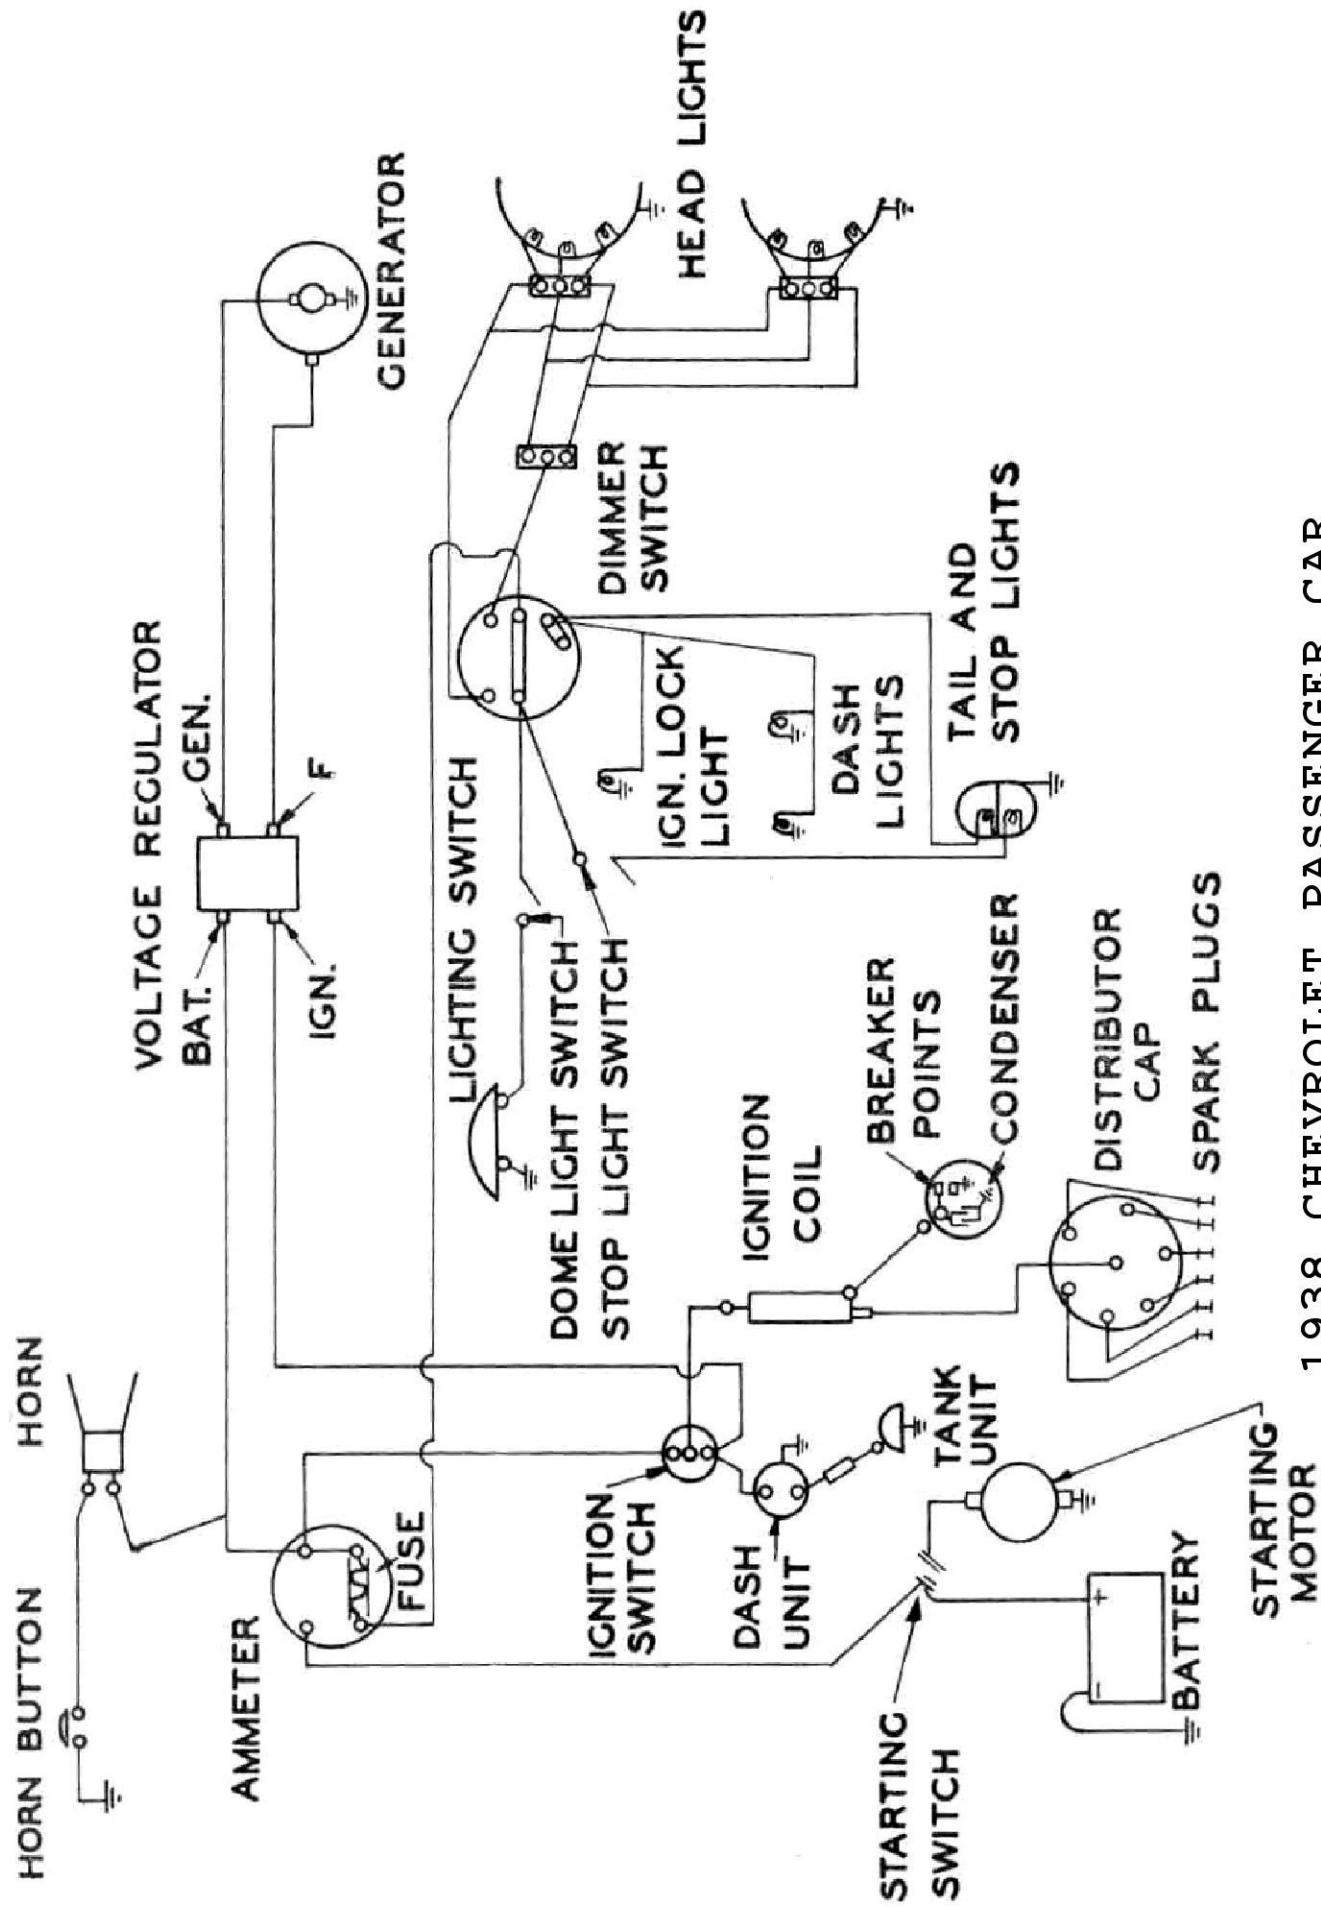



Fig. 55—Complete Car Wiring Diagram

1938 CHEVROLET PASSENGER CAR

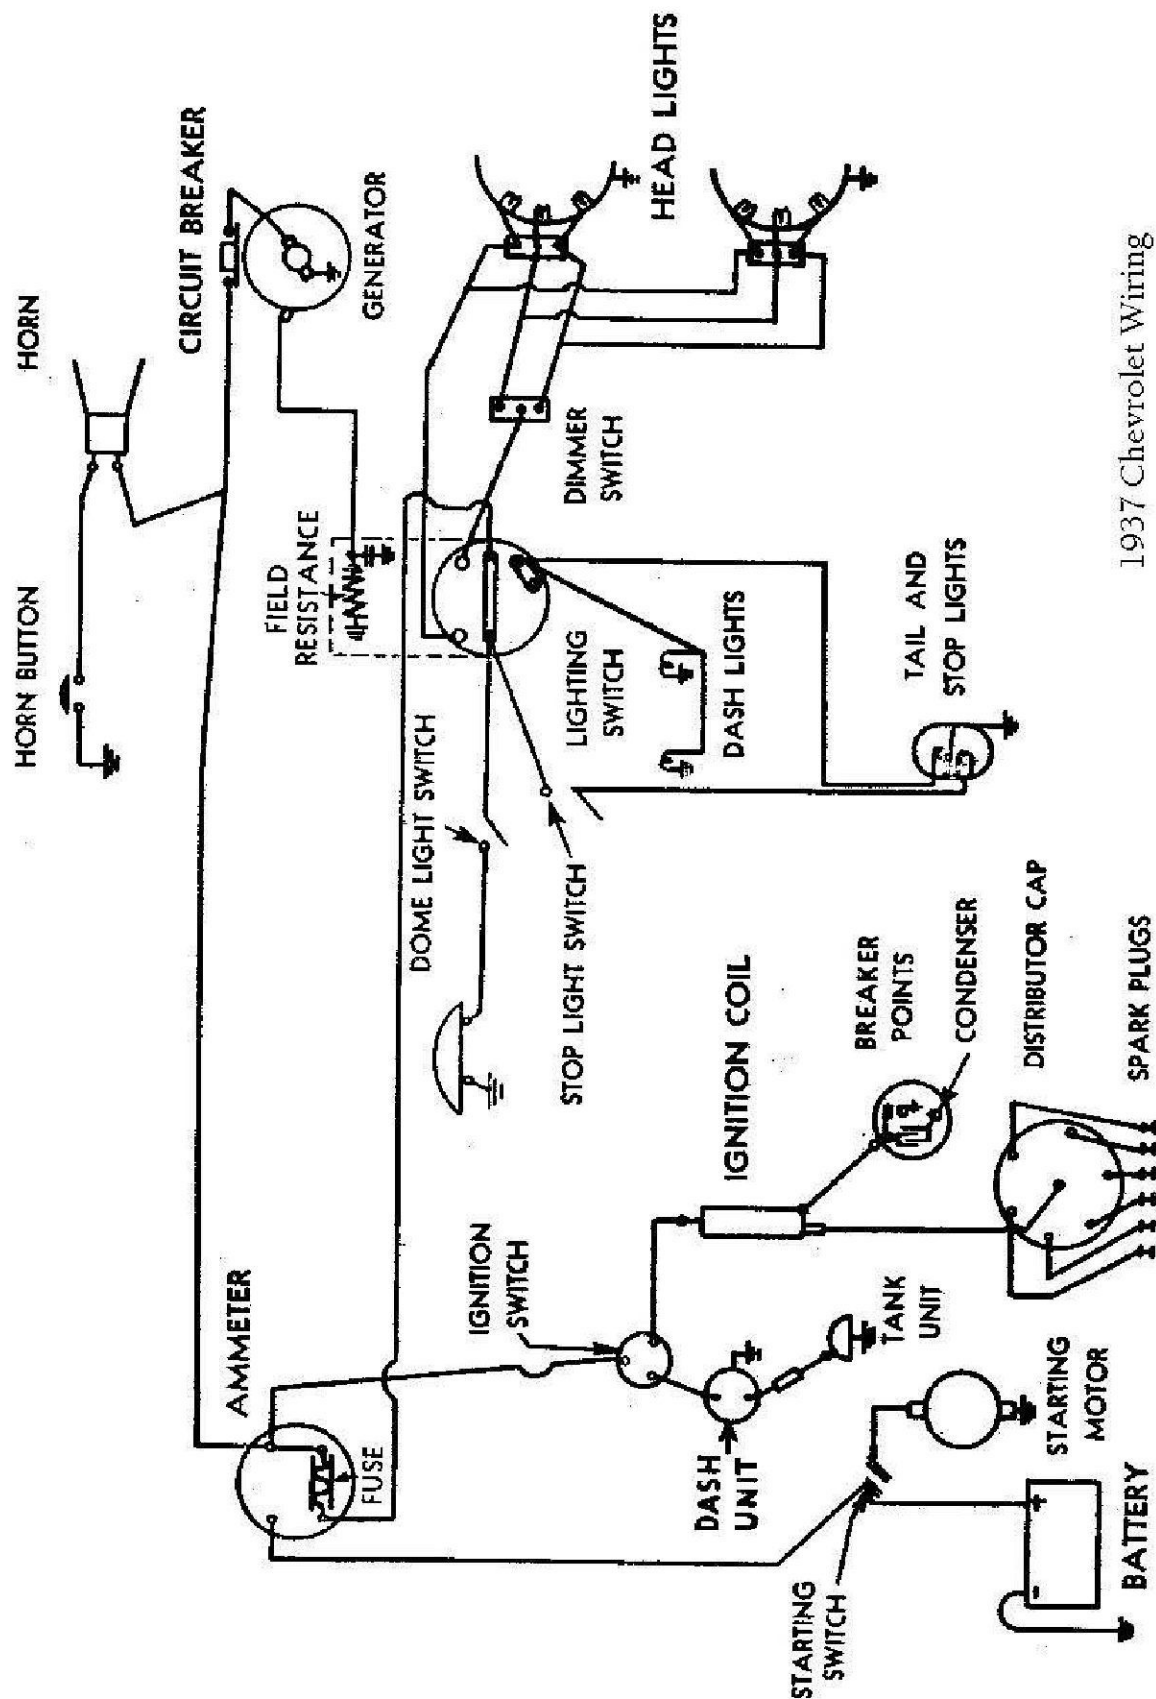

1937 Chevrolet Wiring

Fig. 39—Complete Car Wiring Diagram

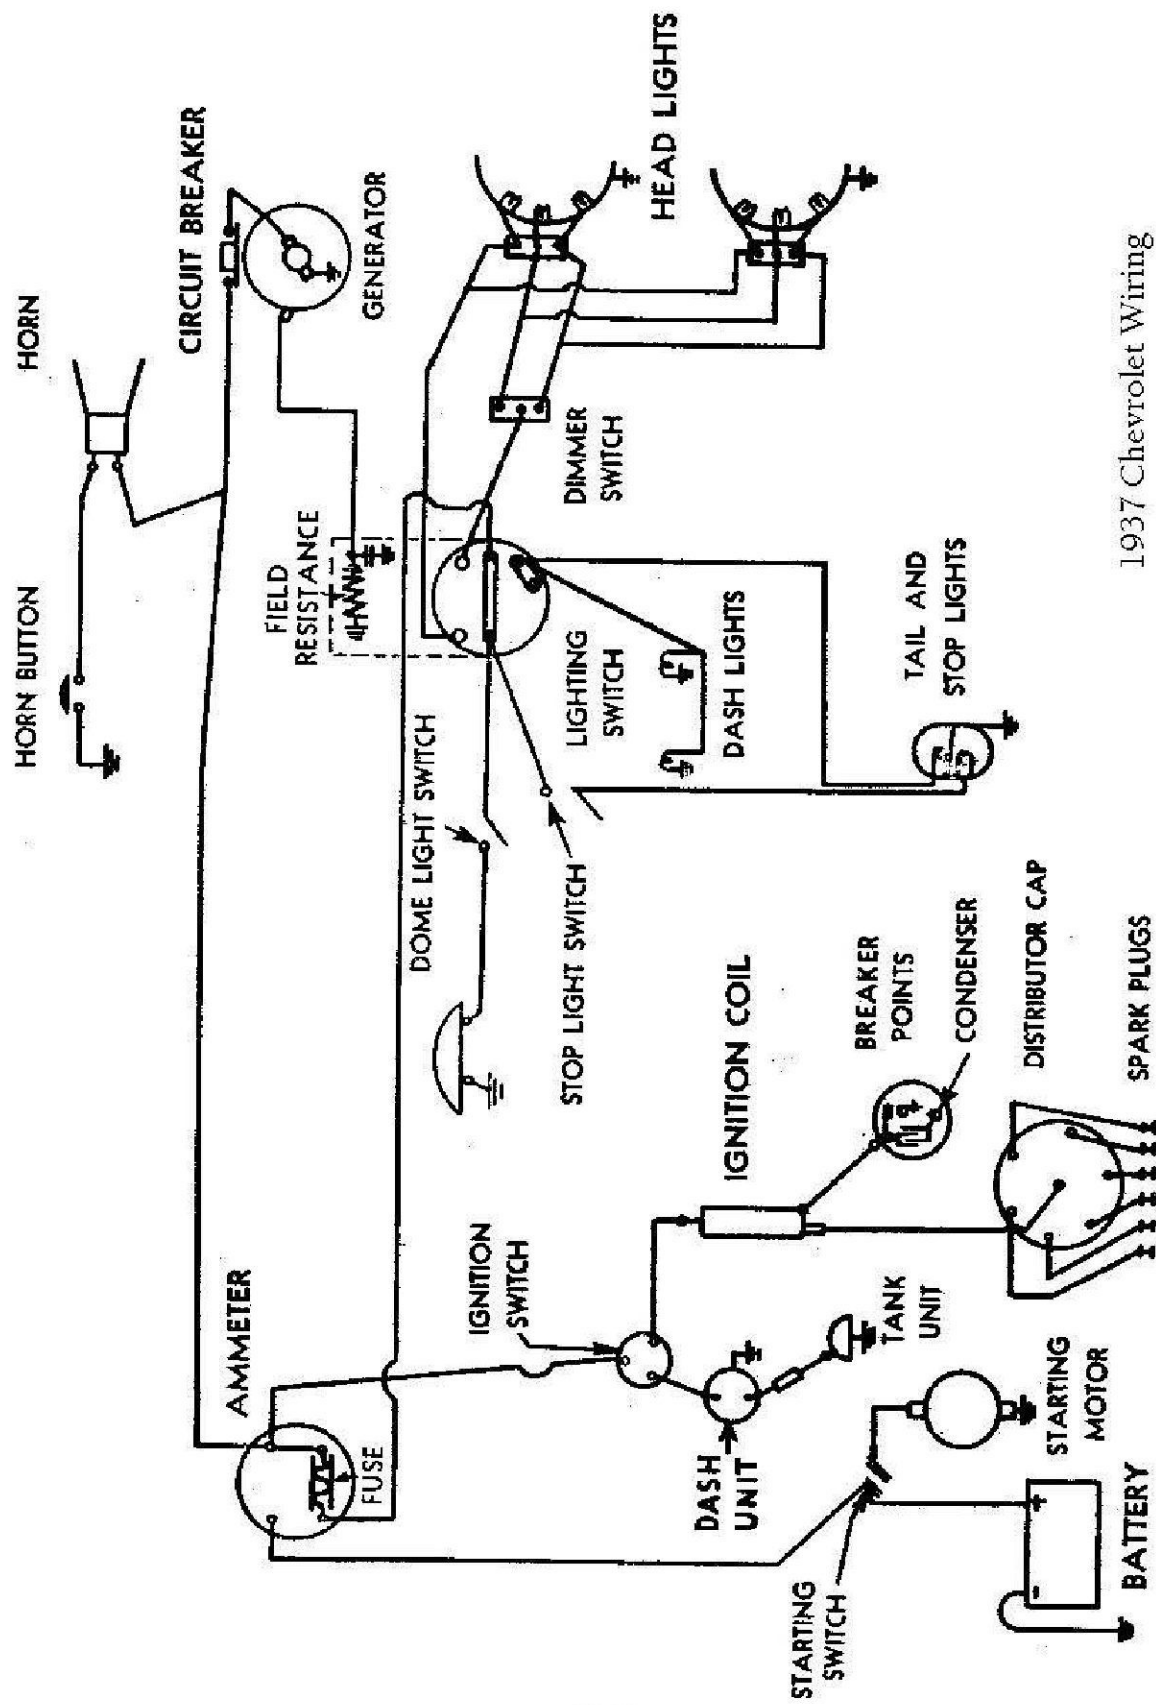

1937 Chevrolet Wiring

Fig. 39—Complete Car Wiring Diagram

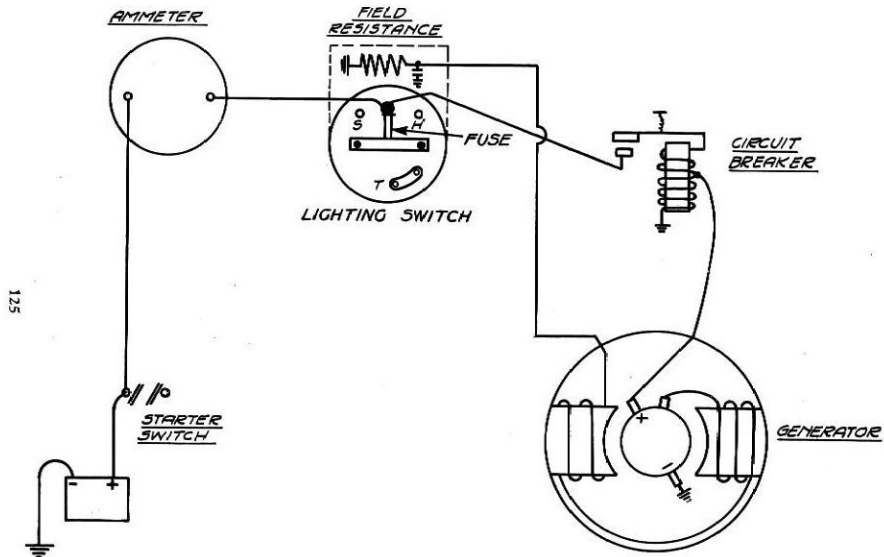


Fig. 258—The Generator Circuit

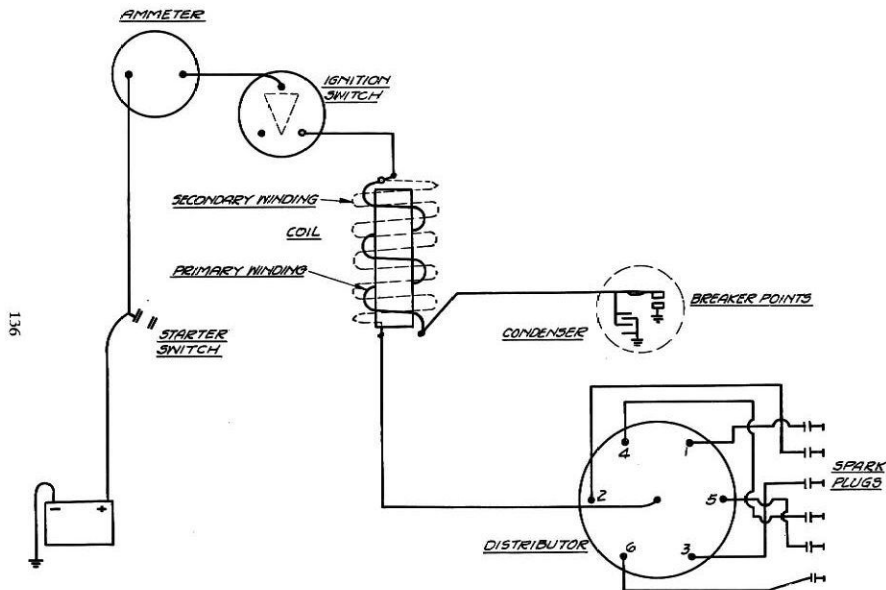


Fig. 288—Ignition Circuit


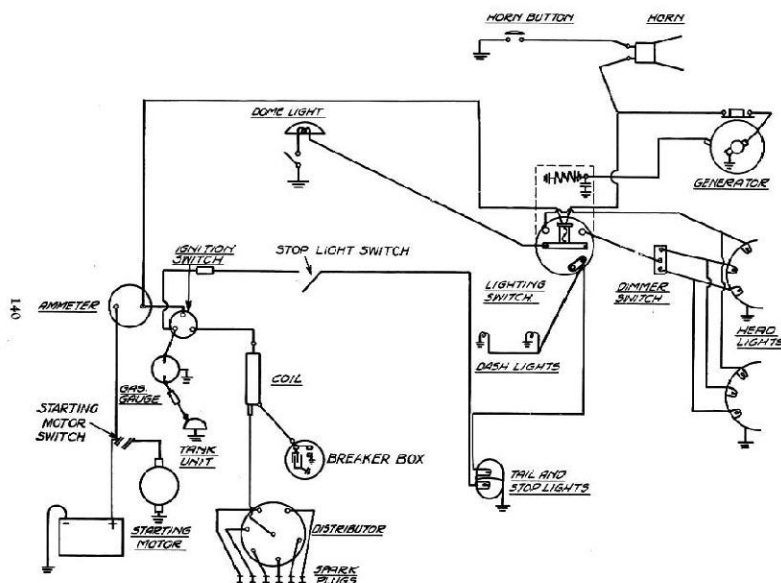


Fig. 294—Complete Car Wiring


1933-36 Chevrolet

Master


1933

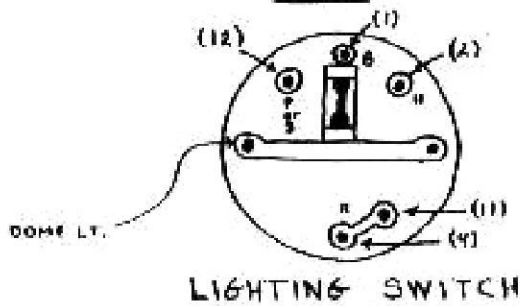


1934

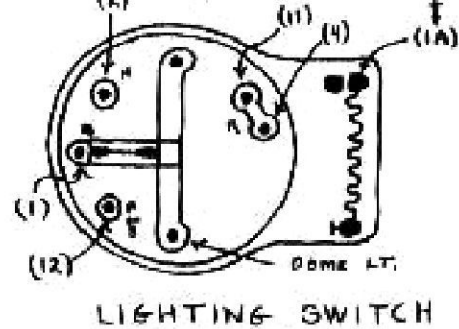


1935

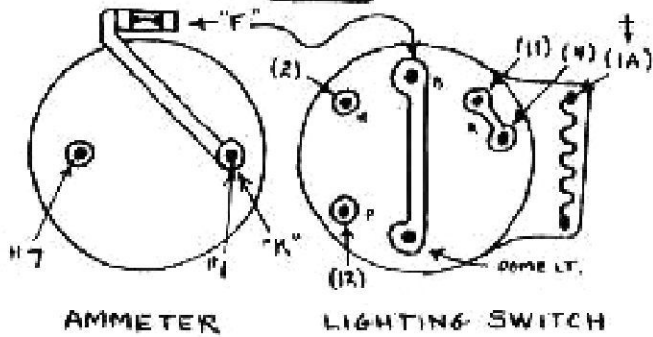


1936

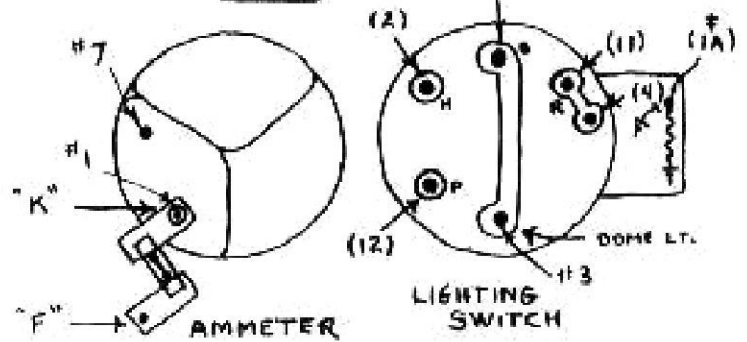

Standard

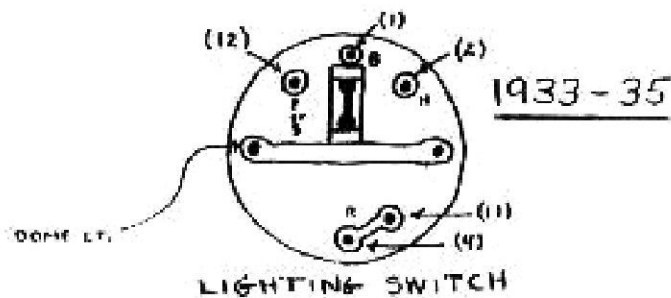

1936

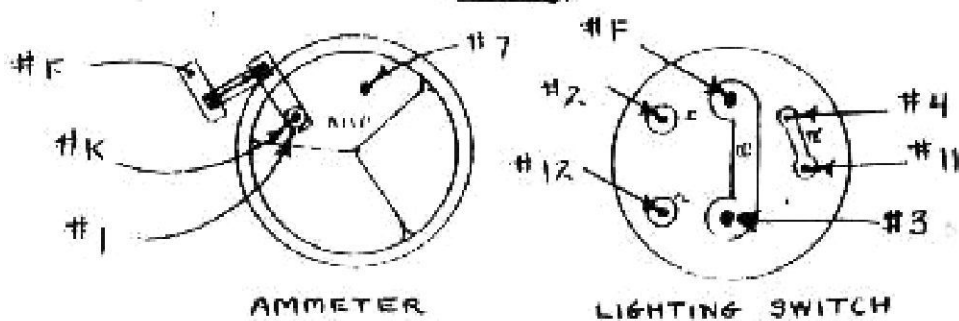


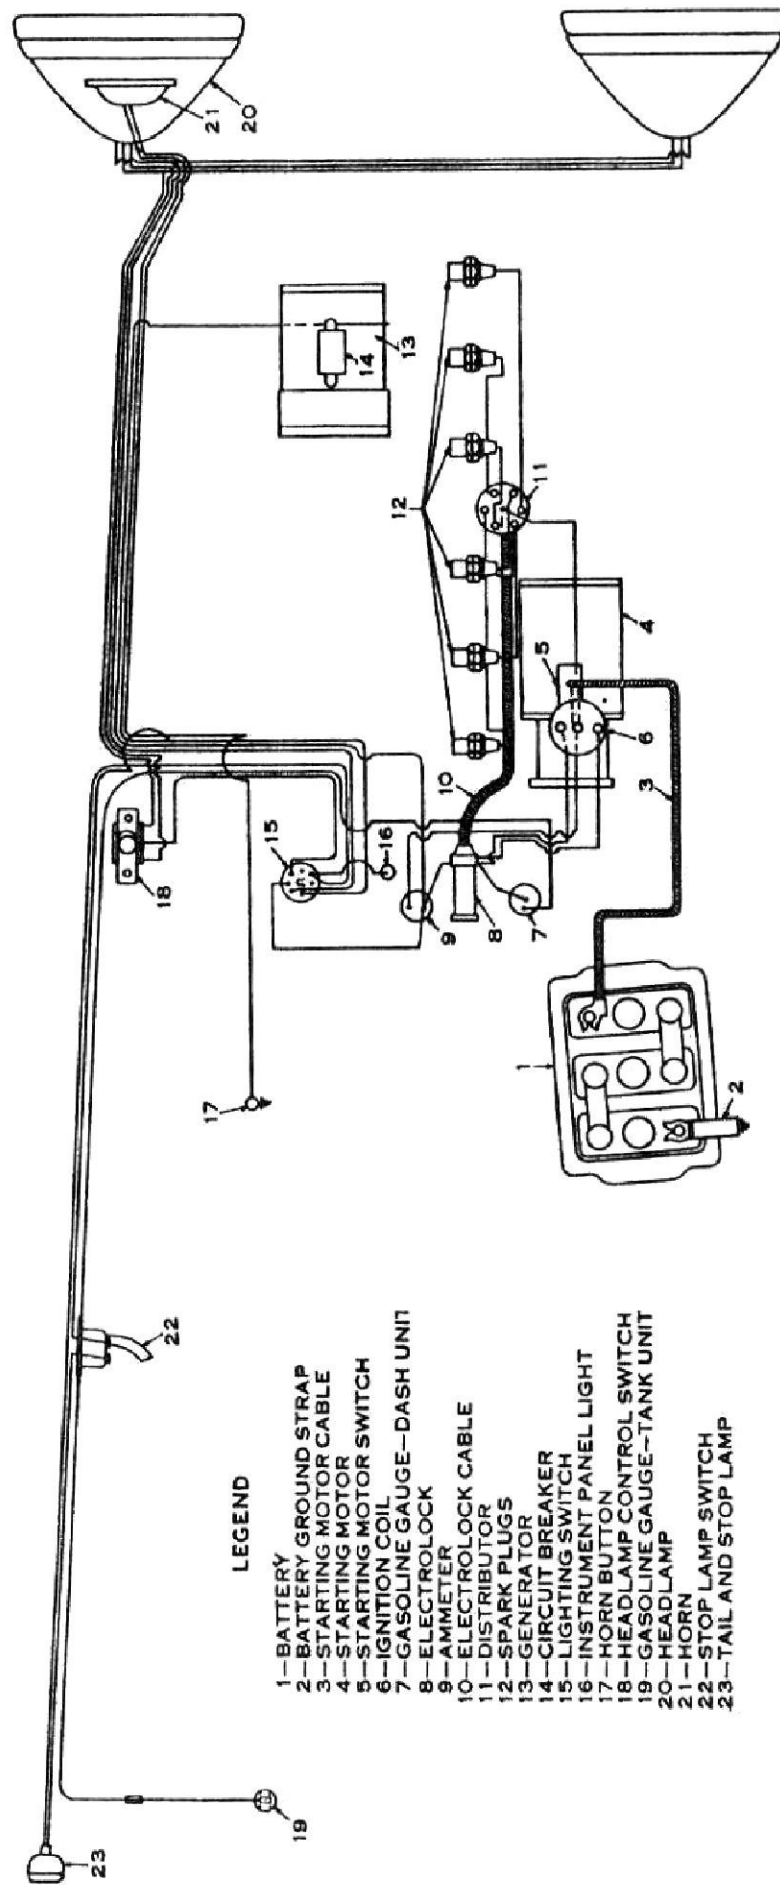



Fig. 149—Lighting and Ignition Circuit (Pass. Cars)

1931 Chevrolet Passenger Car

CHEVROLET


Series AC, 6 cyl., (1929); Series AD, (1930)

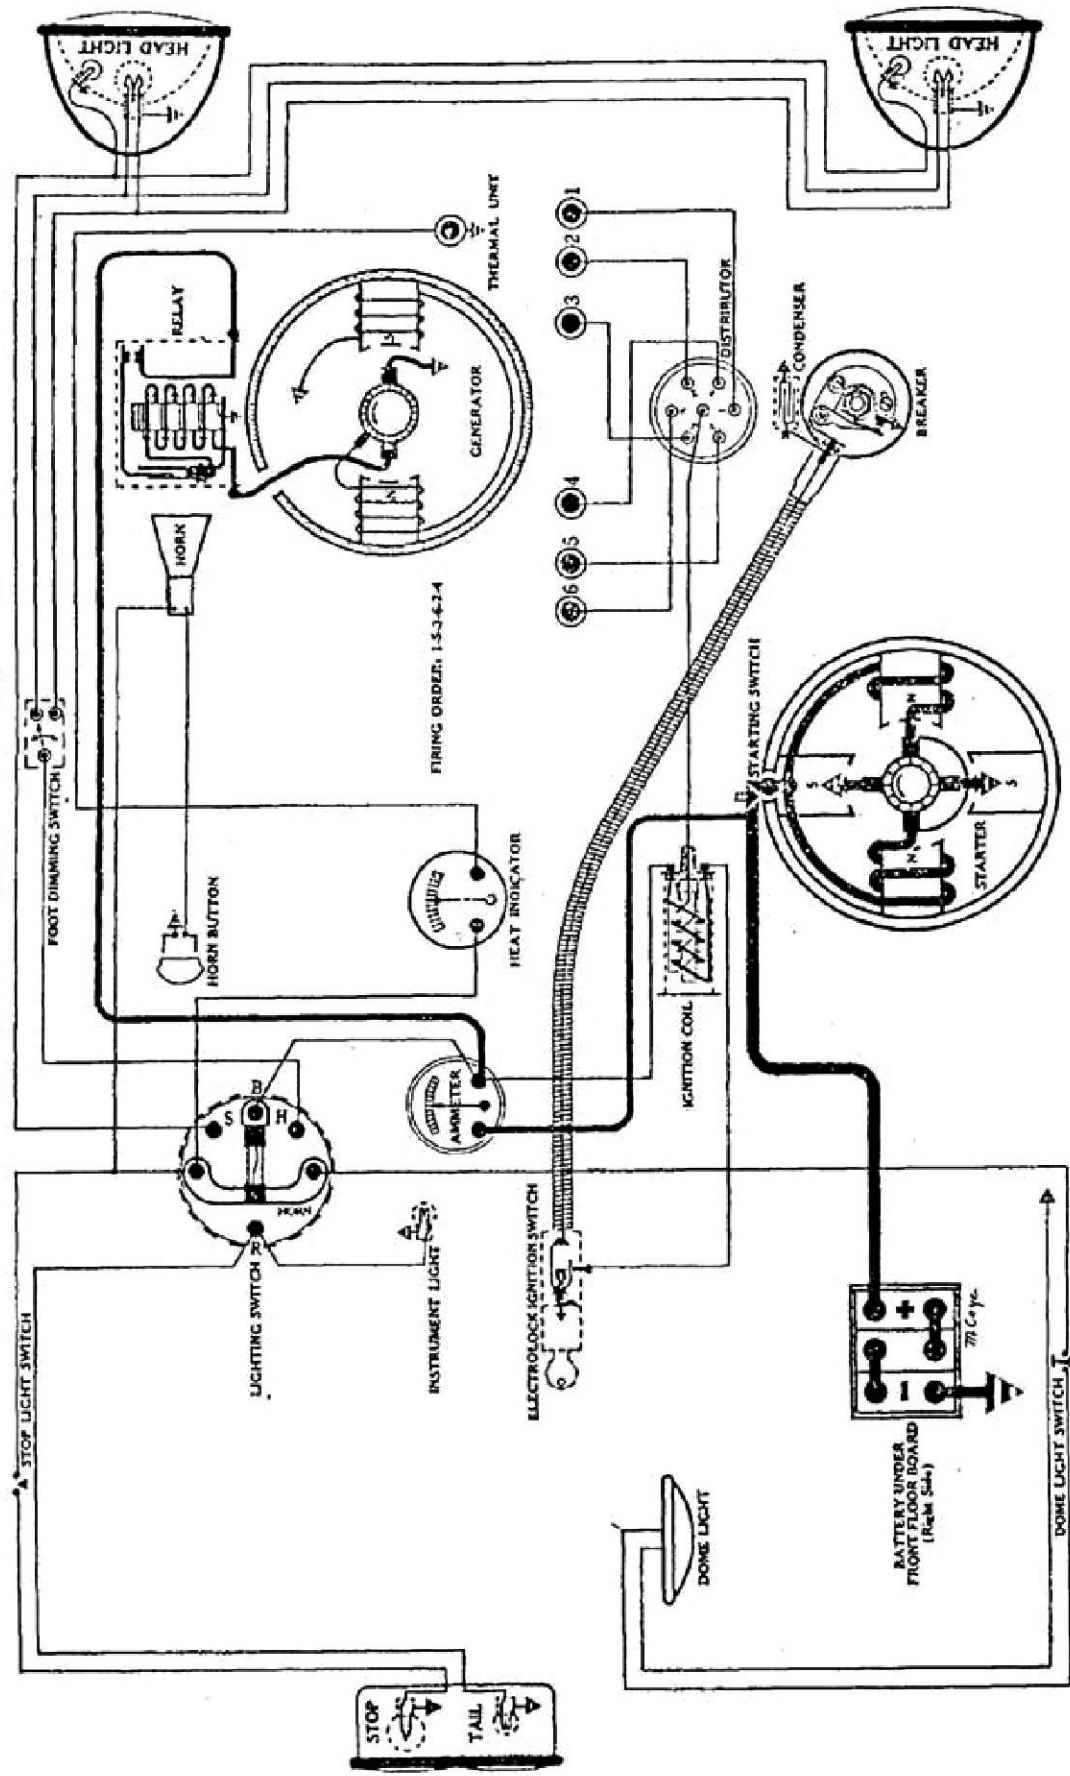

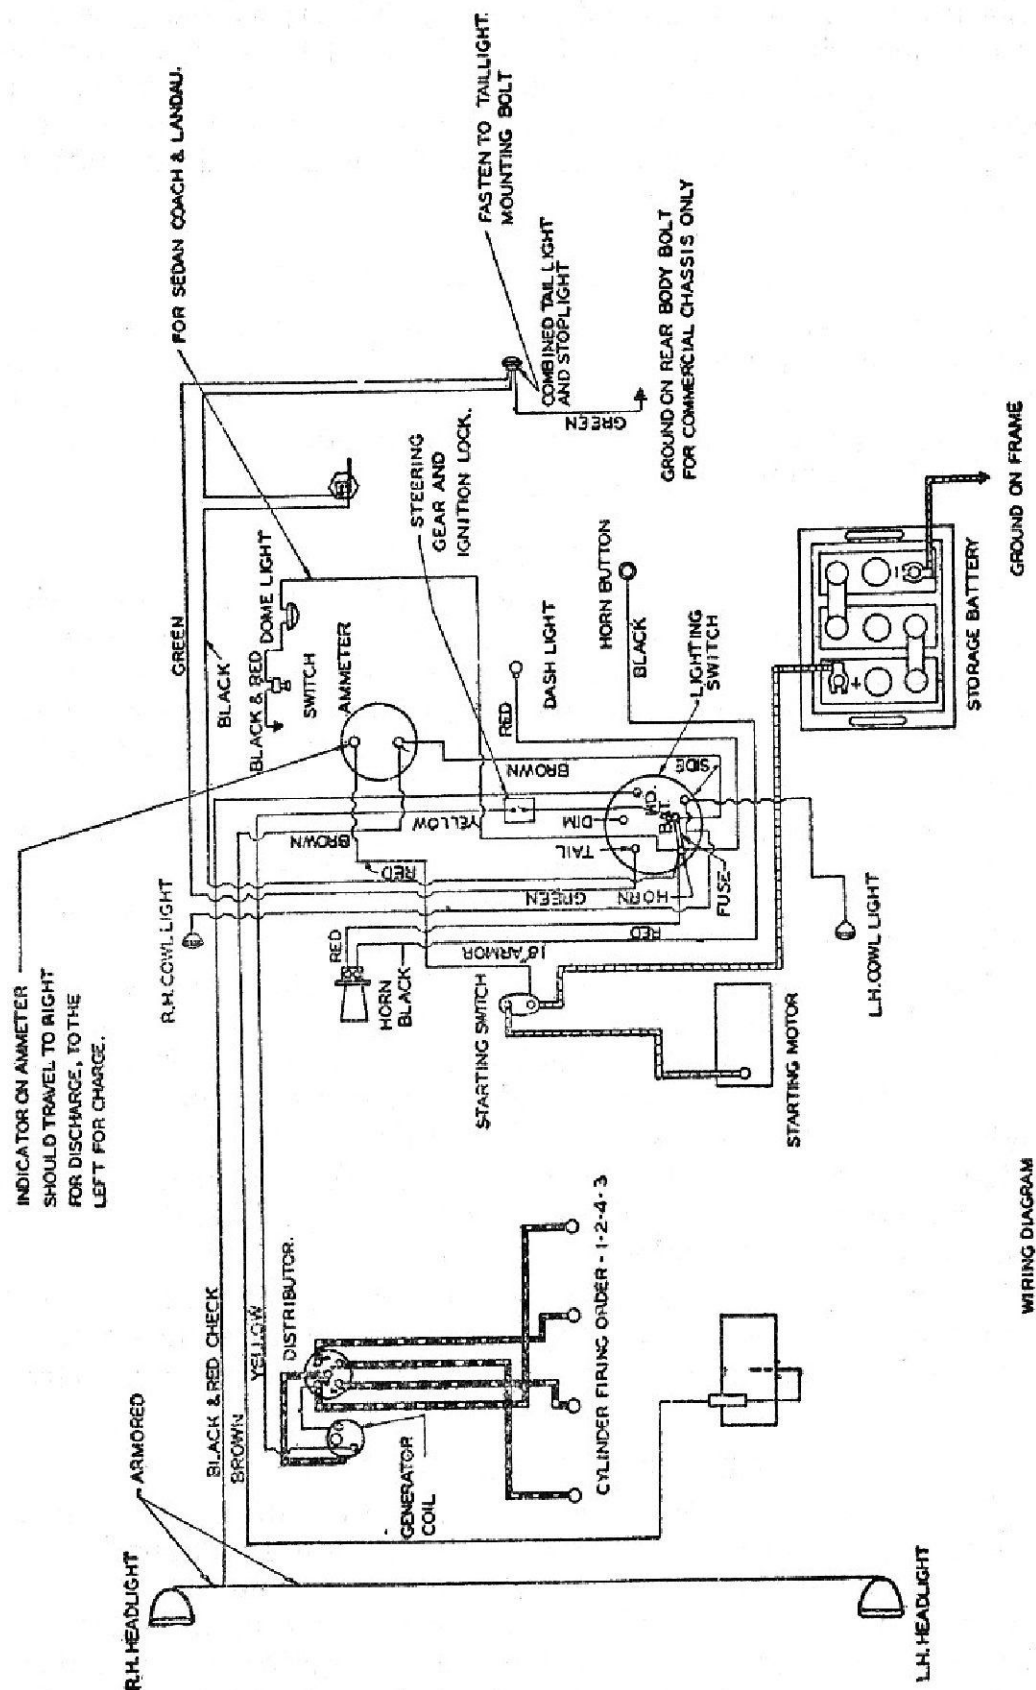

1928 Chevrolet

Fig. 33—Wiring diagram.

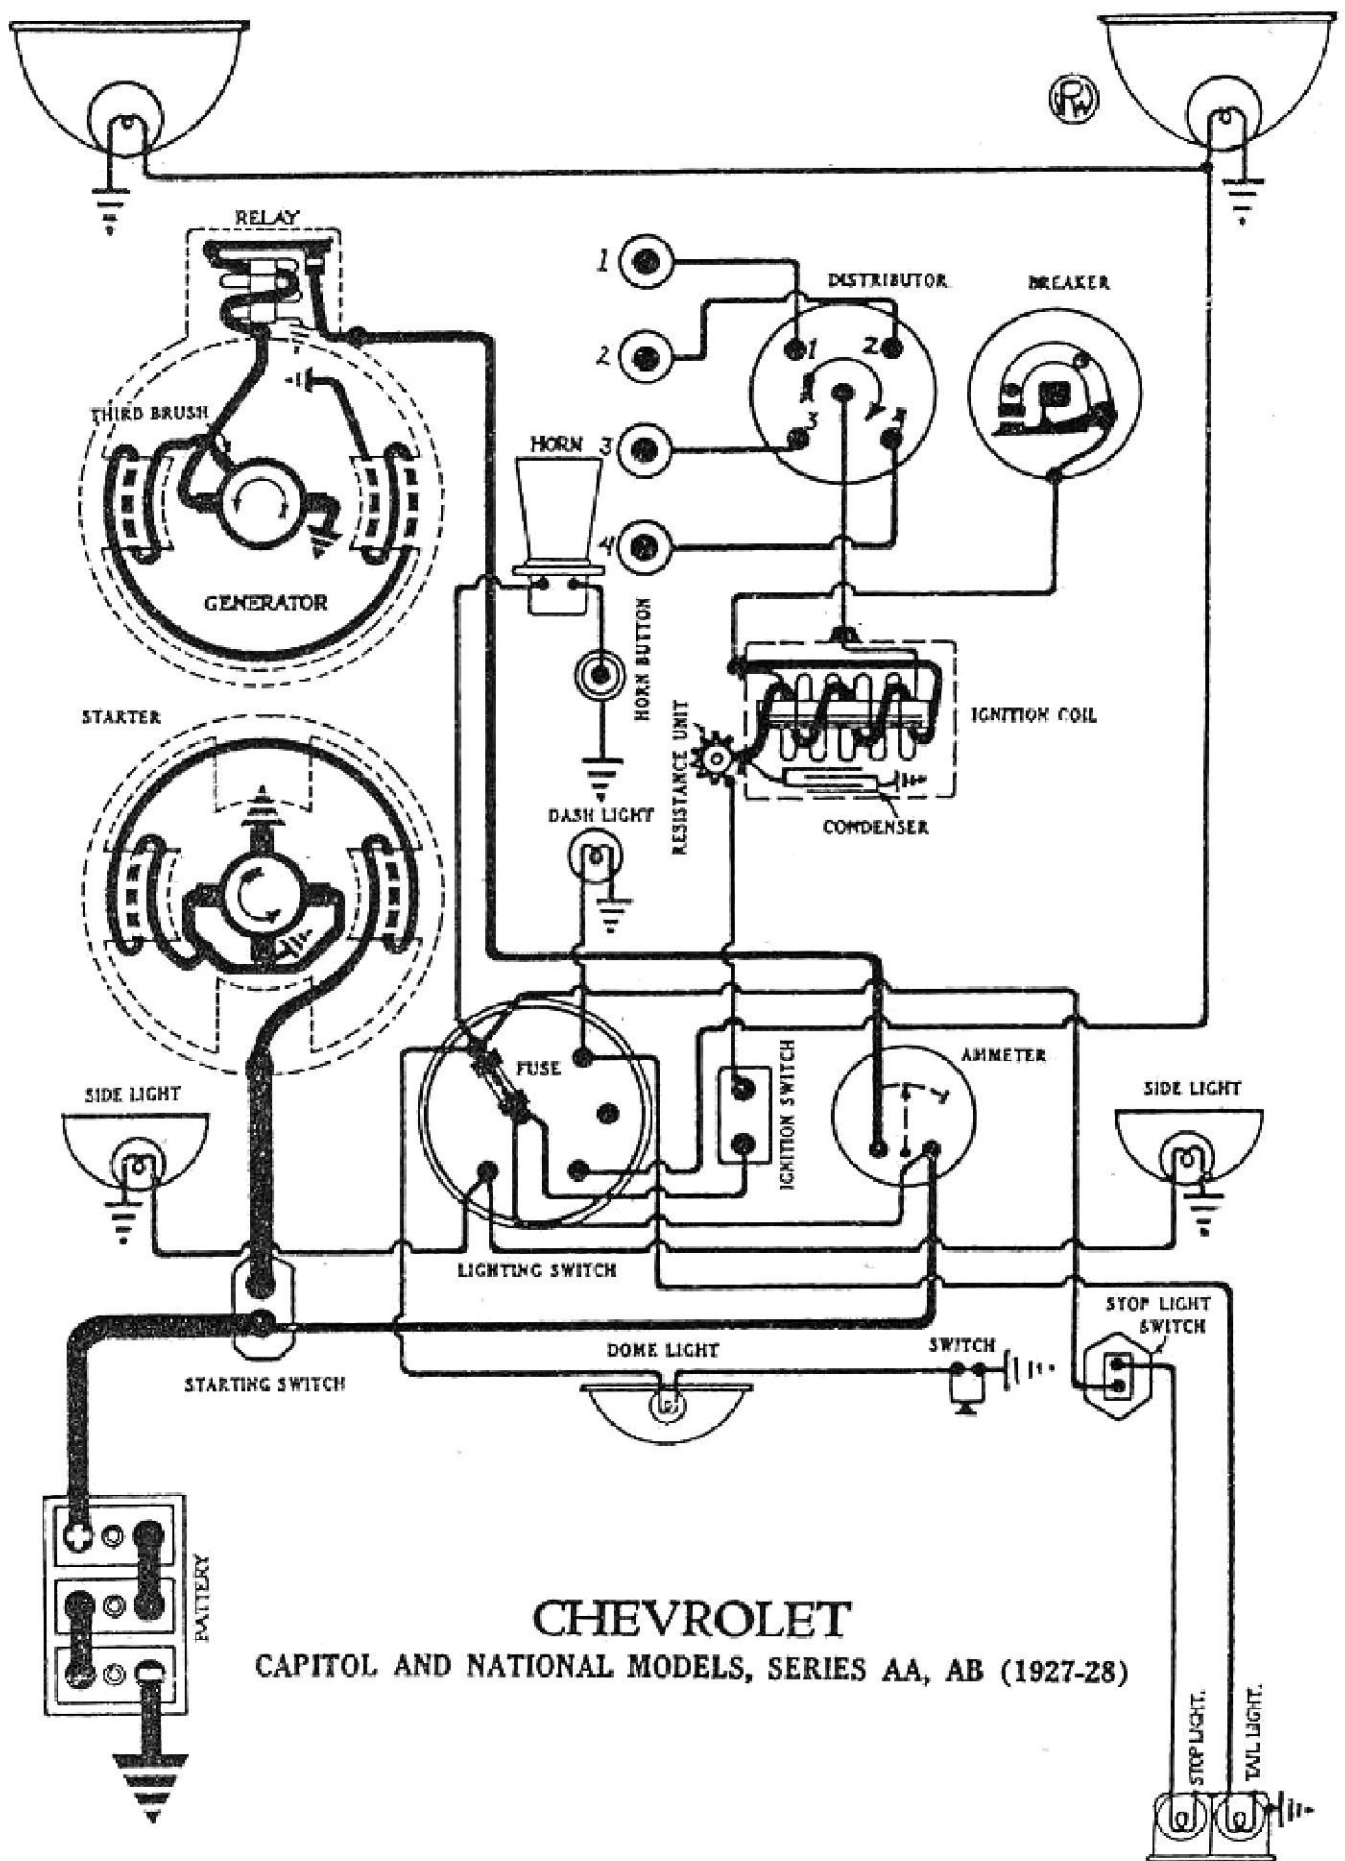

Wiring Diagram


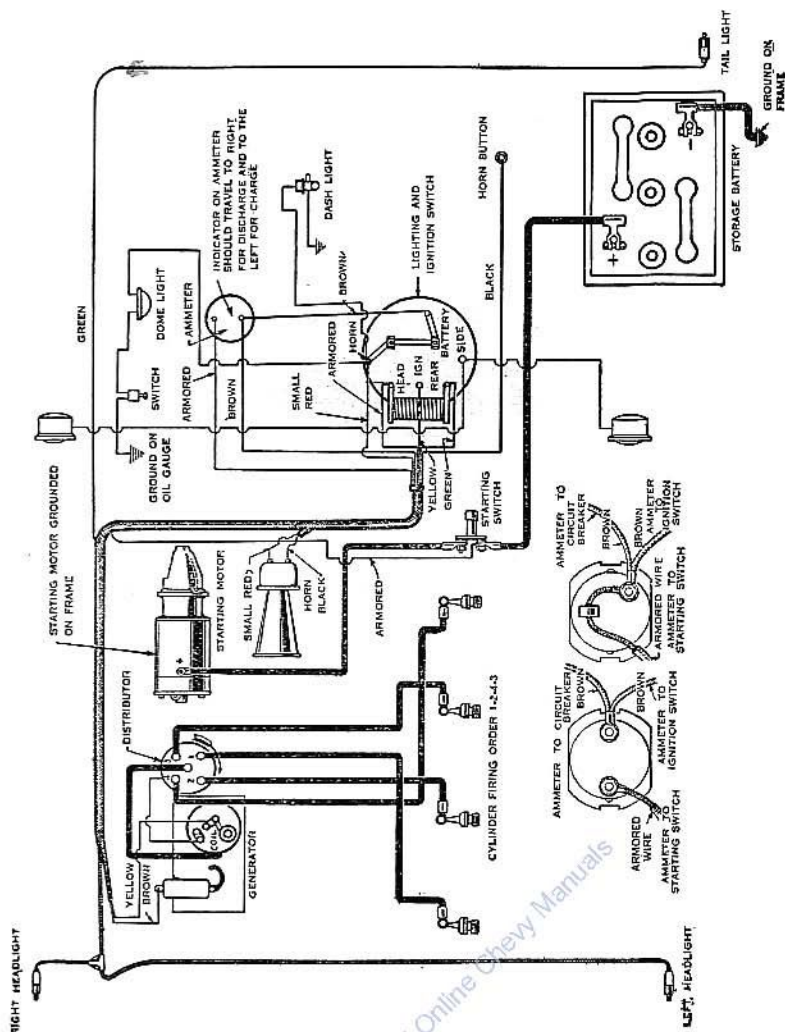


Fig. 104—Wiring Diagram

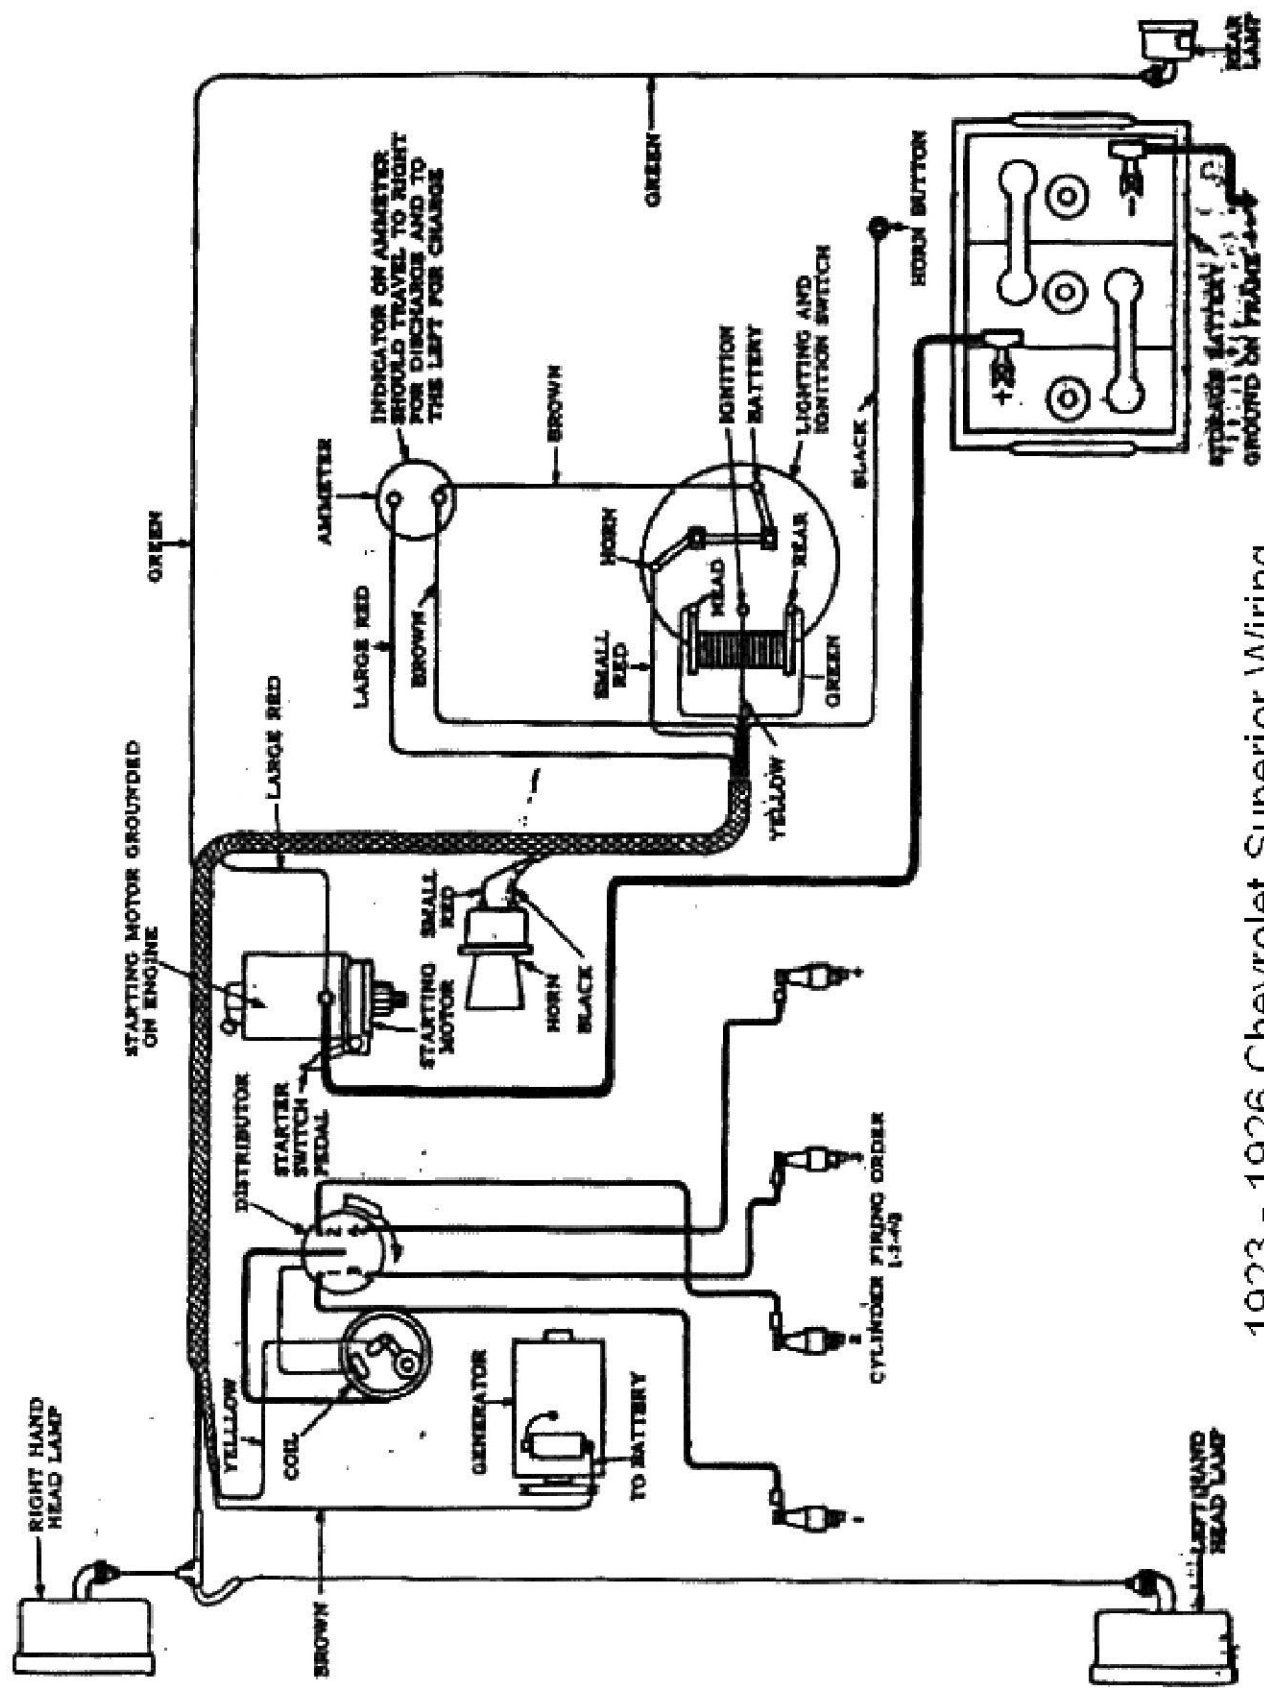

1923 - 1926 Chevrolet Superior Wiring

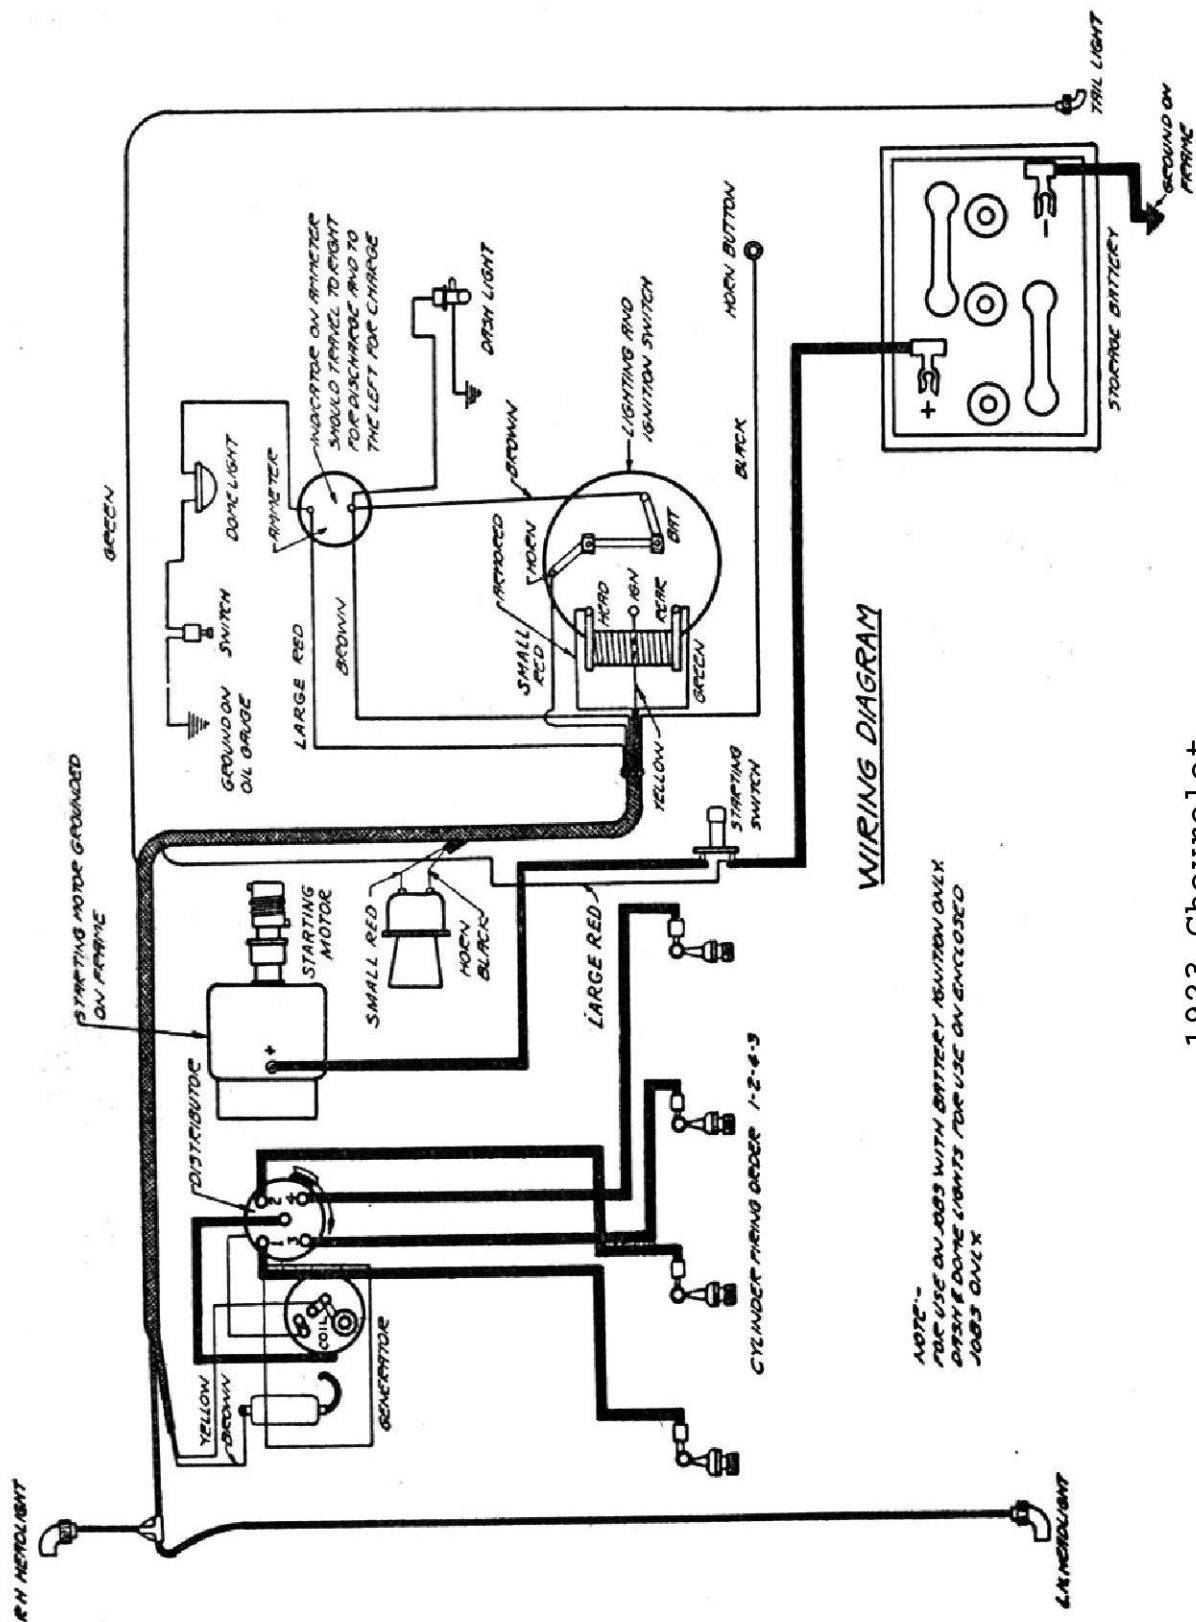


Fig. 48—Wiring diagram.