

SYSTEM WIRING DIAGRAMS 3.1L (VIN D), Cooling Fan Circuit, W/ Pusher Fan 1993 Pontiac Trans Sport

For x

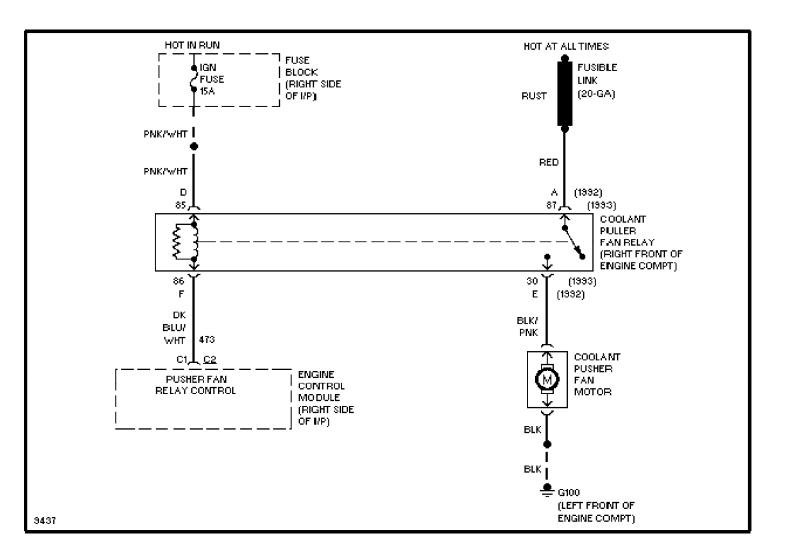

SYSTEM WIRING DIAGRAMS 3.1L (VIN D), Cooling Fan Circuit, W/O Pusher Fan (p. 2) 1993 Pontiac Trans Sport


For x

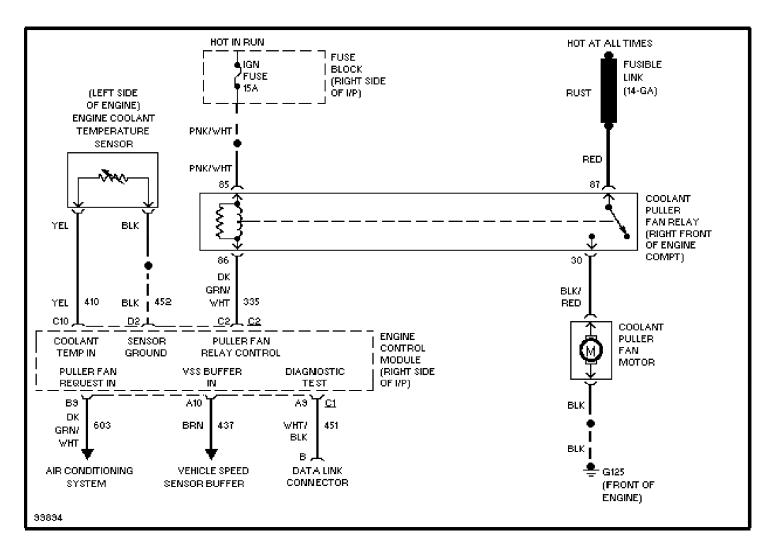

SYSTEM WIRING DIAGRAMS 3.8L (VIN L), Cooling Fan Circuit (p. 3)

1993 Pontiac Trans Sport


For x

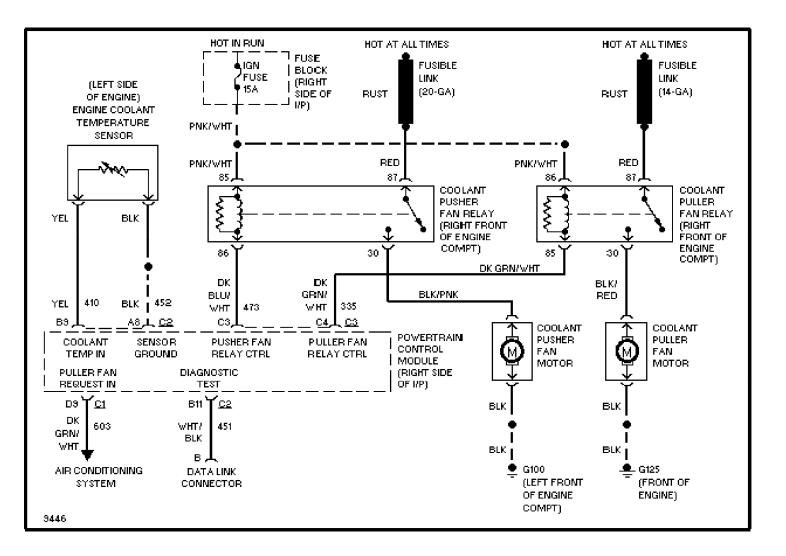

#### SYSTEM WIRING DIAGRAMS Defogger Circuit (p. 4)

1993 Pontiac Trans Sport


For x

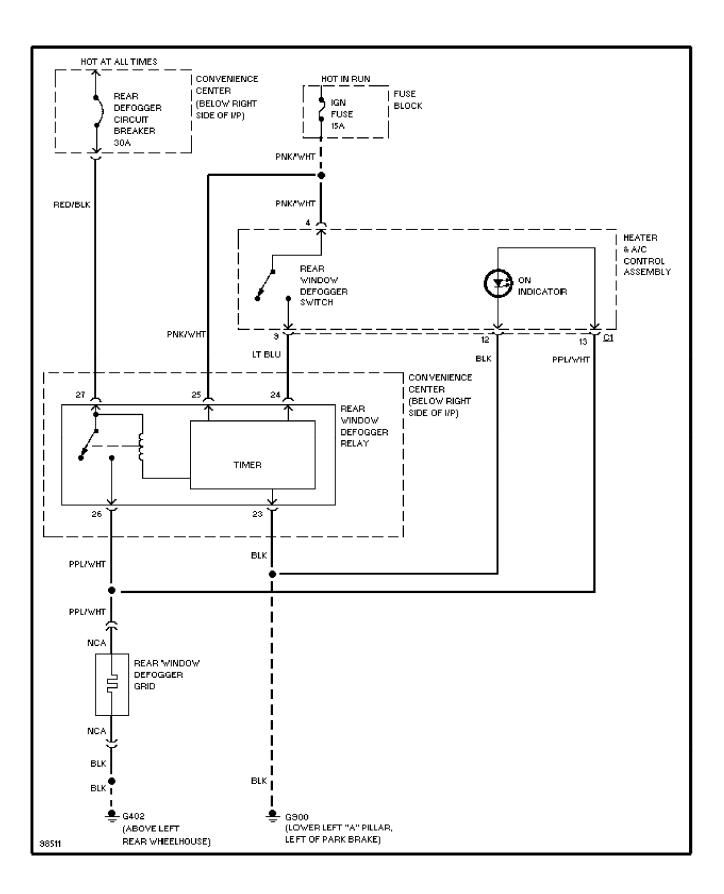

SYSTEM WIRING DIAGRAMS Horn Circuit (p. 5)

1993 Pontiac Trans Sport


For x

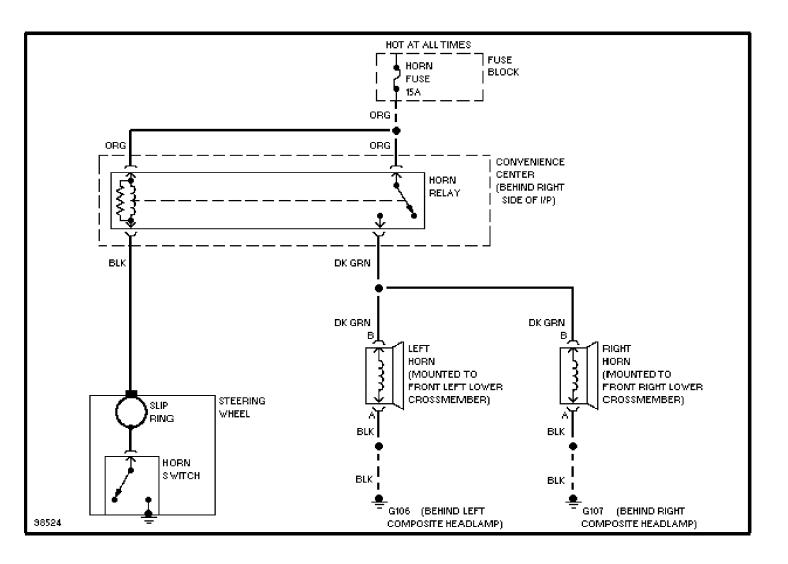

SYSTEM WIRING DIAGRAMS Door Lock Circuit (p. 6)

1993 Pontiac Trans Sport


For x

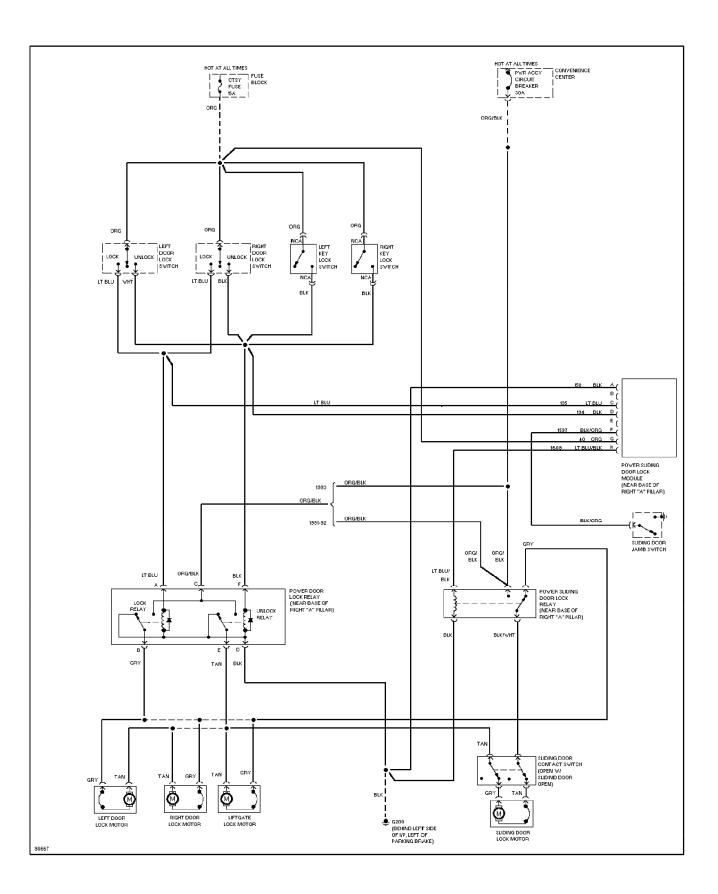

# SYSTEM WIRING DIAGRAMS

Keyless Entry Circuit (p. 7) 1993 Pontiac Trans Sport


For x

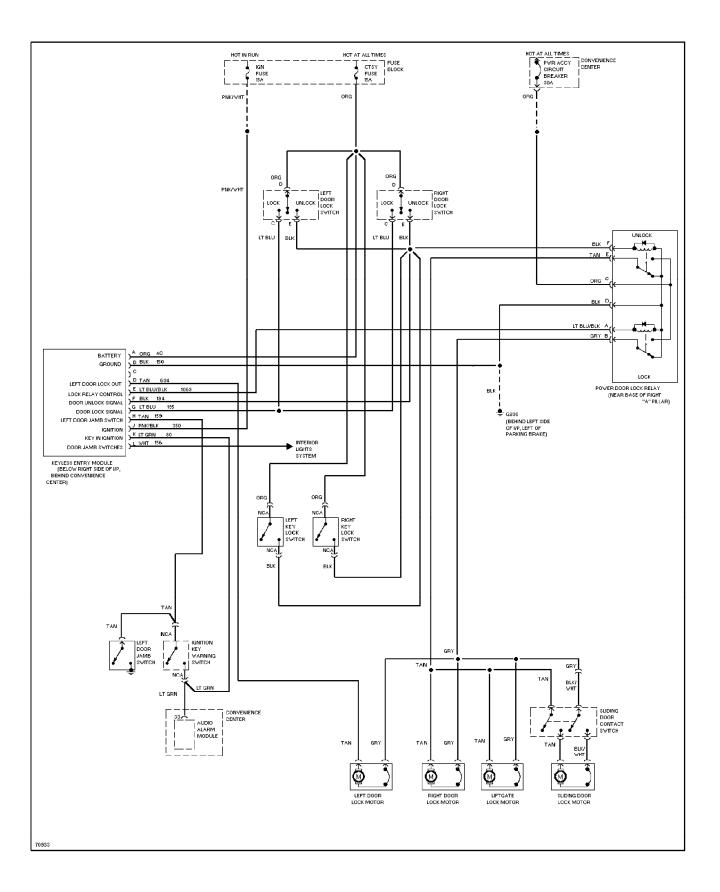

#### SYSTEM WIRING DIAGRAMS Power Mirror Circuit (p. 8)

1993 Pontiac Trans Sport


For x

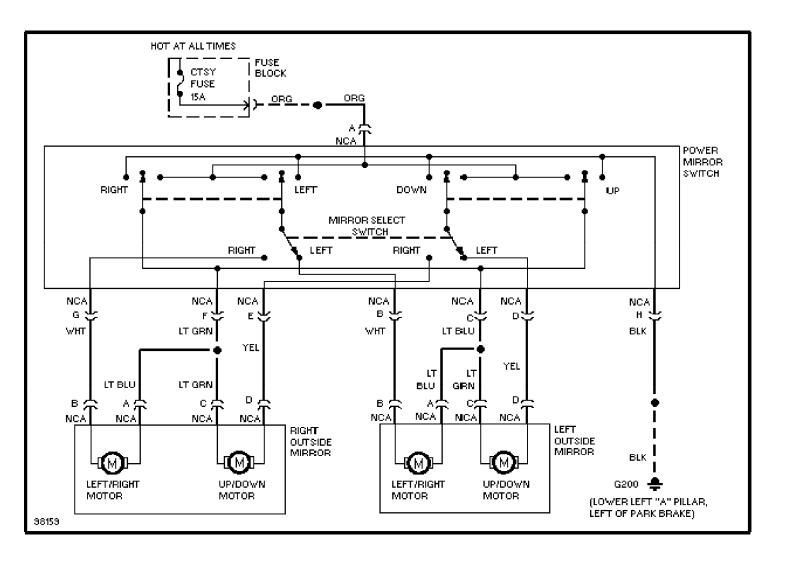

SYSTEM WIRING DIAGRAMS 6-Way Power Seat Circuit (p. 9)


1993 Pontiac Trans Sport

For x

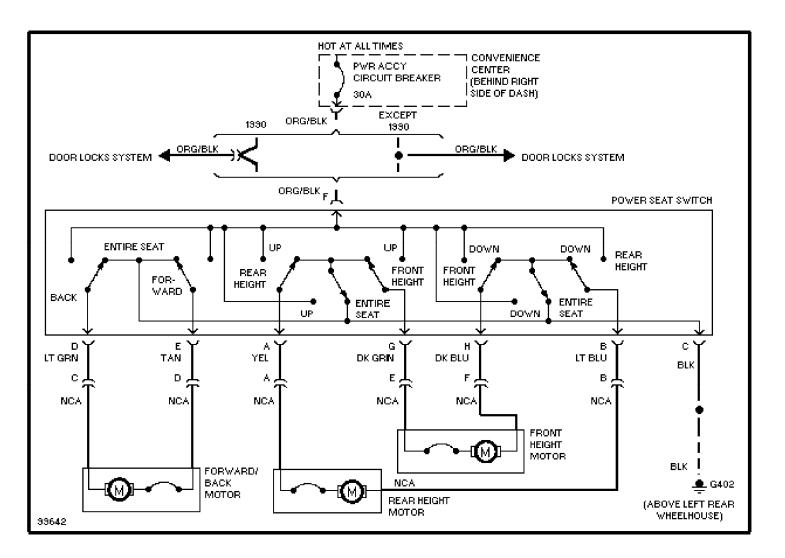

#### SYSTEM WIRING DIAGRAMS Power Window Circuit (p. 10)


1993 Pontiac Trans Sport For x Copyright © 1998 Mitchell Repair Information Company, LLC Friday, November 26, 2004 07:52AM

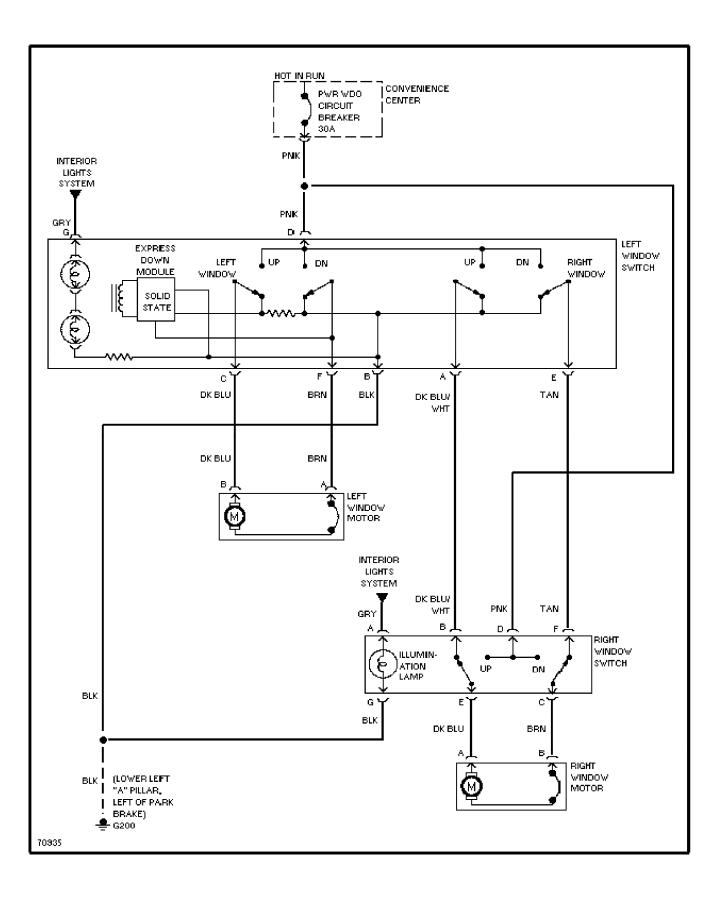

SYSTEM WIRING DIAGRAMS

Radio Circuits (p. 11) 1993 Pontiac Trans Sport


For x

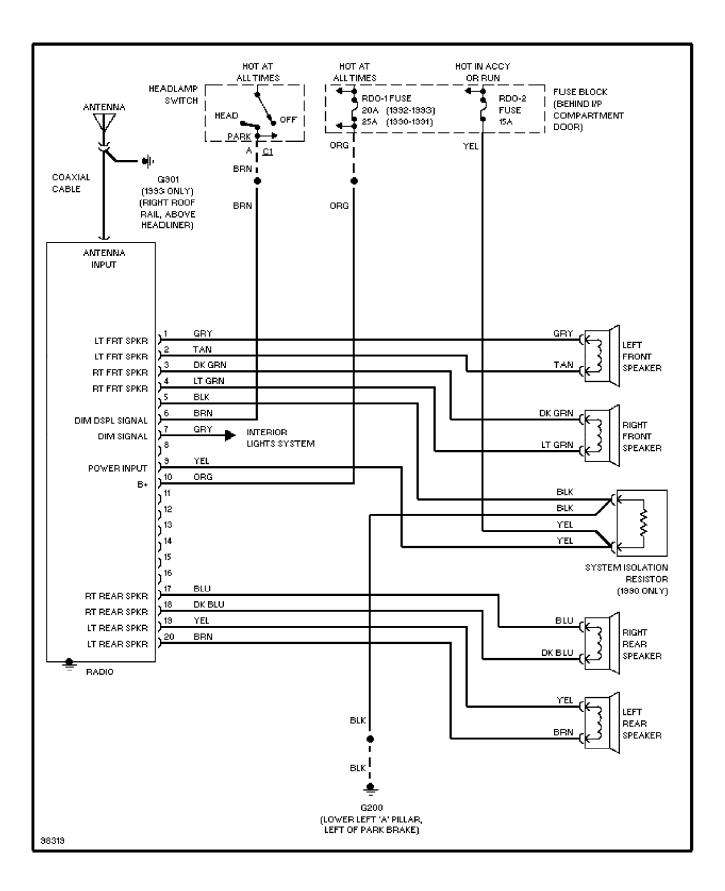

## SYSTEM WIRING DIAGRAMS

Charging Circuit (p. 12) 1993 Pontiac Trans Sport


For x

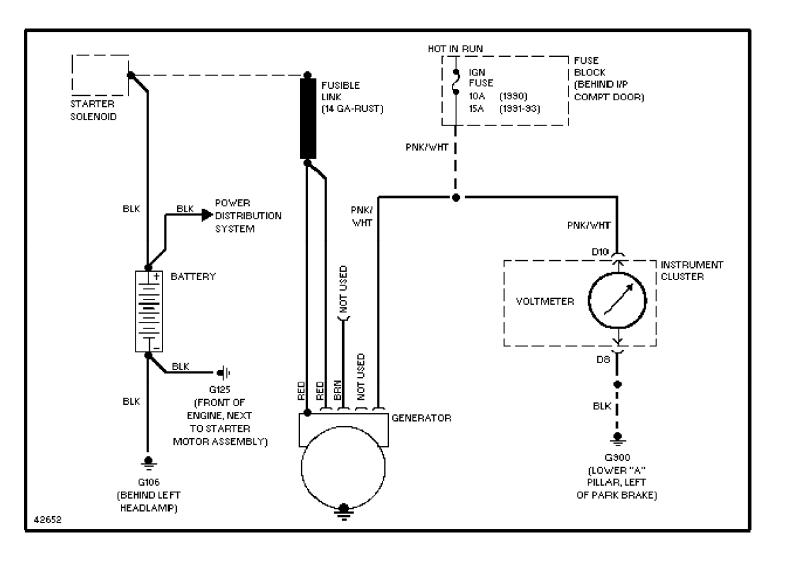

#### SYSTEM WIRING DIAGRAMS Starting Circuit (p. 13)


1993 Pontiac Trans Sport

For x

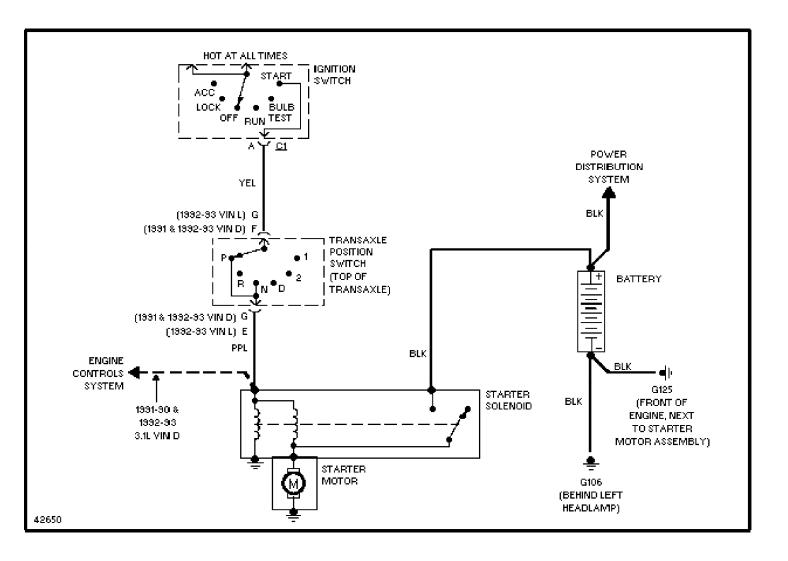


SYSTEM WIRING DIAGRAMS Transmission Circuit, 4T60-E (p. 14) 1993 Pontiac Trans Sport

For x

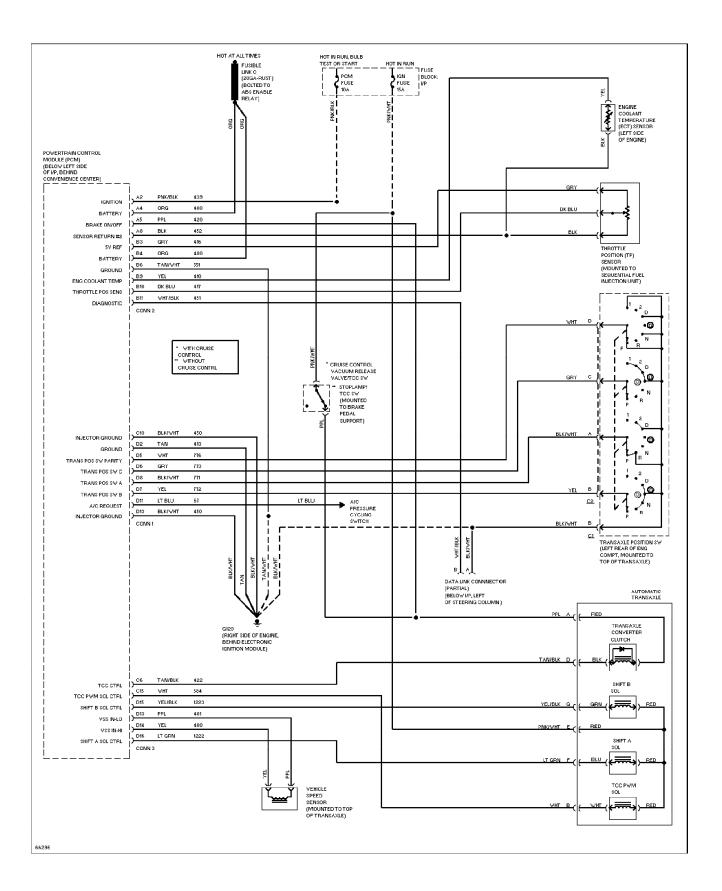


SYSTEM WIRING DIAGRAMS Interval Wiper/Washer Circuit (p. 15) 1993 Pontiac Trans Sport

For x

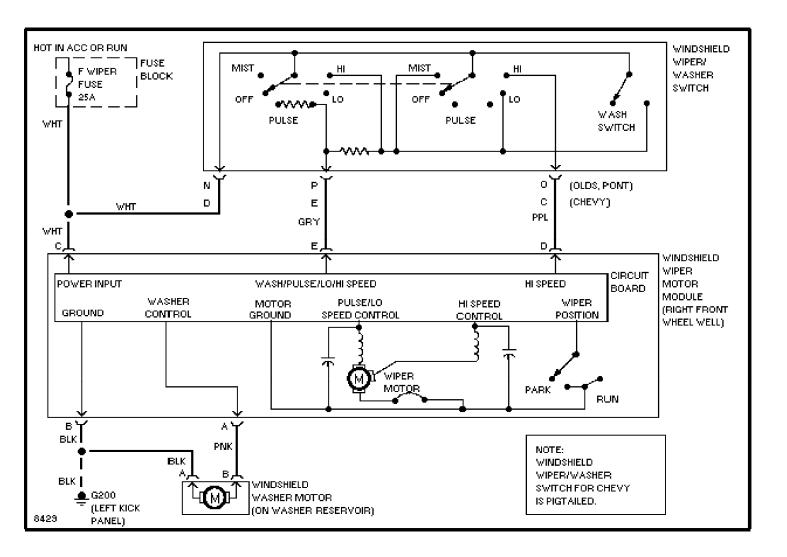


SYSTEM WIRING DIAGRAMS Rear Wiper/Washer Circuit (p. 16) 1993 Pontiac Trans Sport

For x

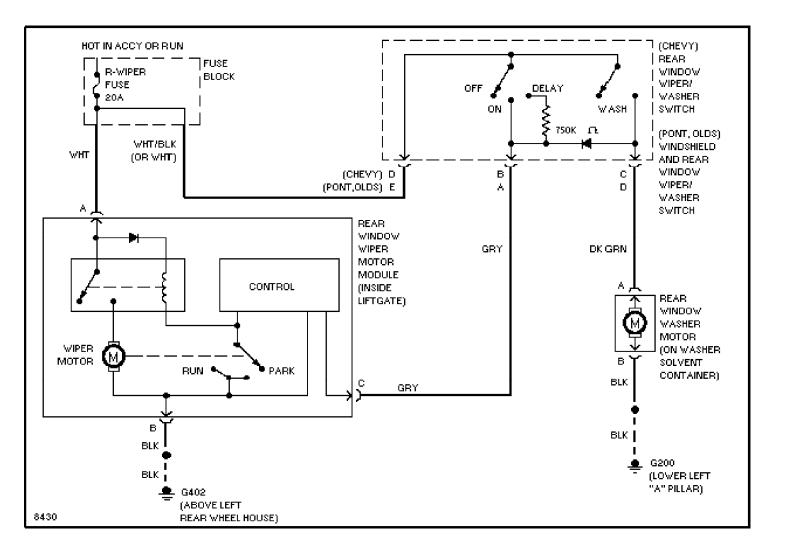




Friday, November 26, 2004 07:52AM

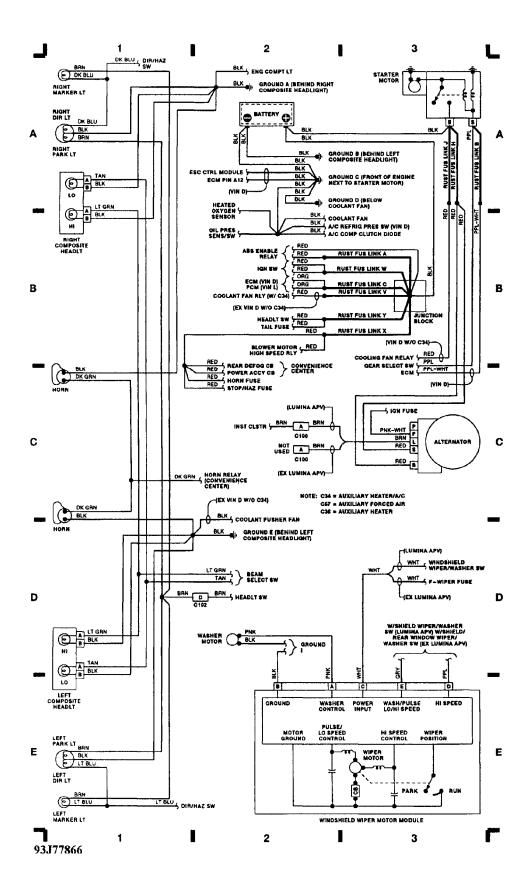


WIRING DIAGRAMS Fig. 2: Electronic Control Module (3.1L V6 VIN D) (Grids 4-7) (p. 2) 1993 Pontiac Trans Sport

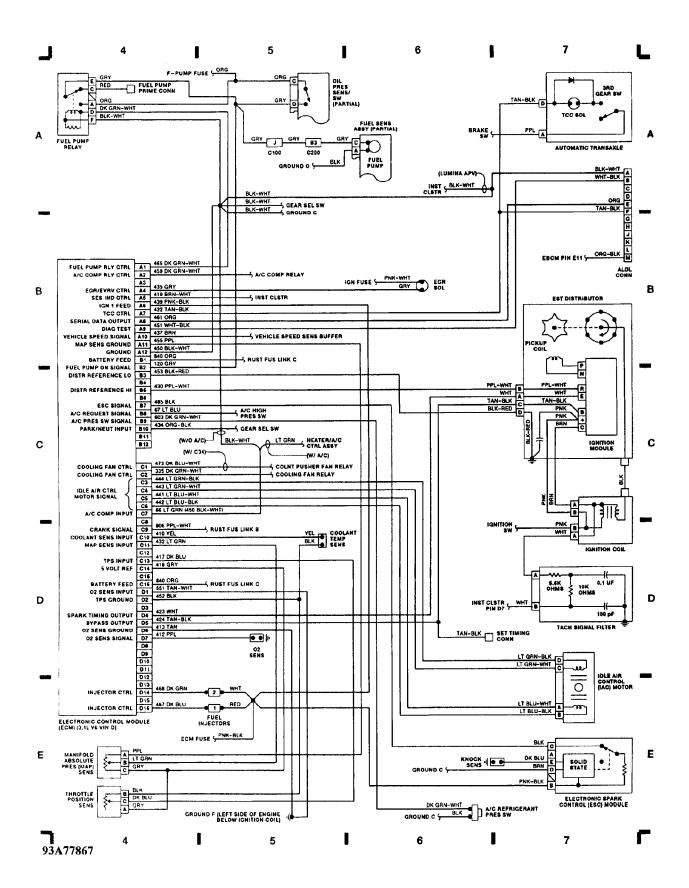

### WIRING DIAGRAMS Fig. 3: Powertrain Control Module (3.8L VIN) (Grids 8-11)

) (p. 3)

1993 Pontiac Trans Sport

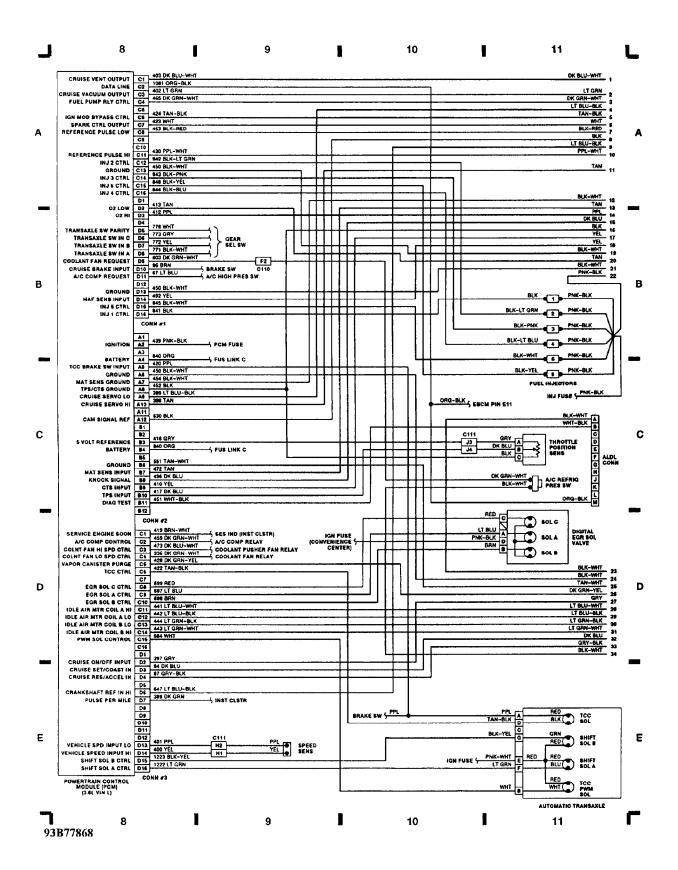

WIRING DIAGRAMS Fig. 4: Cruise Control Servo, Sw, Fuel Pump Relay (Grids 12-15) (p. 4) 1993 Pontiac Trans Sport

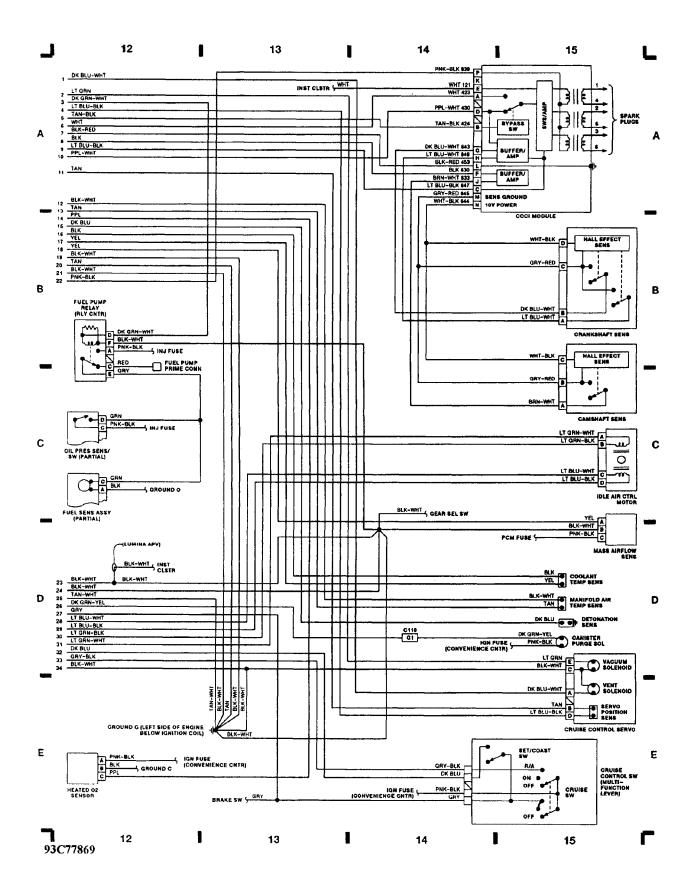


Fig. 5: Fuse Block, VIN L, VIN D (Grids 16-19) (p. 5) 1993 Pontiac Trans Sport For x Copyright © 1998 Mitchell Repair Information Company, LLC Friday, November 26, 2004 07:52AM 16 L 17 I 18 1 19 (SILOUTTE)-NOTE: C34 = AUXILIARY HEATER/A/C C67 = AUXILIARY FORCED AIR C34 = AUXILIARY HEATER OVERHEAD CONSOLE ( ORG REAR DONE LT ( ORG UP COMPT LT ( ORG RIGHT DOOR LOCK SW ( ORG CTSY А ENGINE COMPT LT A RED HORN RELAY -S FUS LINK X ELC COMP ASSY CORG ELC INFLATION TIMER RLY CORG RLY CORG RLY CORG BRAKE SW - GROUND A ORG TOP/HAZ BRAKE SW CORG H. -IVIN DI FUEL PUMP RLY CORG RADIO CORG AUX POWER CONN CORG TRAILER CONN CORG CIG LTR CONS F. PLIN RED 11 ADO1/AUX ORG 204 TAIL ÓR RED 164 HEADLT SW 5 -S FUS LINK Y TURN 8/U DIR/HAZ SW OK BLU DI BLU ELC HEIGHT SENS ( PNK-BLK ABS LAMP DRIVER MOD ( PNK-BLK INST ( PNK-BLK CLSTN в SEAR SEL SW В GAUGES PNK PNK-BU S IGN SW 7.64 -OVIN D1 ECM-PCM (PNK-BLK MASS AIRFLOW SENS () IN-LINE UNDERHOOD -WIN LI PCM PNK-BU FUEL PUMP RELAY CONTRACTOR IN.) PNK . IGN SW PNK-BLK 204 A APV) WINDSHIELD WIPER/WASHER SW 5 WHT ÷ 100-2 YE RADIO TEMP/COMPASS DISPLAY MOD REAR WIPER MOTOR MOD REAR WIPER/WASHER SW WHI WHT BRN WINDSHIELD/REAR WINDOW 204 WIN DV ᢆ᠊ᡛ С С WINDSHIELD WIPER MOTOR MOD CRUISE CTRL SW PNK-WHT KEYLESS ENTRY MOD PNK-WHT BRAKE SW PNK-WHT BRAKE SW PNK-WHT BRAKE SW PNK-WHT TEMP DOOR ACTUATOR REAR WOO DEFOR BELAY REAR WOO DEFOR BELAY AUTOMATC TRANSAKE AUTOMATC TRANSAKE PNK-WHT AUTOMATC TRANSAKE PNK-WHT STEXT EBCM PIN F11 CPNK-BLK -PNK-BLK ORG -S IGN SW PNK-WHT SINST CLETR EX LUMINA APV RBLW AUX BLOWER BRN-WH C ICM BY THE P HTR-AC ž BLOWER MOTOR -BRN L bi DK GRN , REMOTE CB' 7.64 (W/O C34) FUSE BLOCK (VIN D) D D OVERHEAD CONSOLE ( GRY INST CLETR ( GRY AUX BLOWER SW ( GRY ASHRAY LIGHT ( GRY HEADLI SW ( GRY HEATER OR HEATER/AC CITAL ASY WINDSHIELD REAR WDO WIPER/WASHER SW ( GRY REAM WIPER/WASHER SW ( GRY GRI AD0-2 惊 RD0-2 CTSY CTSY REAR WIPER/WASHER SW AUX BLOWER SW (REAR) R-WIPER ELC PCM ECM ELC POWER RIGHT GRY WDO SW LEFT GRY DOOR RIGHT GRY LOCK SW LEFT HORN F-WIPER STOP-HAZ GAUGE ÷ Ε Ε • E. -RDO1-AUX ABS (PS R BLW

WIRING DIAGRAMS

Г

FUSE BLOCK VIN D

19

1

18


FUSE BLOCK VIN L

93F77870


16

17

WIRING DIAGRAMS Fig. 6: Ignition Switch, Gear Sel Sw (Grids 20-23) (p. 6) 1993 Pontiac Trans Sport

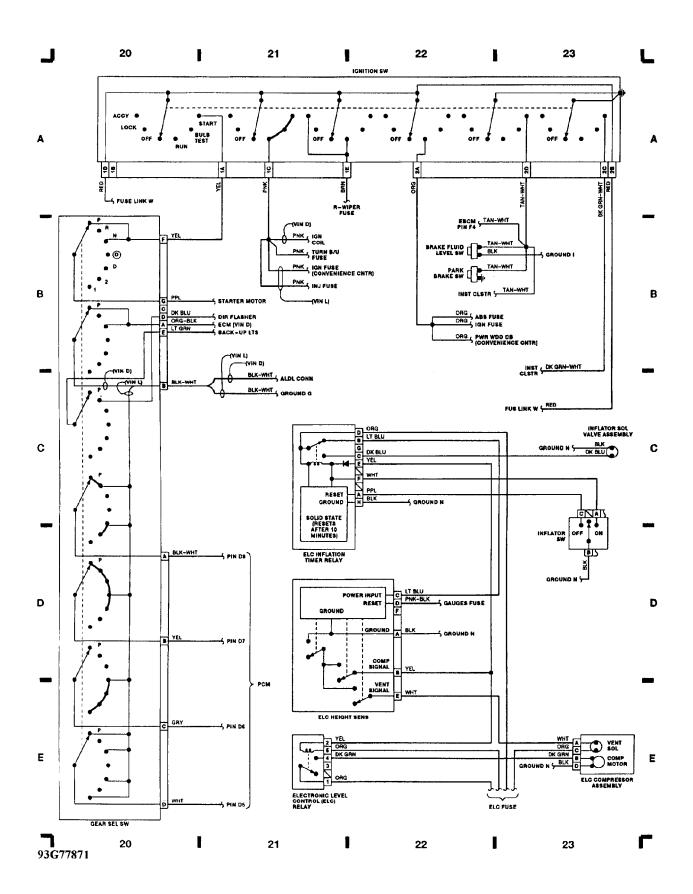


WIRING DIAGRAMS Fig. 7: Electronic Brake Control MOD (Grids 24-27) (p. 7) 1993 Pontiac Trans Sport

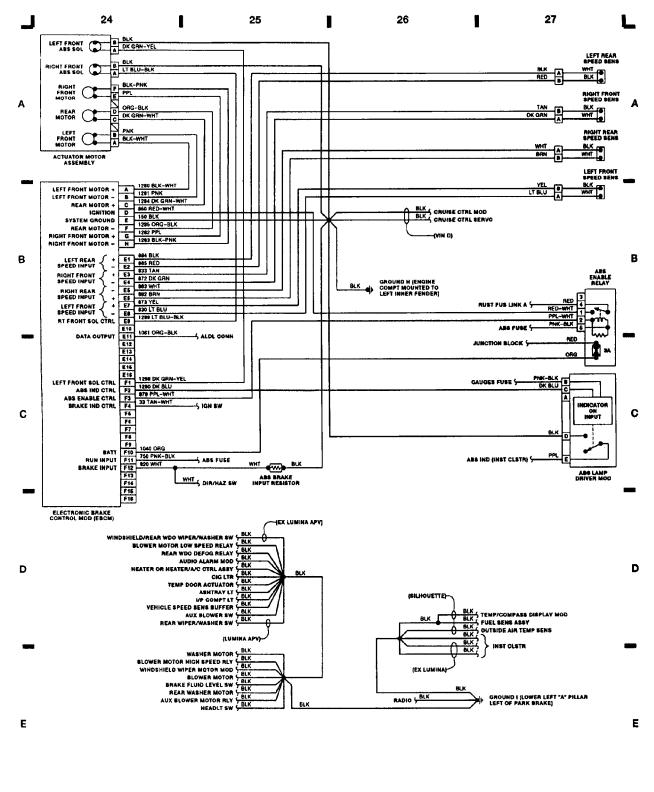


٦	24	1	25	8	26	1	27
93H77872							


WIRING DIAGRAMS Fig. 8: Heater/A/C Control Assembly (Grids 28-31) (p. 8) 1993 Pontiac Trans Sport

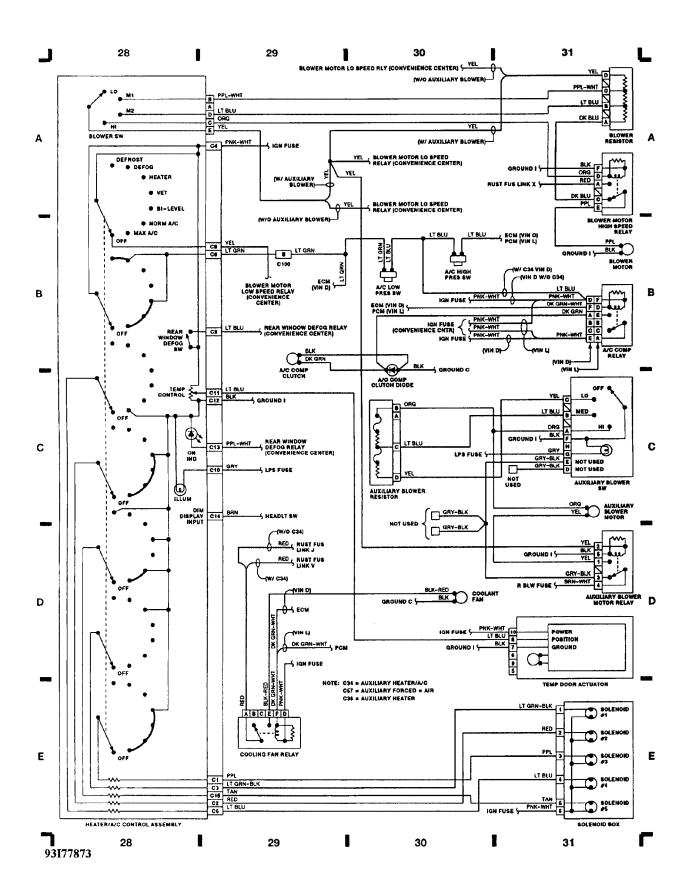


WIRING DIAGRAMS Fig. 9: Heater Control Assembly, Solenoid Box (Grids 32-35) (p. 9) 1993 Pontiac Trans Sport

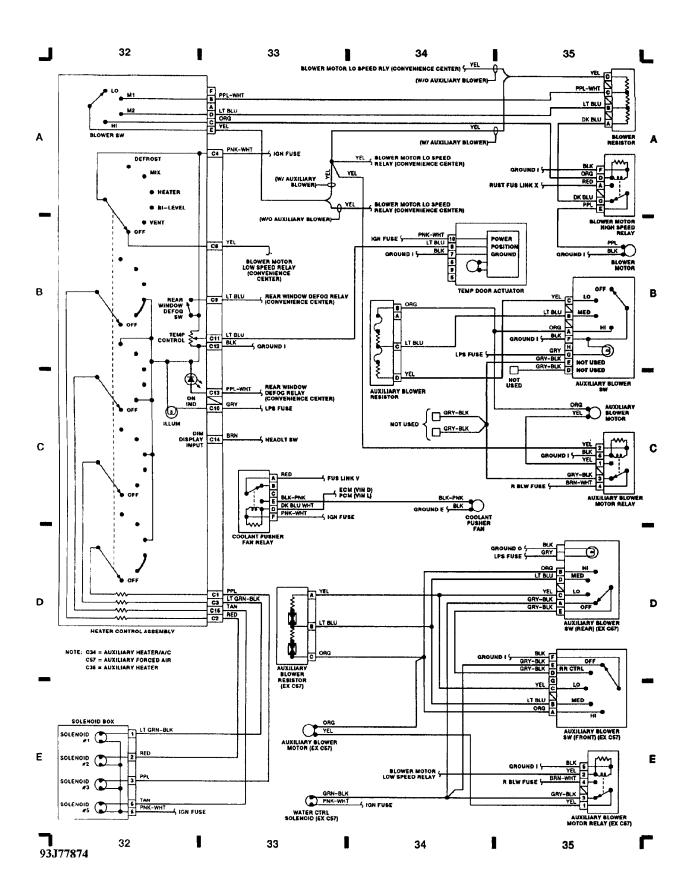


WIRING DIAGRAMS Fig. 10: Convenience Center, Dir/Haz Sw (Grids 36-39) (p. 10) 1993 Pontiac Trans Sport For x

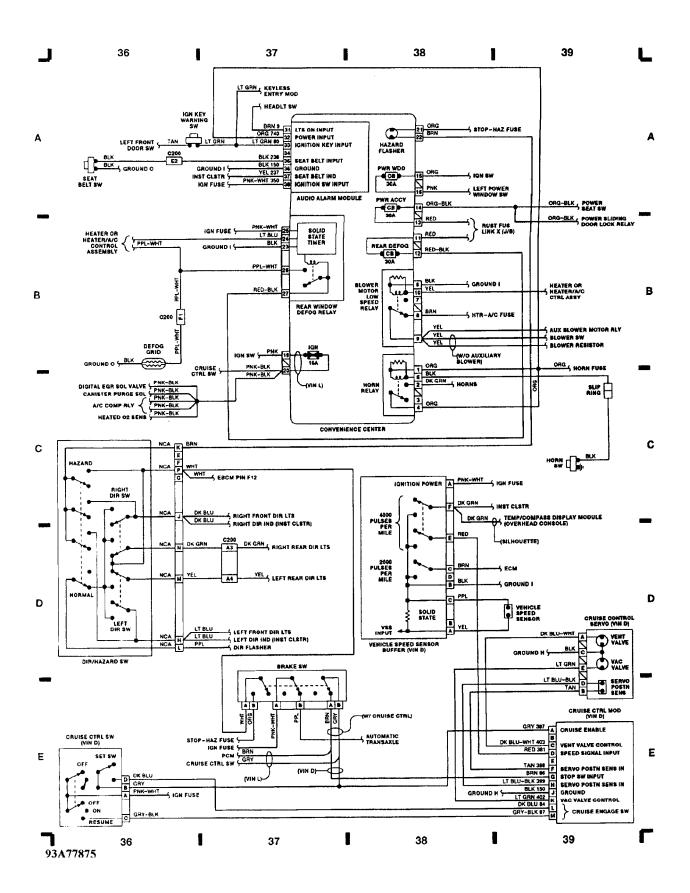


WIRING DIAGRAMS Fig. 11: Headlt Sw, W/Shield Wiper/Washer Sw (Grids 40-43) (p. 11) 1993 Pontiac Trans Sport

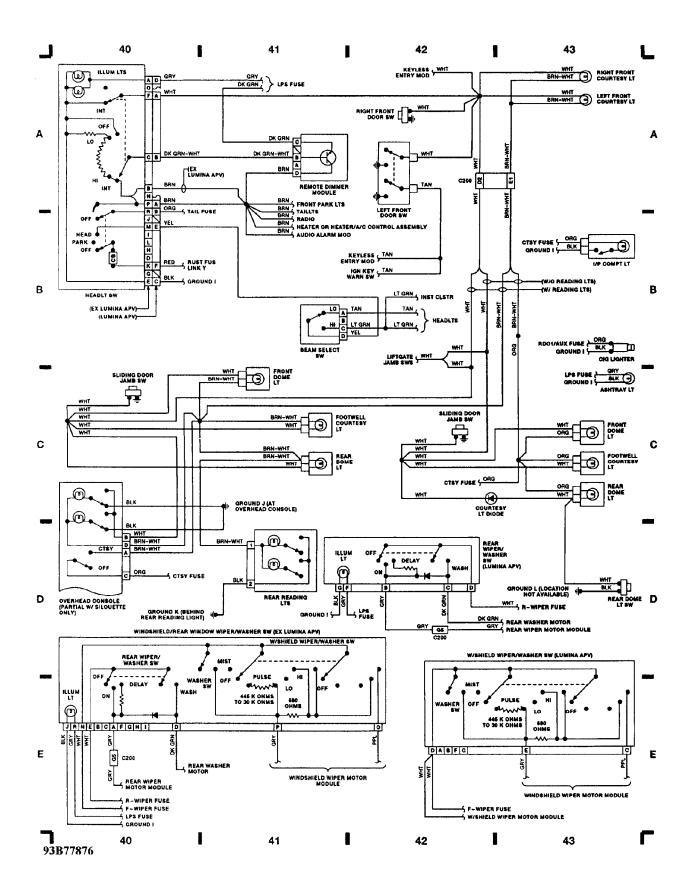

WIRING DIAGRAMS Fig. 12: Instrument Cluster, Mirror Switches (Grids 44-47) (p. 12) 1993 Pontiac Trans Sport

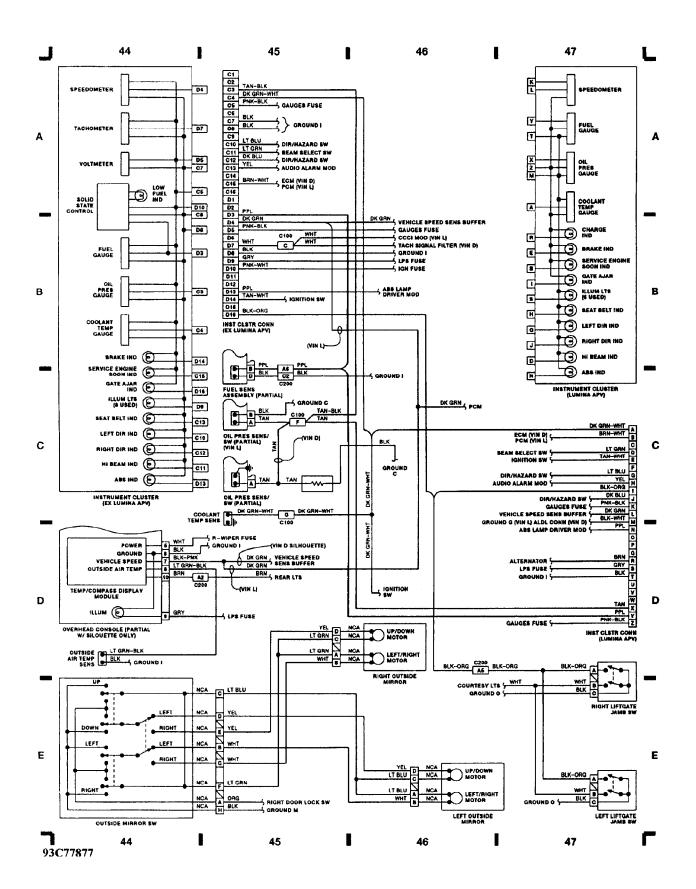

WIRING DIAGRAMS Fig. 13: Keyless Entry Mod, Power Doors (Grids 48-51) (p. 13) 1993 Pontiac Trans Sport

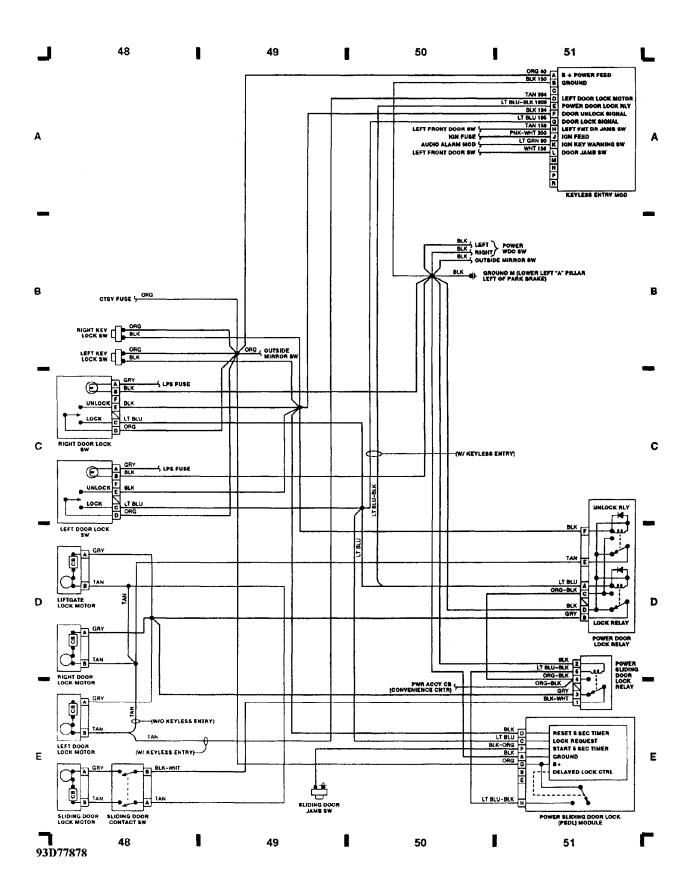

WIRING DIAGRAMS Fig. 14: Power Seat Sw, Window Sw, Taillights (Grids 52-55) (p. 14) 1993 Pontiac Trans Sport

