
SYSTEM WIRING DIAGRAMS


1999 Kia Sportage


1999 System Wiring Diagrams Kia - Sportage

AIR CONDITIONING



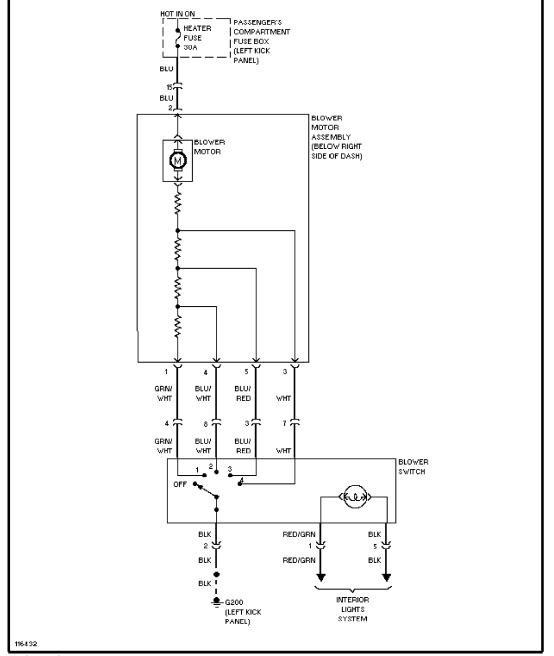


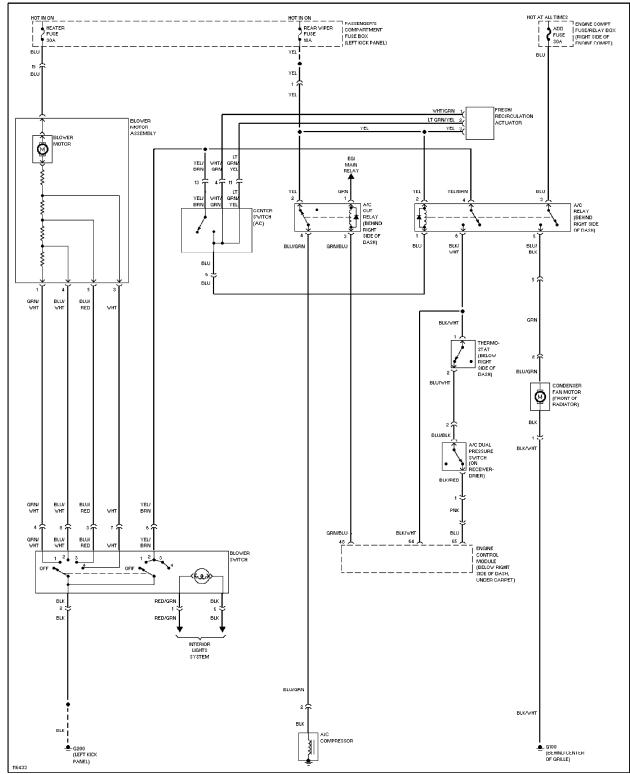





ANTI-LOCK BRAKES


ANTI-THEFT



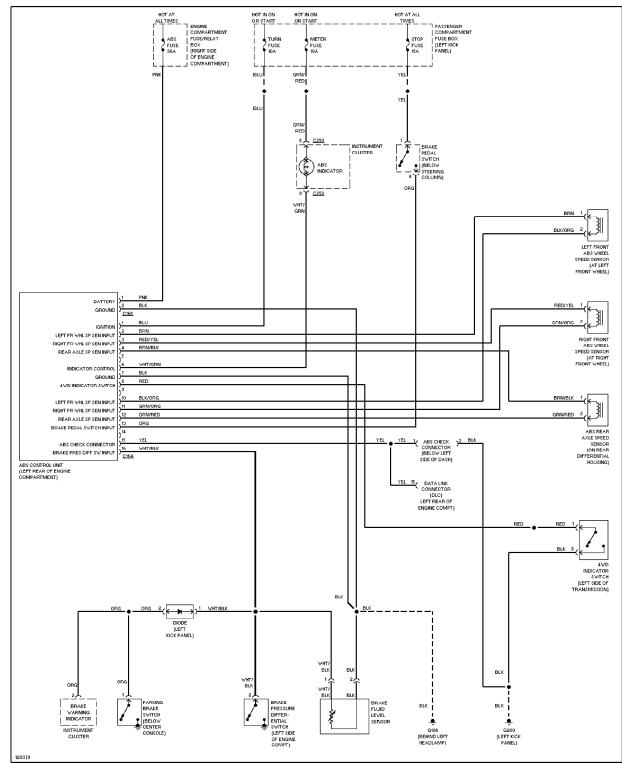


COMPUTER DATA LINES

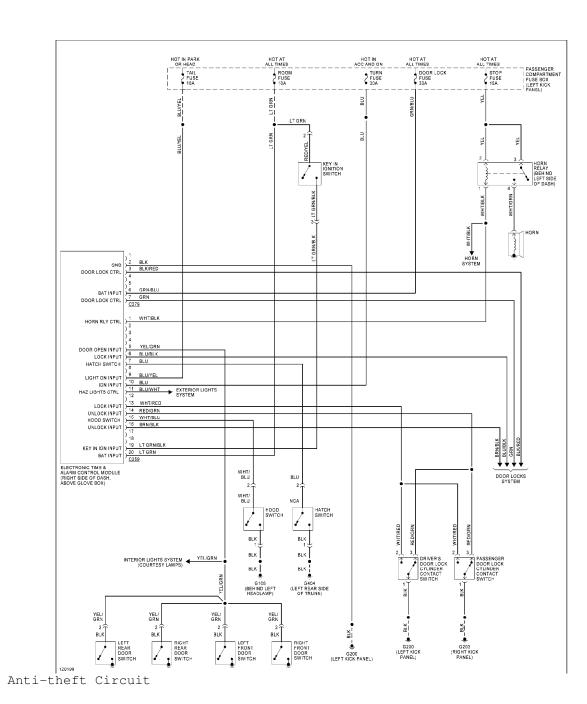

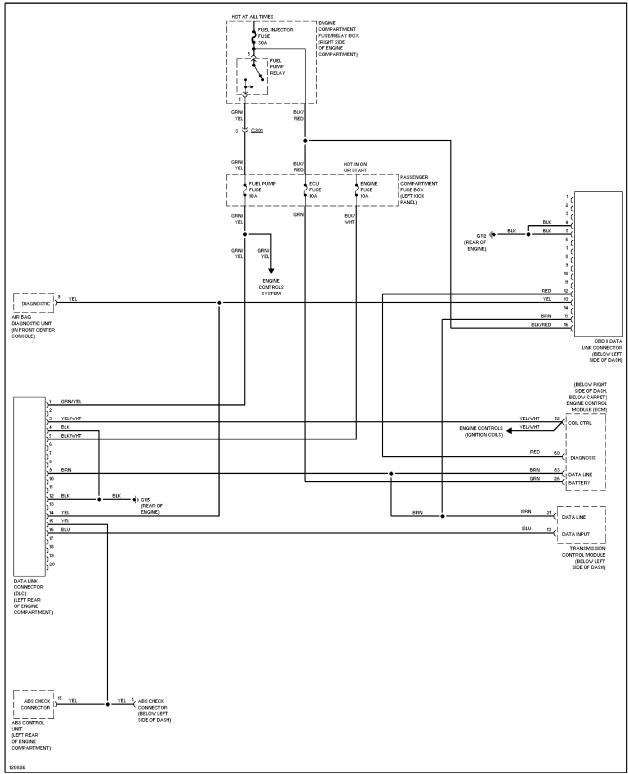


Computer Data Lines

COOLING FAN

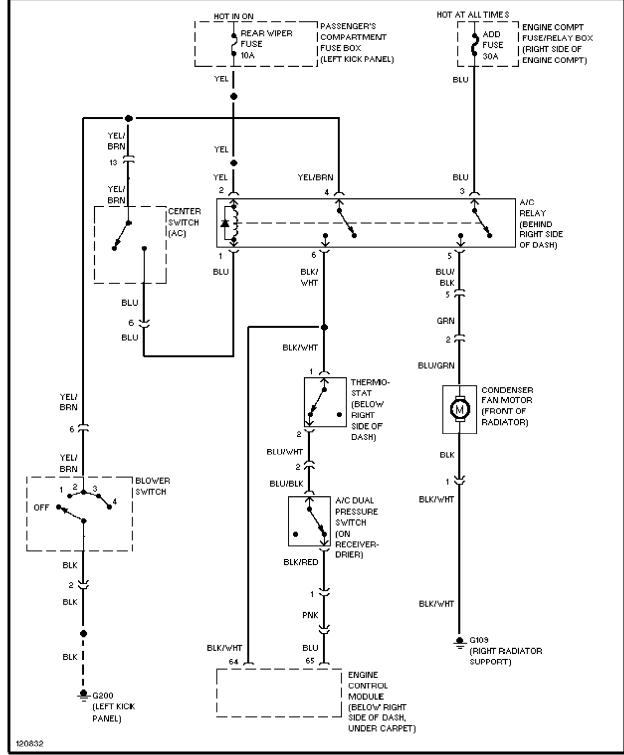


Condenser Cooling Fan Circuit

CRUISE CONTROL

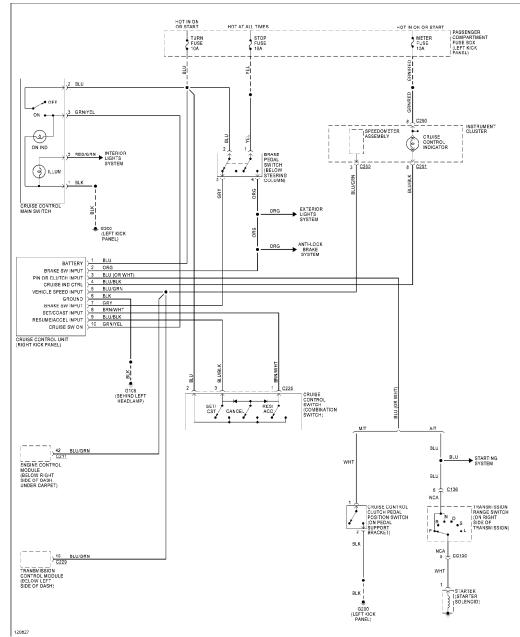

Cruise Control Circuit


DEFOGGERS

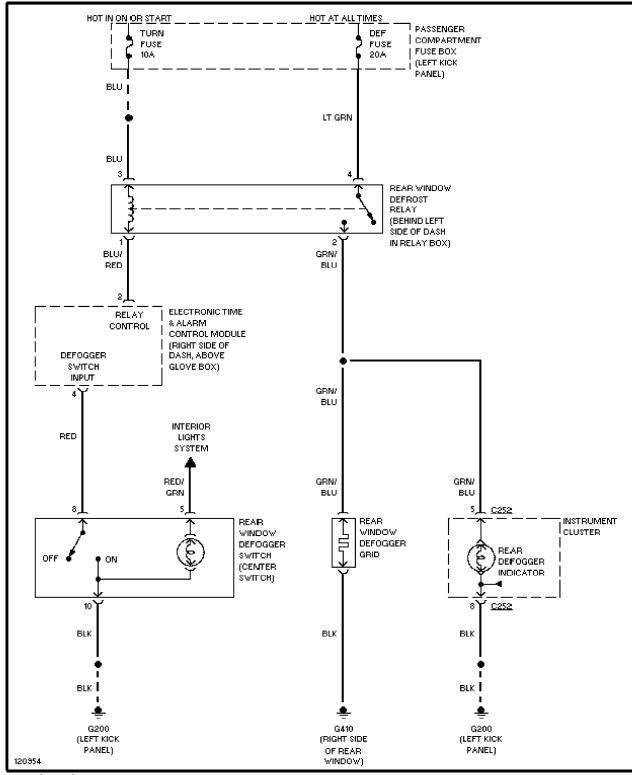


Defogger Circuit

ENGINE PERFORMANCE




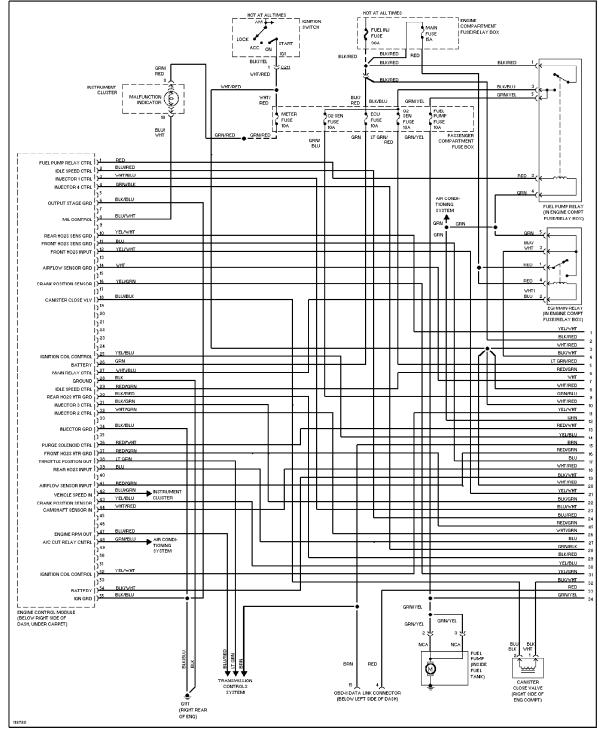

2.0L, Engine Performance Circuits (1 of 3)

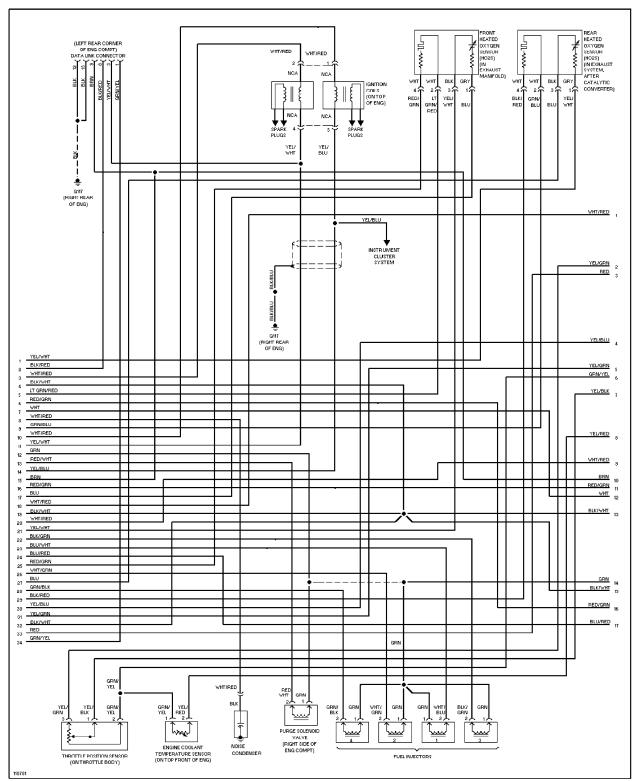


2.0L, Engine Performance Circuits (2 of 3)

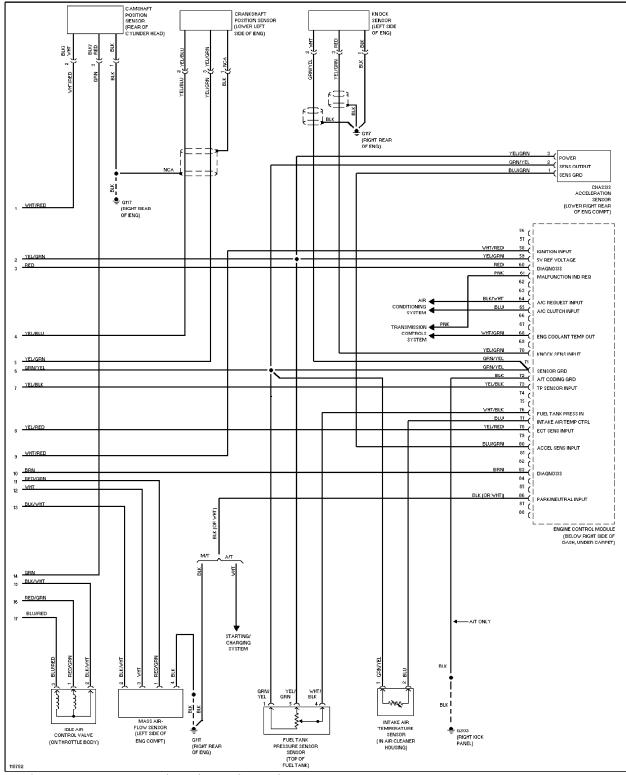

2.0L, Engine Performance Circuits (3 of 3)


EXTERIOR LIGHTS

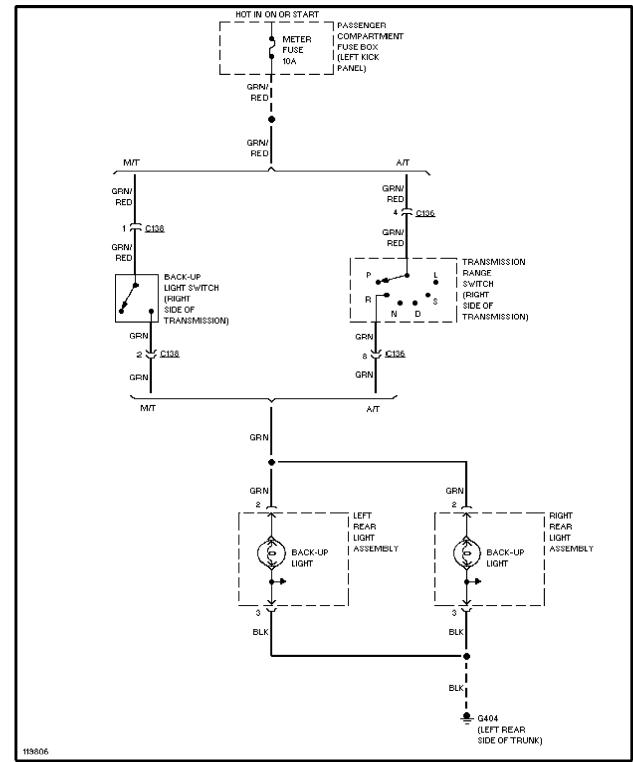


Back-up Lamps Circuit

GROUND DISTRIBUTION




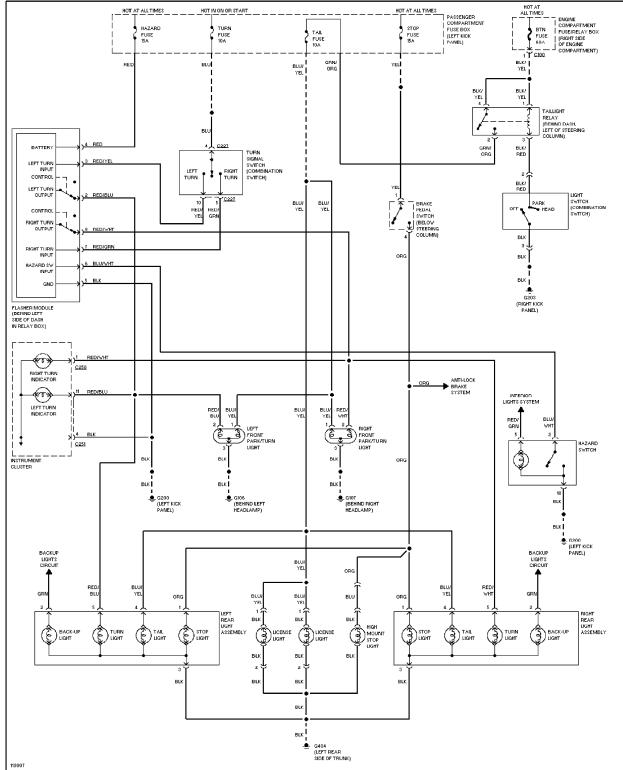


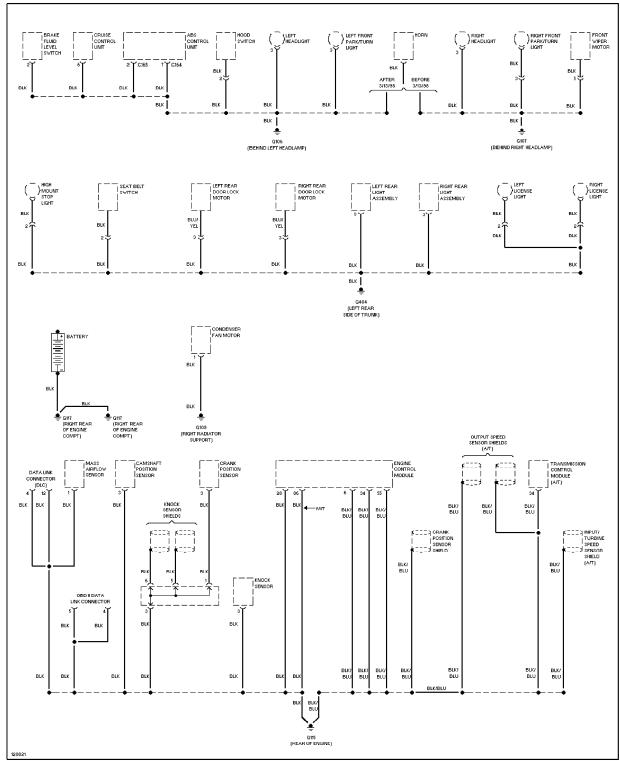


Ground Distribution Circuit (1 of 2)


HEADLIGHTS



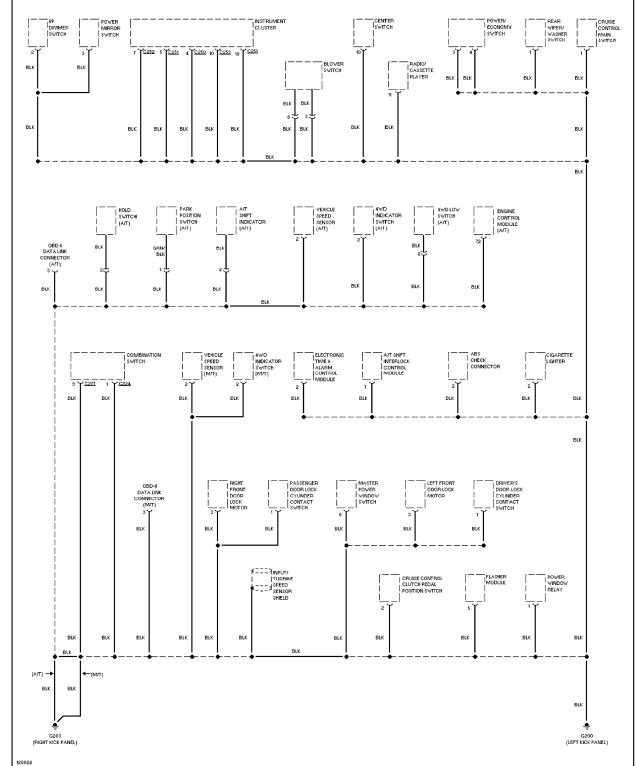

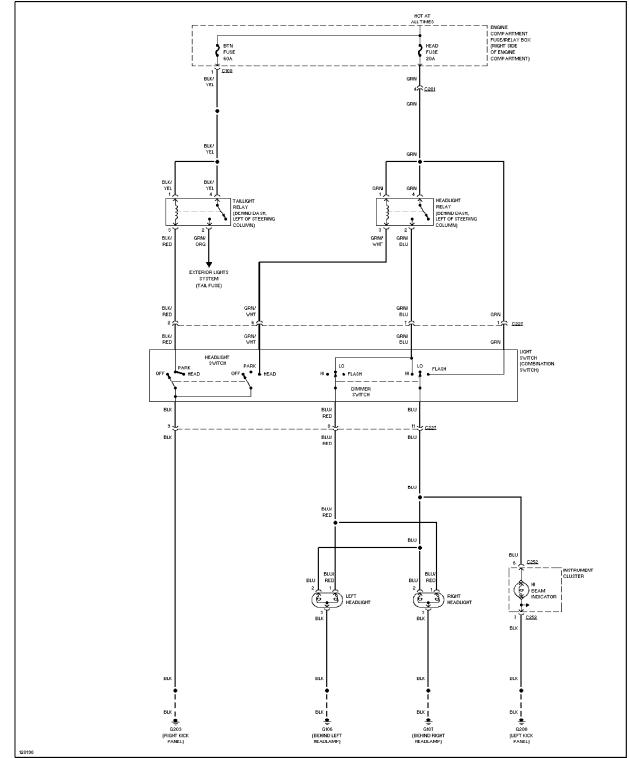


Headlight Circuit

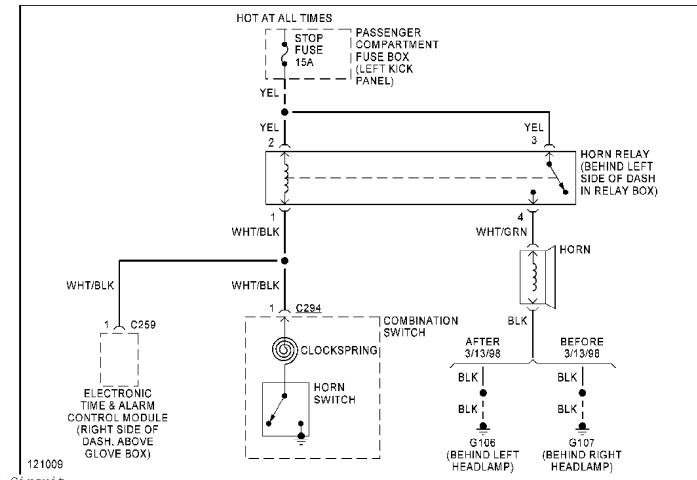


Horn Circuit

INSTRUMENT CLUSTER

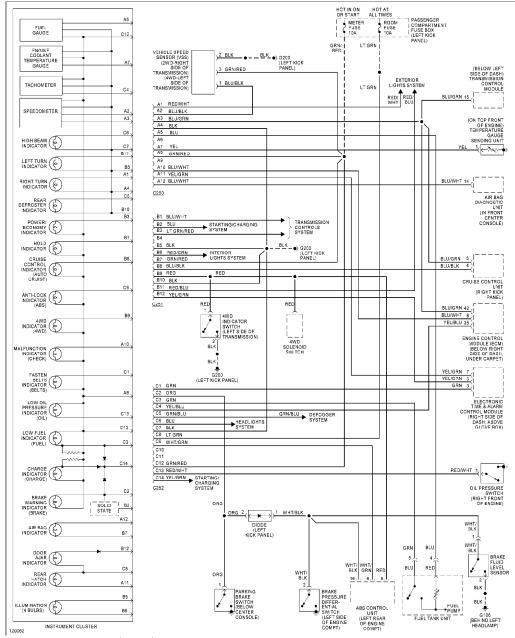


Instrument Cluster Circuit

INTERIOR LIGHTS

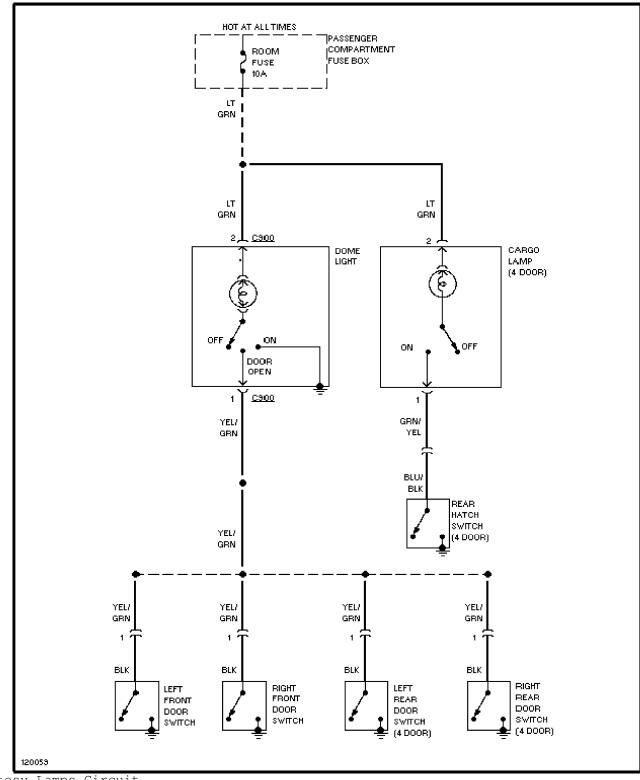

Courtesy Lamps Circuit

POWER DISTRIBUTION

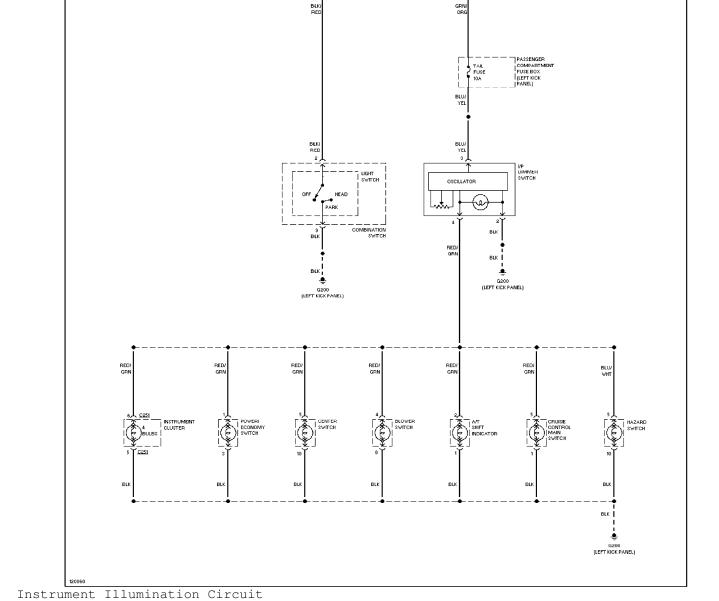

BLK/ YEL


BLK/ YEL

BTN FUSE 60A ENGINE COMPARTMENT FUSE/RELAY BOX (RIGHT SIDE OF ENGINE COMPARTMENT)


> BLK/ YEL

2


TAILLIGHT RELAY (BEHIND DASH, LEFT OF STEERING COLUMN)

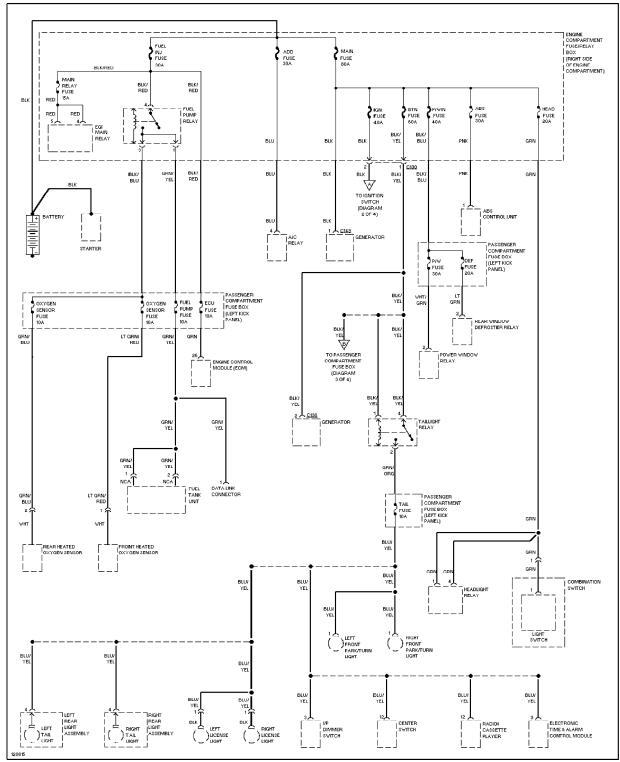


Power Distribution Circuit (1 of 4)

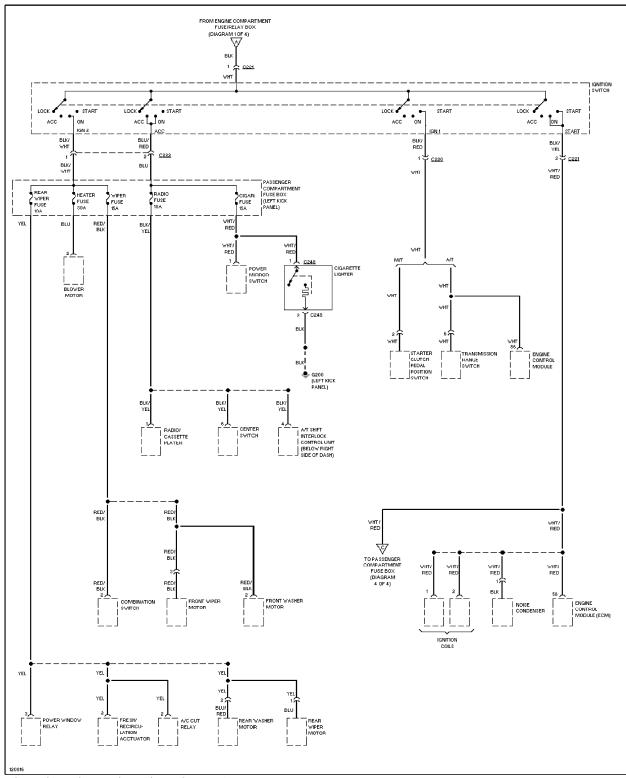

Power Distribution Circuit (2 of 4)

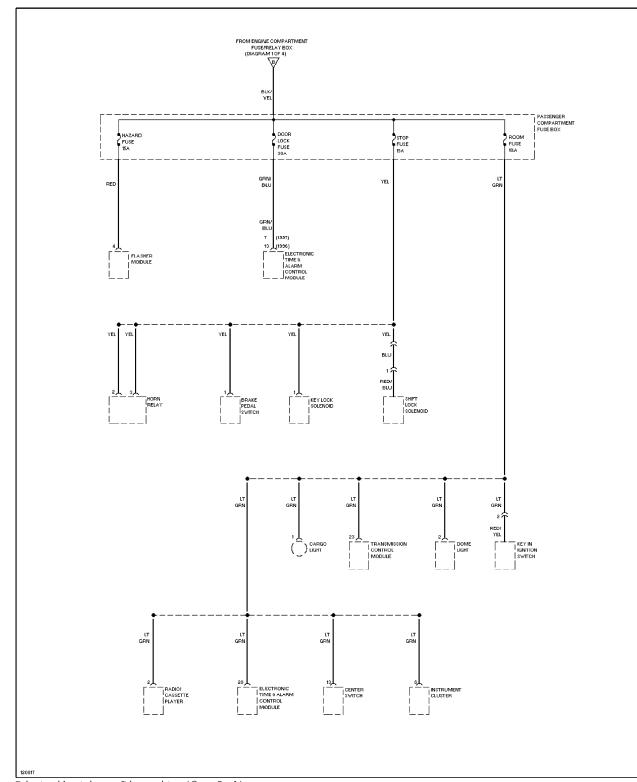


Power Distribution Circuit (3 of 4)

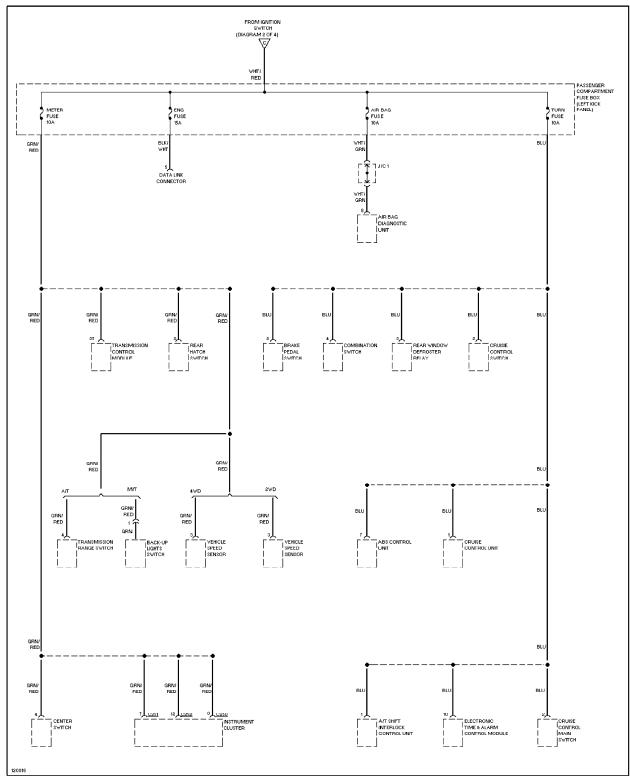


Power Distribution Circuit (4 of 4)

POWER DOOR LOCKS

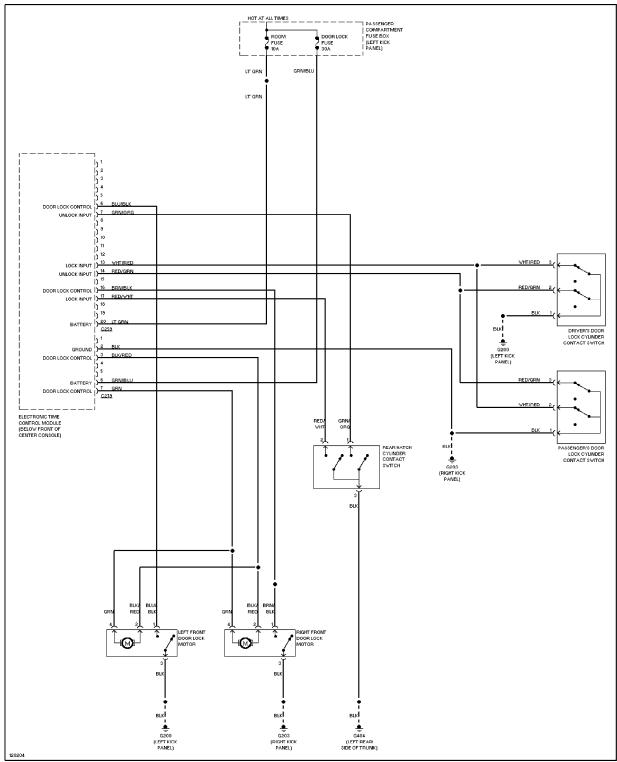


Power Door Lock Circuit, 2 Door

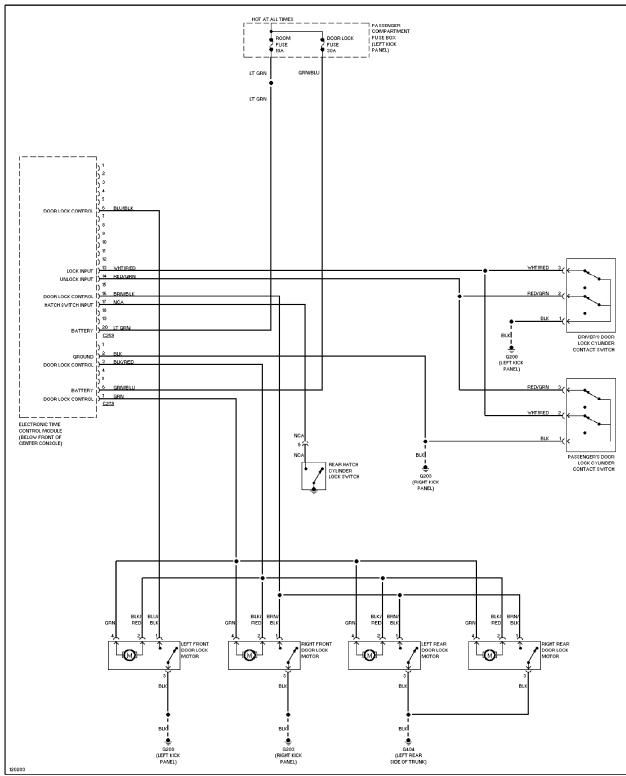


Power Door Lock Circuit, 4 Door


POWER MIRRORS

POWER WINDOWS

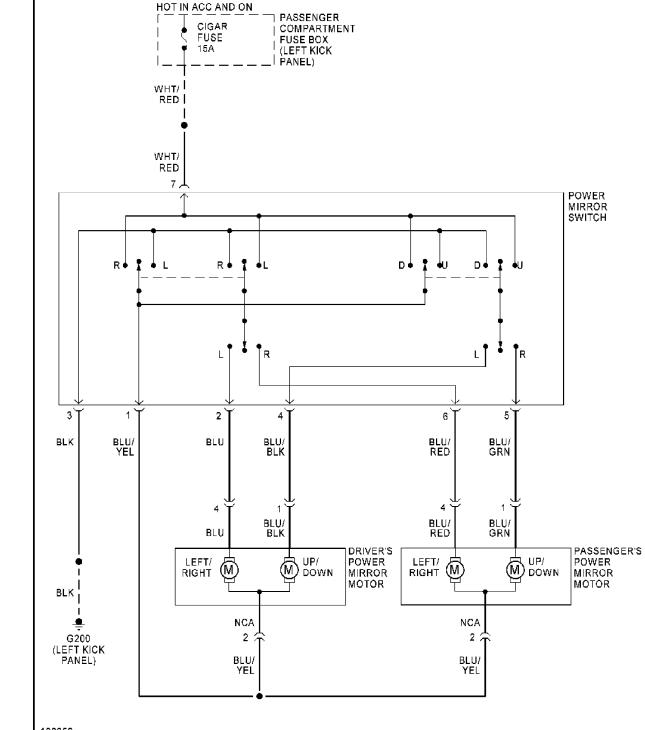



120956 Power Mirror Circuit

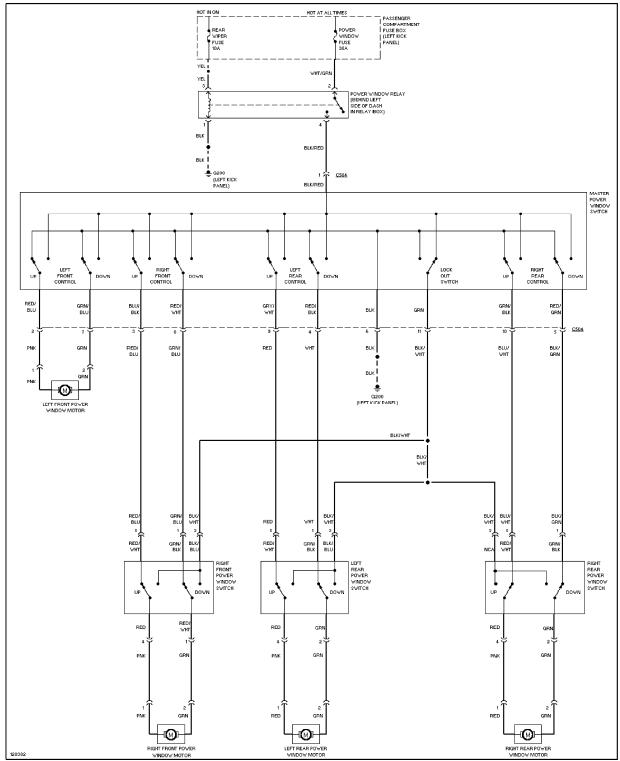

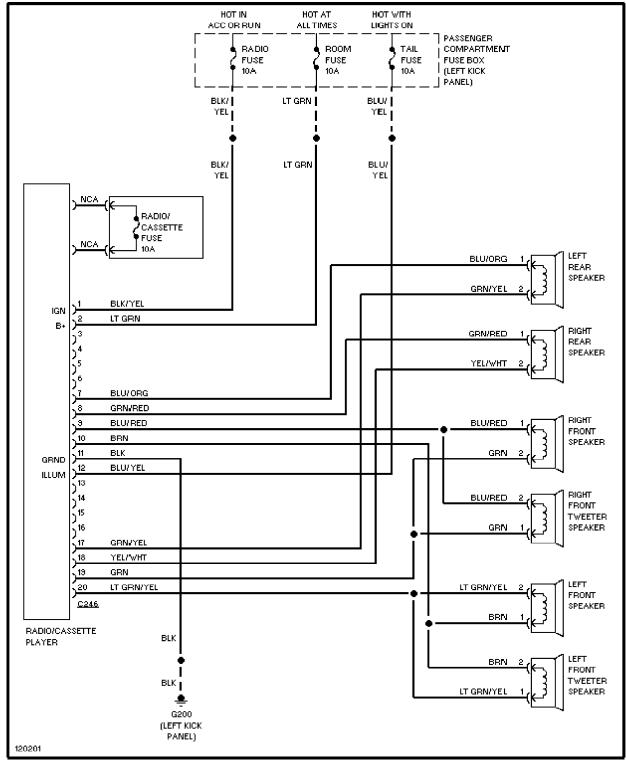



Stereo Radio/Tape Player Circuit

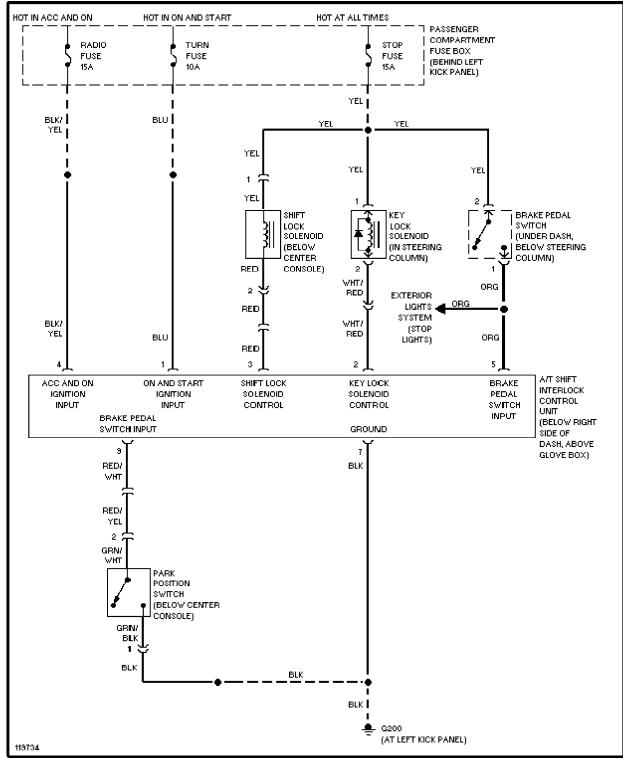



STARTING/CHARGING

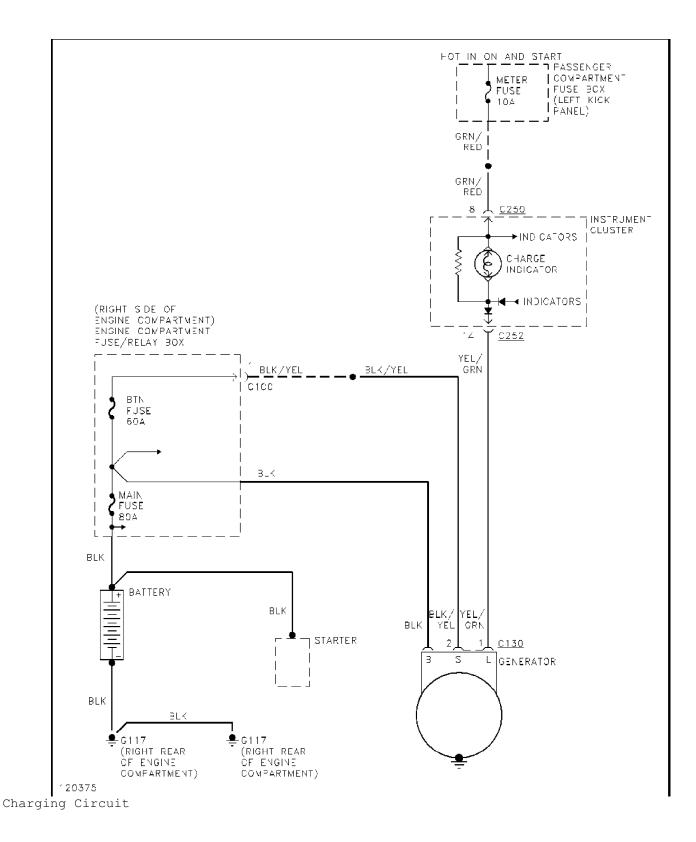


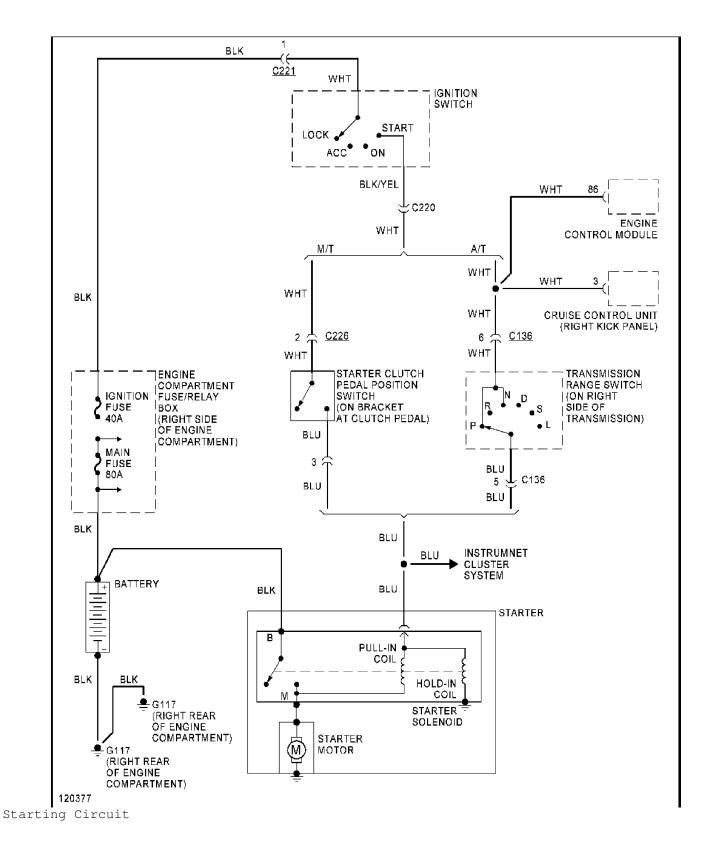


WARNING SYSTEMS

WIPER/WASHER



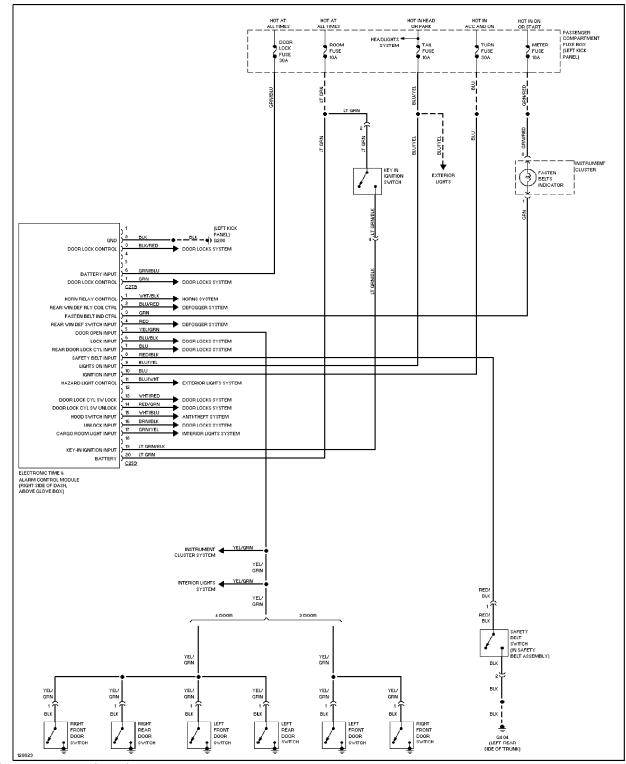

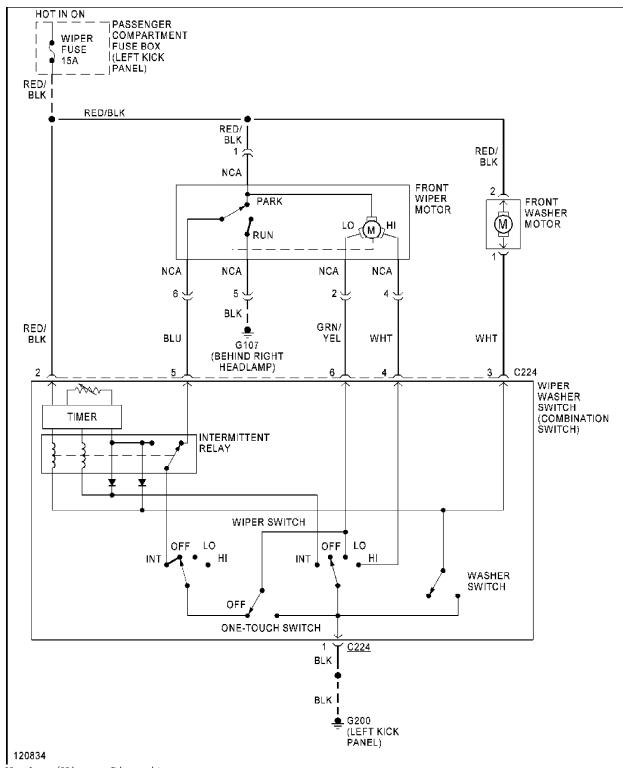

Front Washer/Wiper Circuit

